
Converting to 6/3L or 9/4.5L flush

Installation Instructions

The cistern TAS006 factory set at 4.5/3L can be adjusted to 6/3L or 9/4.5L as detailed below The cistern TAS 005 factory set at 6/3L can be adjusted to 9/4.5L as detailed below

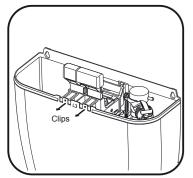

1. Turn off water supply. Pull both clips on front of cistern back to release Bridge mechanism.

3. - Conversion to 9/4.5L

and twisting


Pull out the lower wrap around

bucket by spreading the ends apart


Manufacturer's Recommendations

must be set by the installer.


matching pan for the most effective operation.

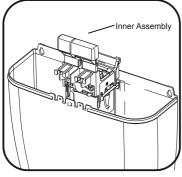


2. Remove inner outlet valve assembly from the cistern by pulling upwards.

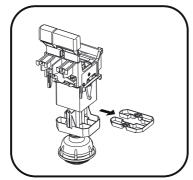


3. - Conversion to 6/3L Pull out small wrap around bucket in the middle by spreading the ends apart and twisting.

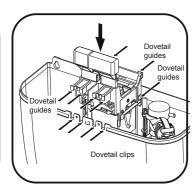


4. Slide inner assembly back into cistern ensuring the the d ovetail place. Turn on water supply and

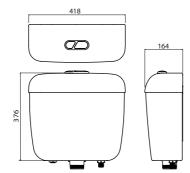


guides at the rear line up and the dovetail guides at the front clip into check water level.

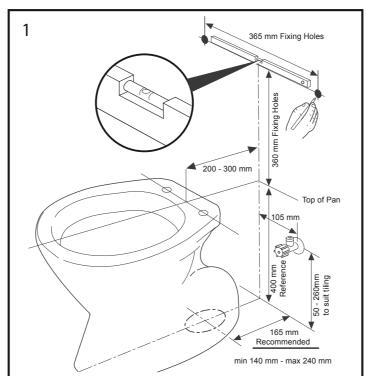


Check that the pan is installed within dimensional tolerances. Mark out the fixing holes for the cistern.

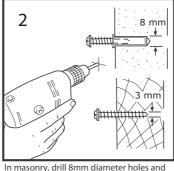


insert the plugs provided. In timber, drill 3mm diameter pilot holes.

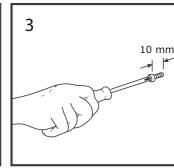


Leave the screws protruding by 10mm

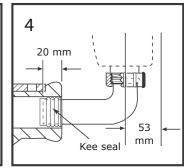

Cut the flush pipe to dimensions shown Lubricate the kee seal with soap and water and fit the pipe into the pan. Fit the coupling

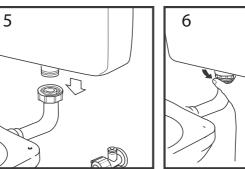


Lower the cistern onto the pipe and hook it

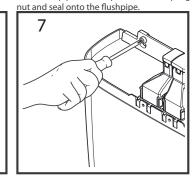

Nip up the mounting screws.


8

Flush the water supply line.

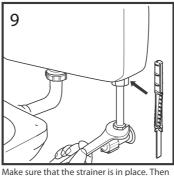


fit the water supply pipe using approved


14

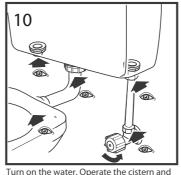


over the mounting screws.

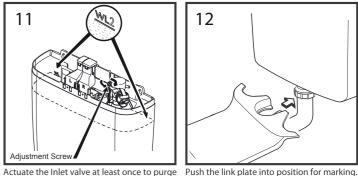


any trapped air in the valve. Adjust the water level to the WL2 mark.

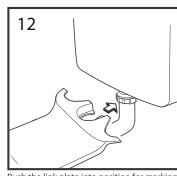


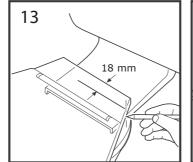


Position the seat and mark the link plate as

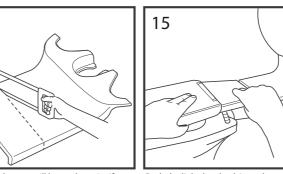

Fitting of the seat will be made easier if a Push the link plate back into place and seat sharp knife is used to put a bevel on the cut bolts into pan holes.

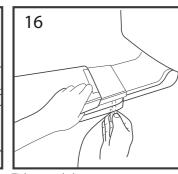

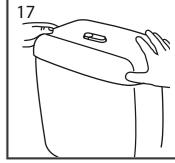


Carefully refit the lid.


Never use abrasive or harsh chemical cleaners. A wipe over with a warm soapy water is all that is required to maintain the high quality surface finish.

For 4.5 amd 6 litre flush, the level must be set at the line marked WL2.

Important: It is critical that the 4.5/3 and 6/3 litre cisterns be installed with a

Leave the protective cover in place on the seat until the premises are occupied. All cisterns are factory tested but because water pressures vary, the water level

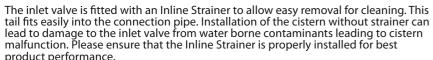

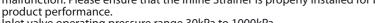



Inlet valve operating pressure range 30kPa to 1000kPa

The inlet valve can be changed from right to left hand.



