

## PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

\* All pipework must be thoroughly flushed prior to installation.

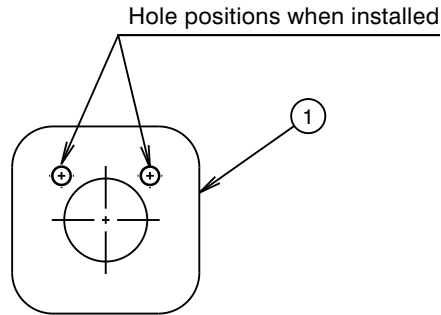


Fig. 3

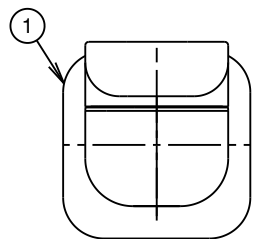


Fig. 2

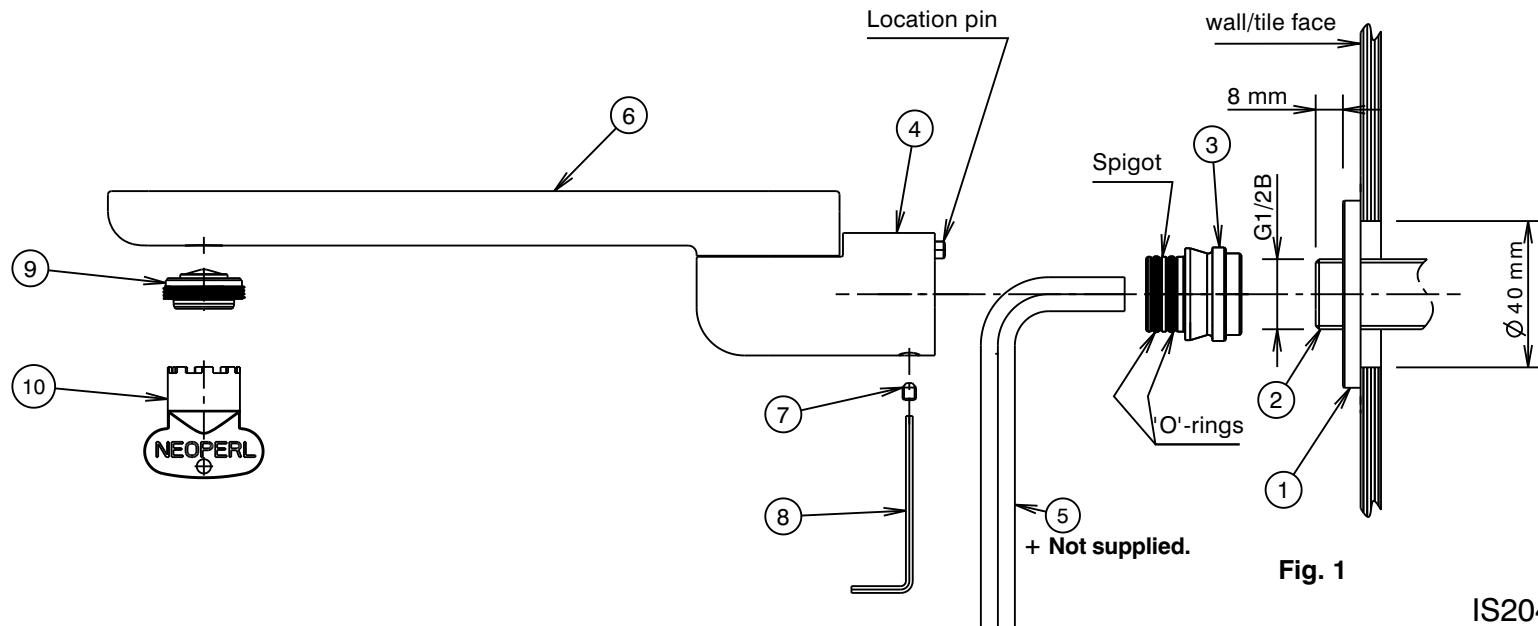


Fig. 1

### Installation

- 1) Fit the cover plate (1) over threaded nipple (2) and check that the thread is the correct length, as shown (Fig.1). Cut to length if required ensuring end face is square. Apply thread tape to the thread.  
**Important:** To ensure correct installation, length of exposed thread must not exceed 8mm.
- 2) Locate the cover plate (1) on the threaded nipple (2) and align the top edge of the cover plate horizontally with the holes as shown (Fig.3). Screw the adaptor (3) onto the threaded nipple (2) using a 10mm allen key (5) until the cover plate (1) is held securely against the wall/tile face. **DO NOT OVERTIGHTEN.** Apply suitable lubricant to 'O'Rings on adaptor (3).  
Apply suitable lubricant to 'O'Rings on adaptor (3).
- 3) Carefully slide the wall elbow (4) onto the spigot of adaptor (3) and engage the location pin into the mating hole in the cover plate (1), then carefully push it firmly against the cover plate while tightening grub screws (7) using the 2mm allen key (8) provided.

### Replacing Aerator Insert

- 1) Carefully remove aerator (9) from outlet (6), using spanner(10) taking care not to damage the decorative finish.
- 2) Remove aerator insert (9) and check that inside of outlet is clean. Deposits of lime can be removed by washing in a vinegar solution.
- 3) Fit new aerator insert (9) then screw it into outlet (6) and tighten securely by using spanner(10).

### **IMPORTANT**

#### **Pressure & Temperature Requirements.**

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa  
New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.