

PLUMBERS INSTALLATION INSTRUCTIONS

Important

- * Hand Shower (11) is fitted with flow regulator (10). This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products. Note: Warranty is void if flow regulator (10) and check valves (9) are not installed as shown.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- * Wall elbow (4) must be installed with threaded spigot vertically pointing downwards.

Installation

- 1) Check that threaded nipple (1) is the correct length as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (2) over the threaded nipple (1). Ensure the 'O' ring (3) is fitted in the groove behind the wall elbow (4), then screw the elbow (4) onto threaded nipple (1) & tighten until cover plate (2) is secured against the wall/tile face and the threaded spigot is vertically pointing downwards. DO NOT OVERTIGHTEN.
- 3) Check that rubber washer (5) is installed into the shorter nut (6) of shower hose (7) then screw onto the thread spigot of wall elbow (4) and tighten. Ensure the flow regulator (10), check valves (9) are fitted into handset (11) and the rubber washer (5) is fitted into the longer conical end (8) of shower hose (7), then screw conical (8) onto handshower (11) and tighten. Fit handshower (11) into holder in wall elbow (4).
Note: The Handshower spray can be adjusted by rotating the lever on handshower (11).

HANSHOWER - FIVE FUNCTIONS

CONCENTRATE SPRAY	(INNER HOLES)
GRANULAR SPRAY	(INTERMEDIATE HOLES)
FULL SPRAY	(OUTER HOLES)
FULL SPRAY+GRANULAR SPRAY	(INTERMEDIATE + OUTER HOLES)
FULL SPRAY+CONCENTRATE SPRAY	(INNER + OUTER HOLES)

IMPORTANT	
Pressure & Temperature Requirements.	
•	Hot and cold water inlet pressures should be equal.
•	Static inlet pressure range : 150 - 1000 kPa New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
•	Maximum hot water temperature : 70°C.
Installation Requirements.	
•	The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant. (Ref AS3740)

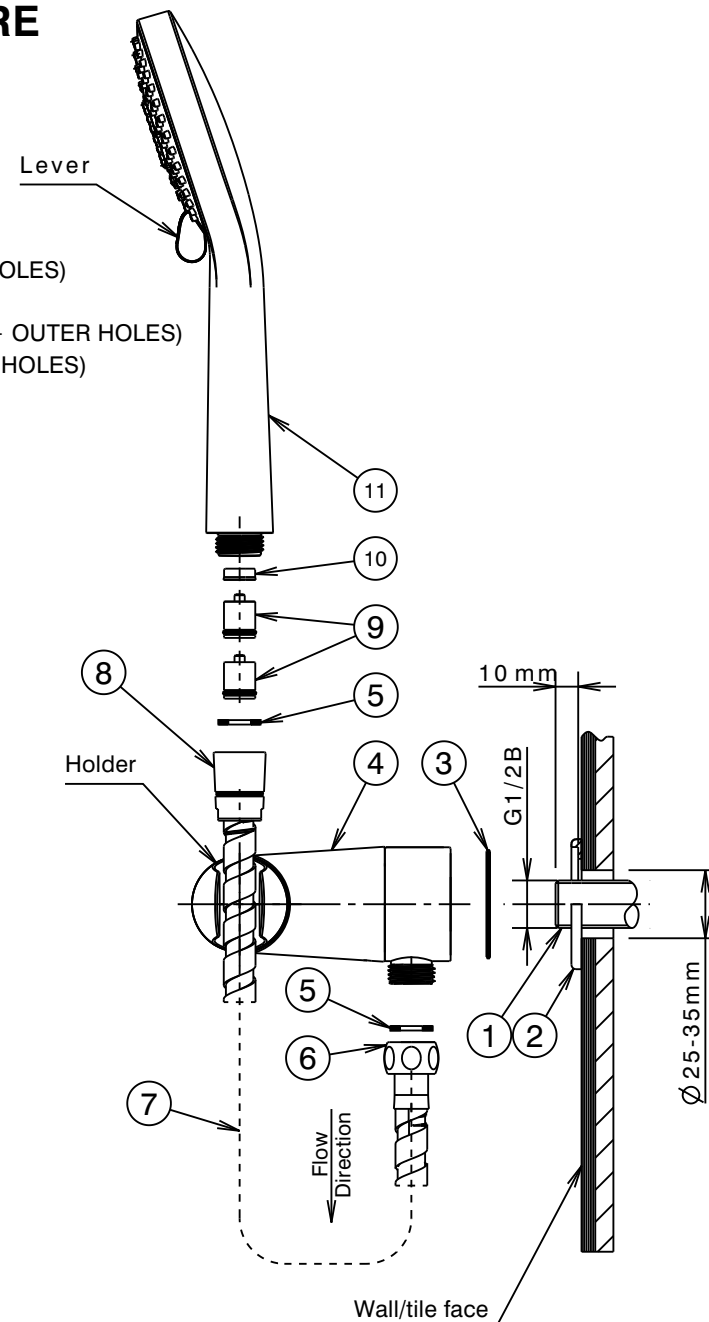


Fig. 1 IS2062A(10/24)