

PLUMBERS INSTALLATION INSTRUCTIONS

Important

- * Hand Shower (1) is fitted with flow regulator (2). This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products. Note: Warranty is void if flow regulator (2) is not installed as shown.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- * Inlet adaptor (8) must be installed in the position as shown in Fig.1.

Installation

- 1) Check that threaded nipple (10) is the correct length as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (9) over the threaded nipple (10). Screw the inlet adaptor (8) onto threaded nipple (10) & tighten until cover plate (9) is secured against the wall/tile face and the outlet thread is pointing downwards as shown. DO NOT OVERTIGHTEN.
- 3) Apply thread tape to the thread on inlet adaptor (8).
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 4) Screw the outlet adaptor (7) onto the thread of inlet adaptor (8) and tighten until the outlet thread is pointing downwards as shown. DO NOT OVERTIGHTEN.
- 5) Check that rubber washer (3) is installed into the shorter nut (6) of shower hose (5) then screw onto the thread spigot of outlet adaptor (7) and tighten. Ensure the flow regulator (2) is fitted into handset (1) and the rubber washer (3) is fitted into the longer conical end (4) of shower hose (5), then screw onto handshower (1) and tighten. Fit handshower (1) into holder of outlet adaptor (7).

IMPORTANT	
Pressure & Temperature Requirements.	
• Hot and cold water inlet pressures should be equal.	
• Static inlet pressure range : 150 - 1000 kPa New Regulation :-500 kPa maximum static pressure at any outlet within a building.(Ref. AS/NZS 3500.1)	
• Maximum hot water temperature : 70°C.	
Installation Requirements.	
• The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant.(Ref AS3740)	

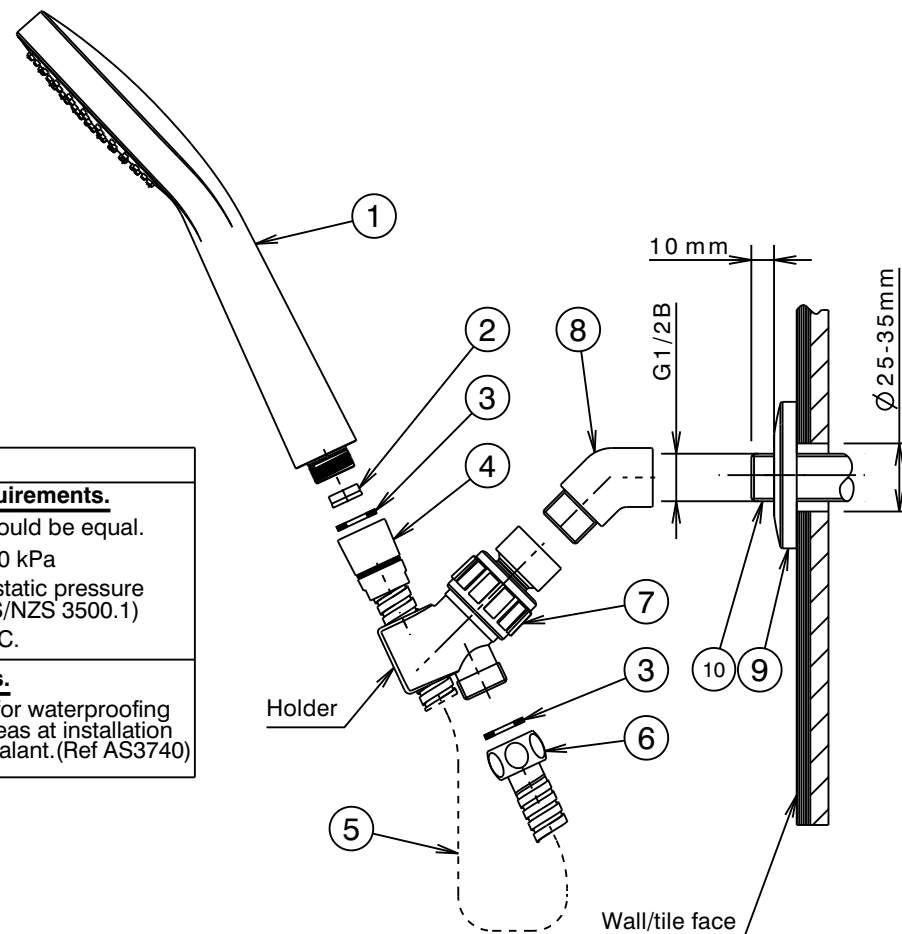


Fig. 1