


TAP HEAD & SPINDLE

PLUMBERS INSTALLATION INSTRUCTIONS

- 1) Check that seats in tap bodies (3) are in good condition and free of foreign materials. Reseat if required.

Important: All pipework must be thoroughly flushed prior to installation, to remove all foreign matter.

- 2) Fully open tap spindle (1) in tap head assembly (2). Ensure fibre washer and jumper valve are in position as shown.
- 3) Screw tap head assembly (2) into tap body (3) by hand and tighten using suitable spanner.
- 4) Turn spindle (1) clockwise to the fully closed position before fitting handle.

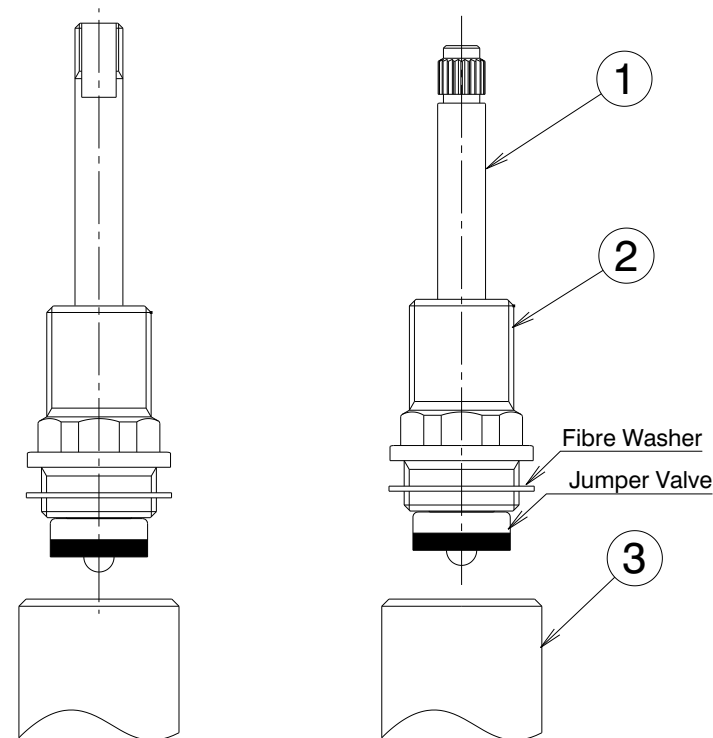

TAP HEAD ASSEMBLY
(FLAT TYPE SPINDLE)

TAP HEAD ASSEMBLY
(SPLINE TYPE SPINDLE)

Fig. 1

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum operating pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.