

CAROMA

FOR CARE 705 SUPPORT BACKREST




INSTALLATION INSTRUCTIONS

- Important Information**
- Installation must be carried out by a licensed tradesperson (plumber/builder)
 - Special care should be taken when drilling walls to avoid hidden pipes or electrical cables
 - Safety gear like a mask, earmuffs and glasses must be worn when using tools
 - It is required that these accessories are mounted to a secure and strong surface, and that the installer use appropriate fixing materials for your wall and installation. To the fullest extent permitted by law, Caroma will not accept responsibility for personal injury or damage caused by incorrect installation or poor wall strength, or installation or part installation by any person other than a licensed tradesperson (plumber/builder)
 - Clean the surface of the pad with disinfectant cleaner after use
 - Never use harsh chemicals that can damage the pad

POINTS TO CONSIDER




Cavity walls-Please ensure the backrest fixing points are secured to the wall’s solid framing structure (i.e. studwork/wall supports) to ensure adequate mounting strength of the frame.

Solid walls- For solid wall installation (i.e. brick or concrete), appropriate drilling equipment must be used.

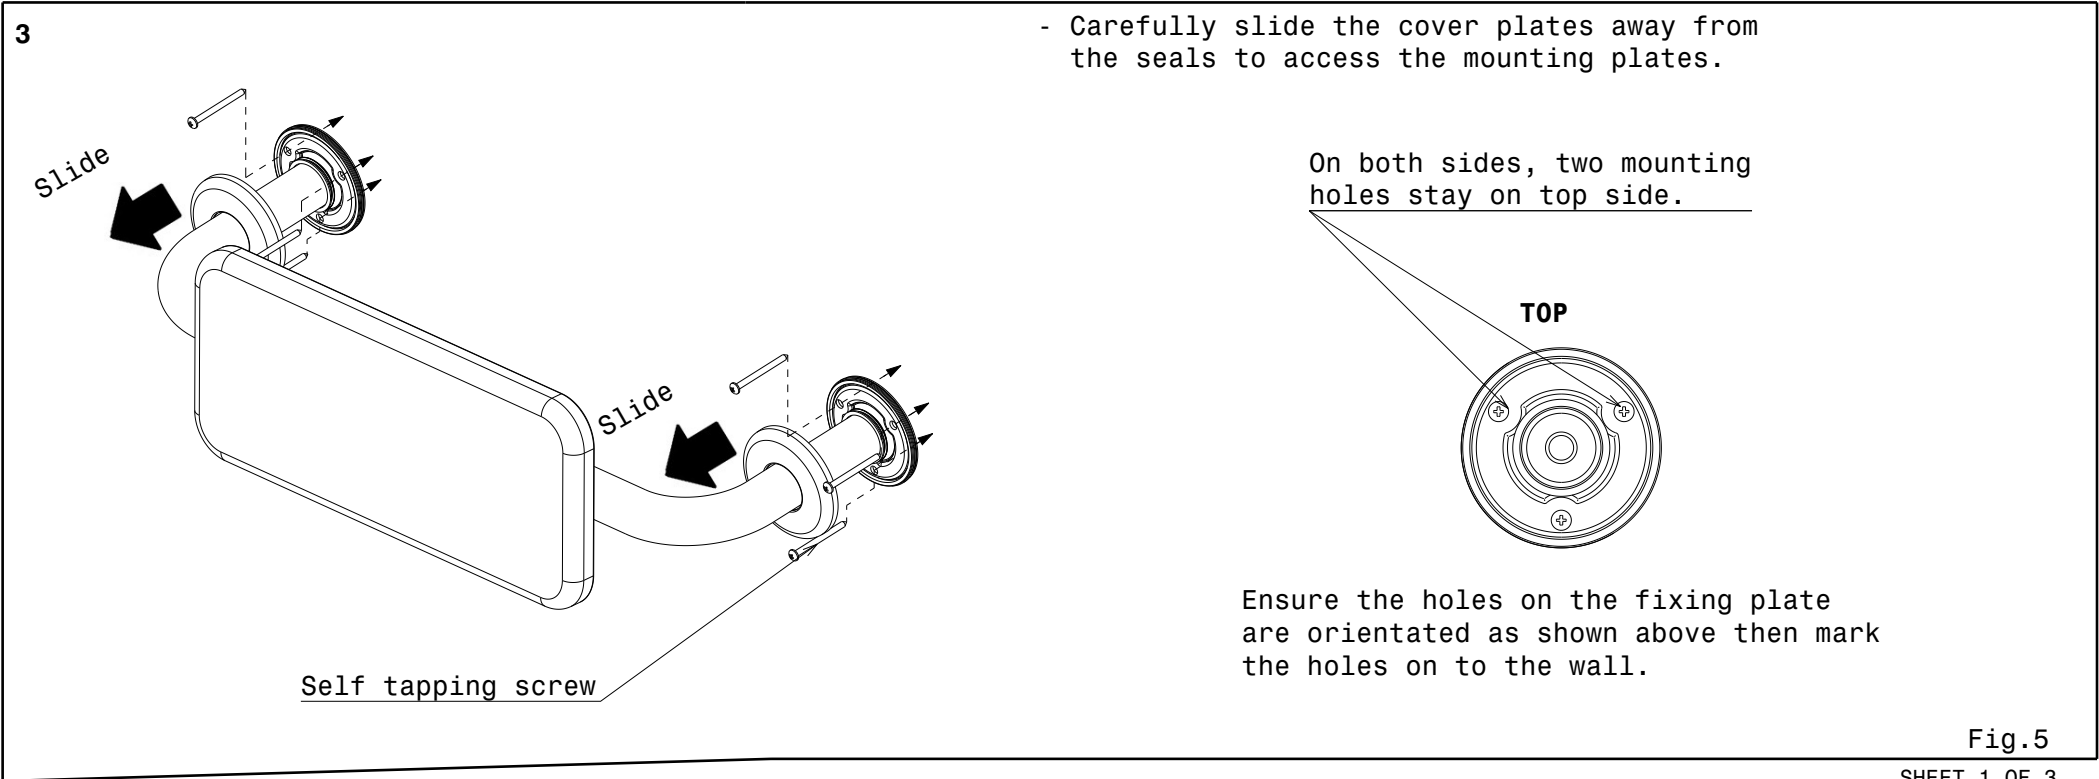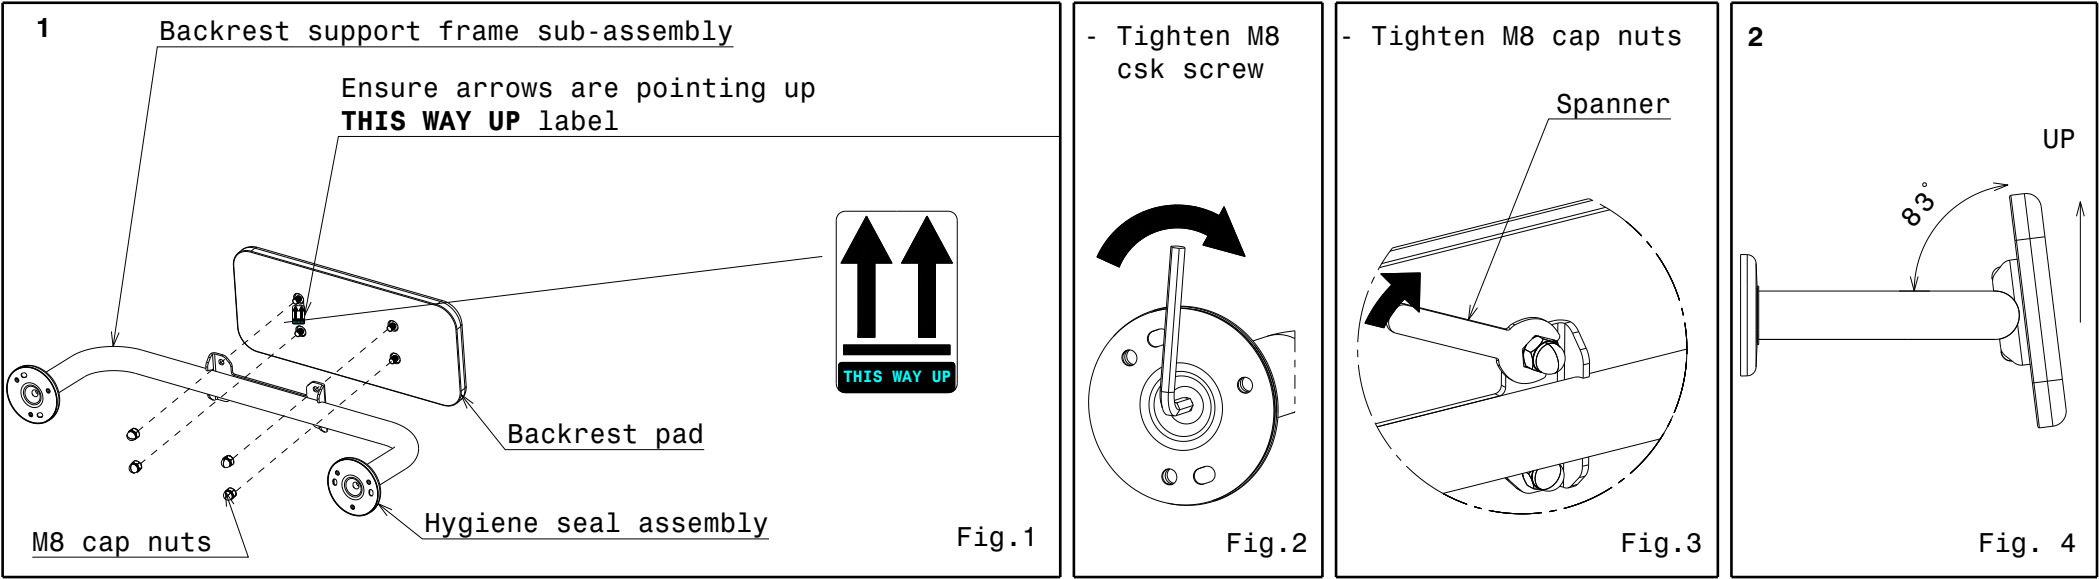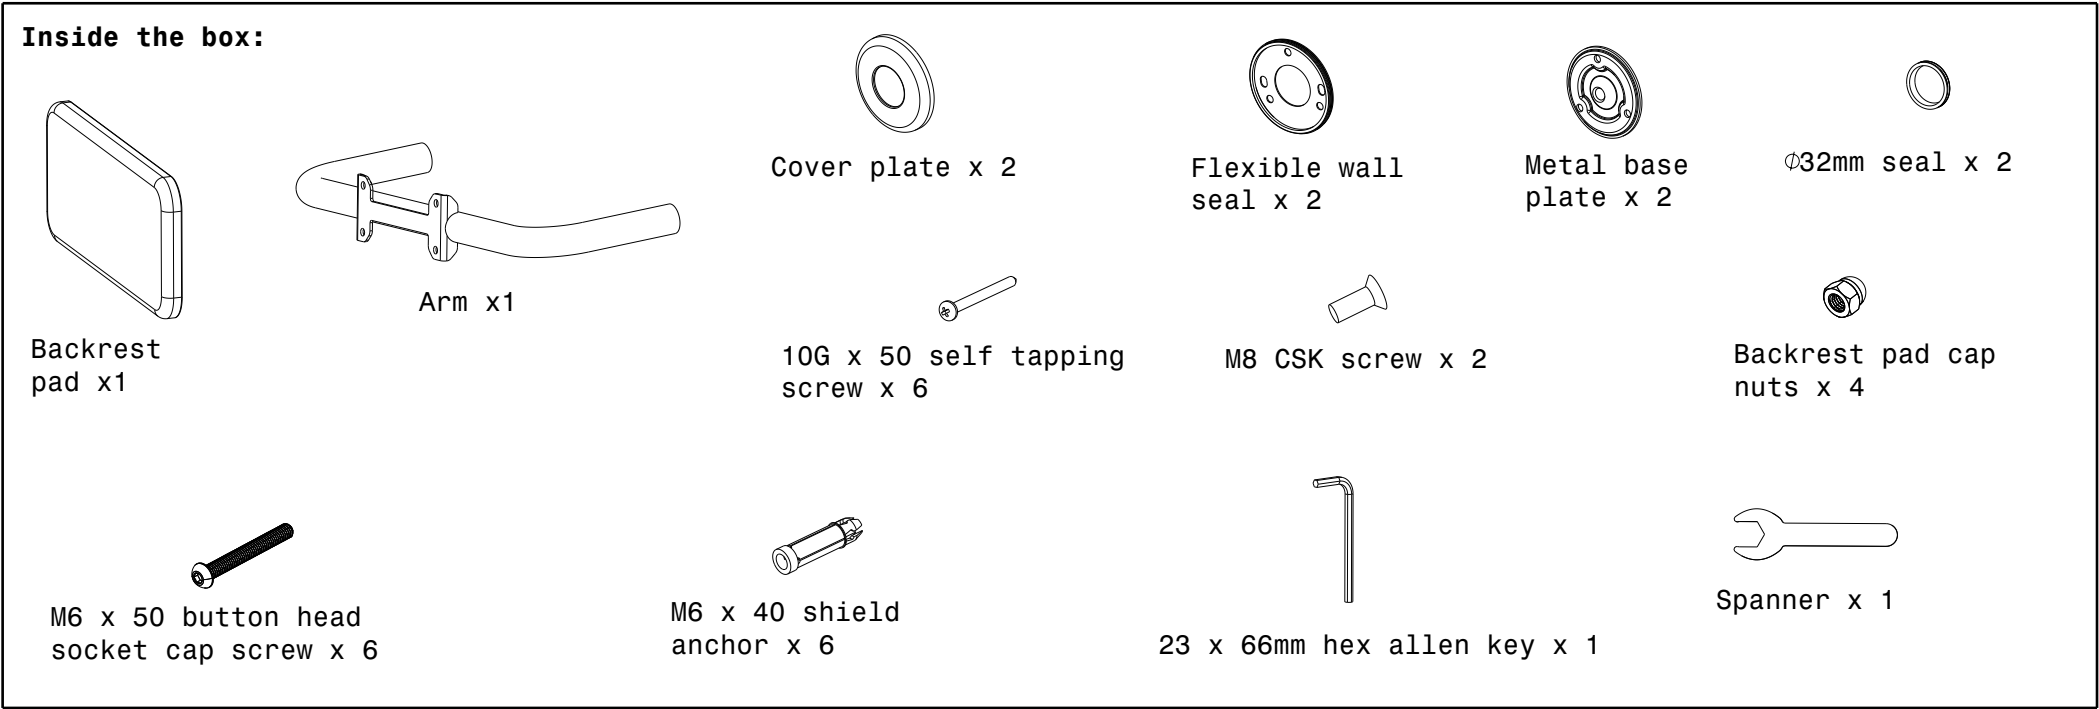

CAROMA

FOR CARE 705 SUPPORT BACKREST
INSTALLATION INSTRUCTIONS (contd...)

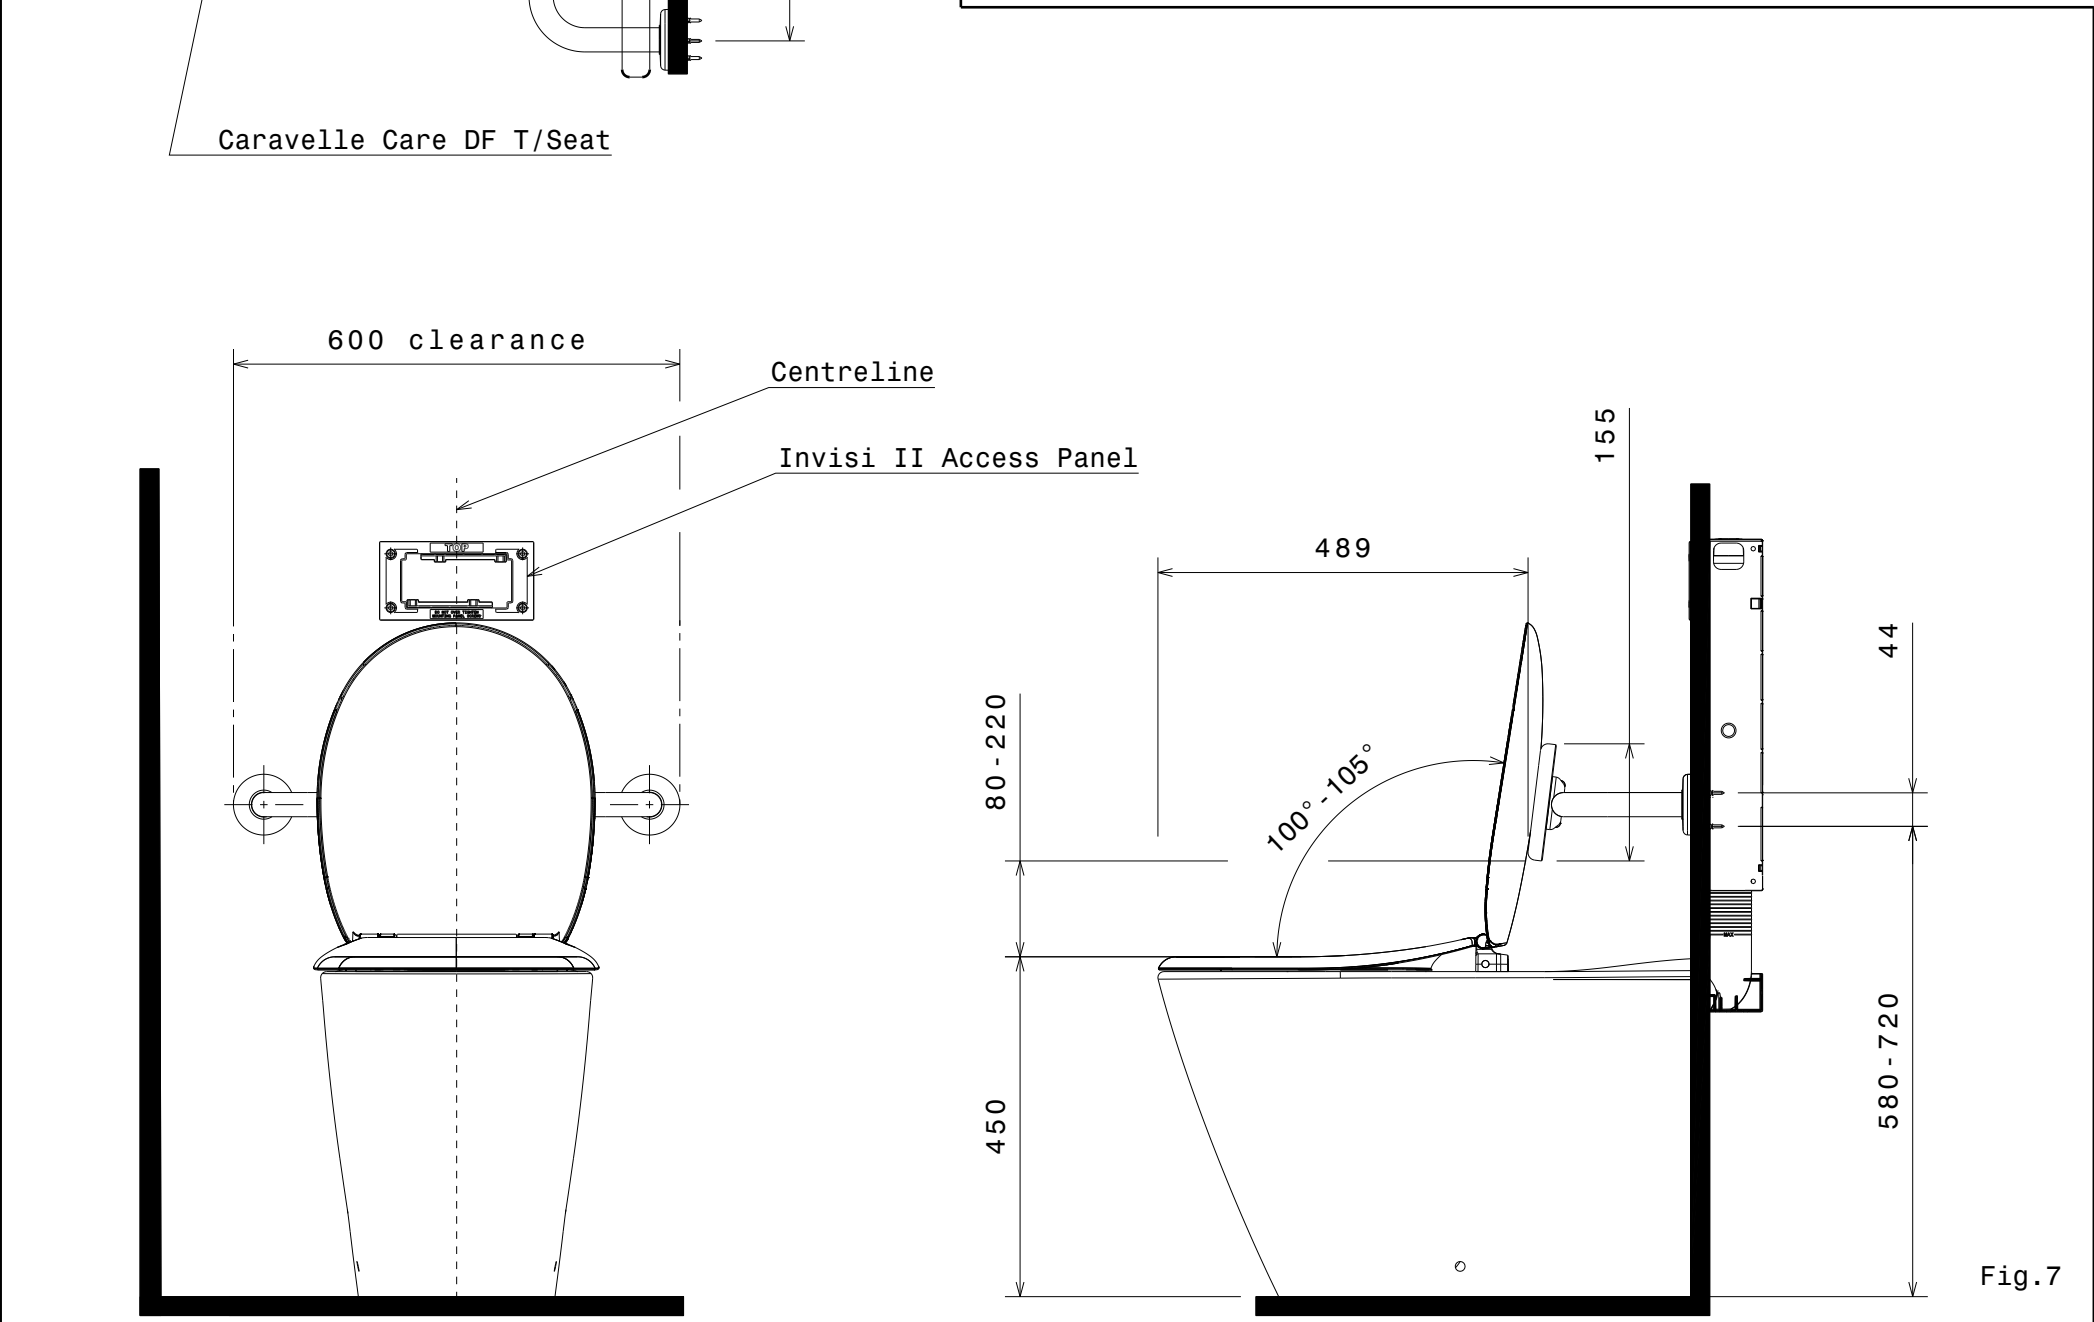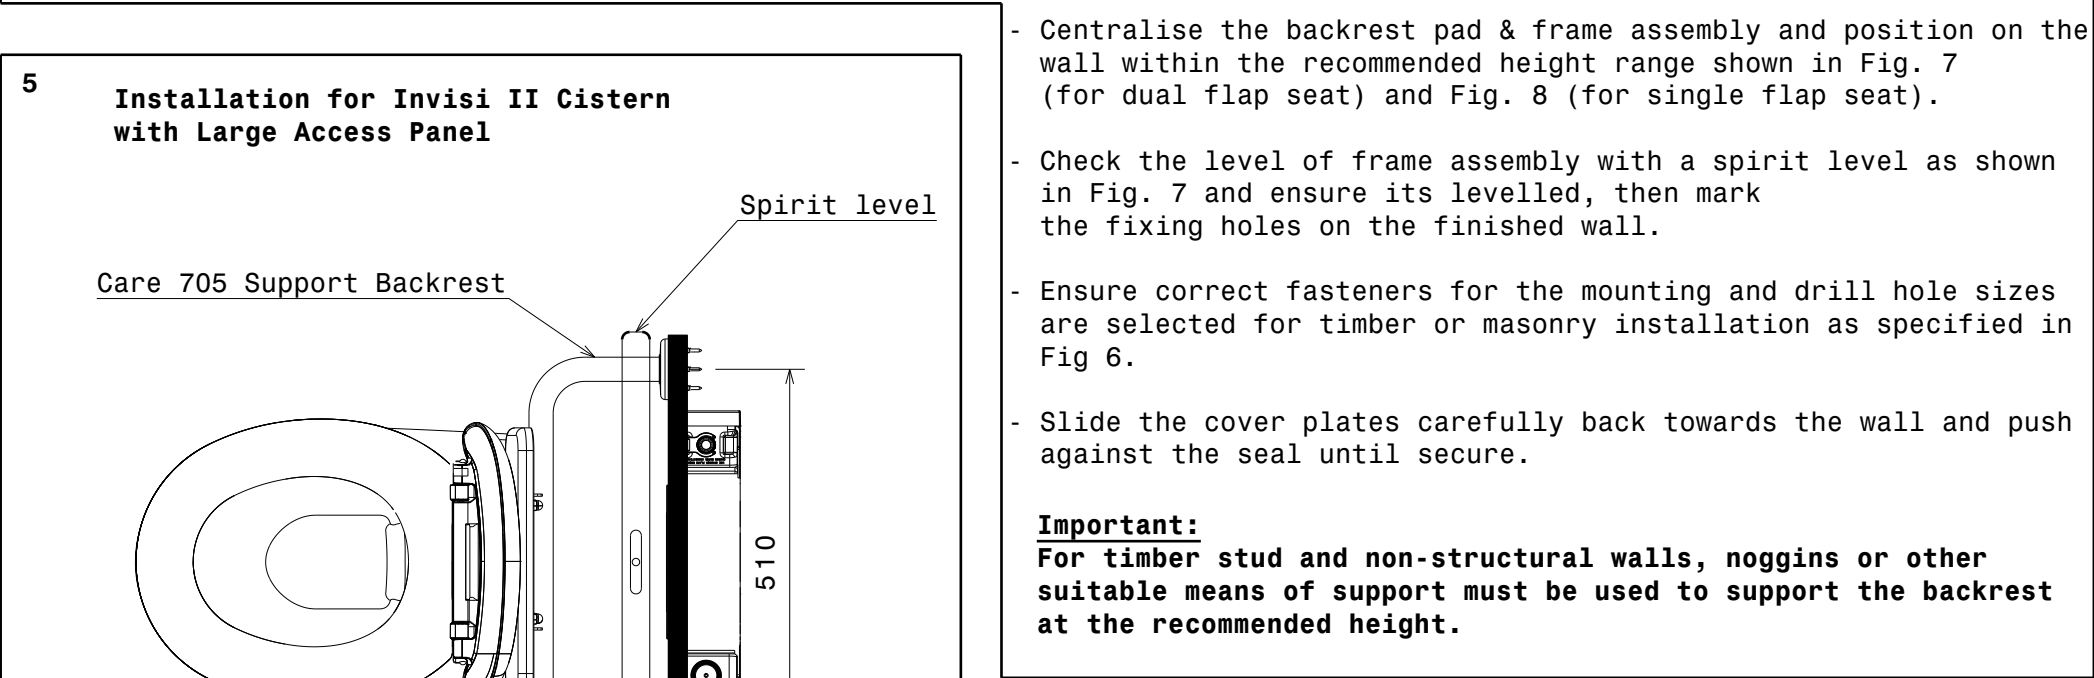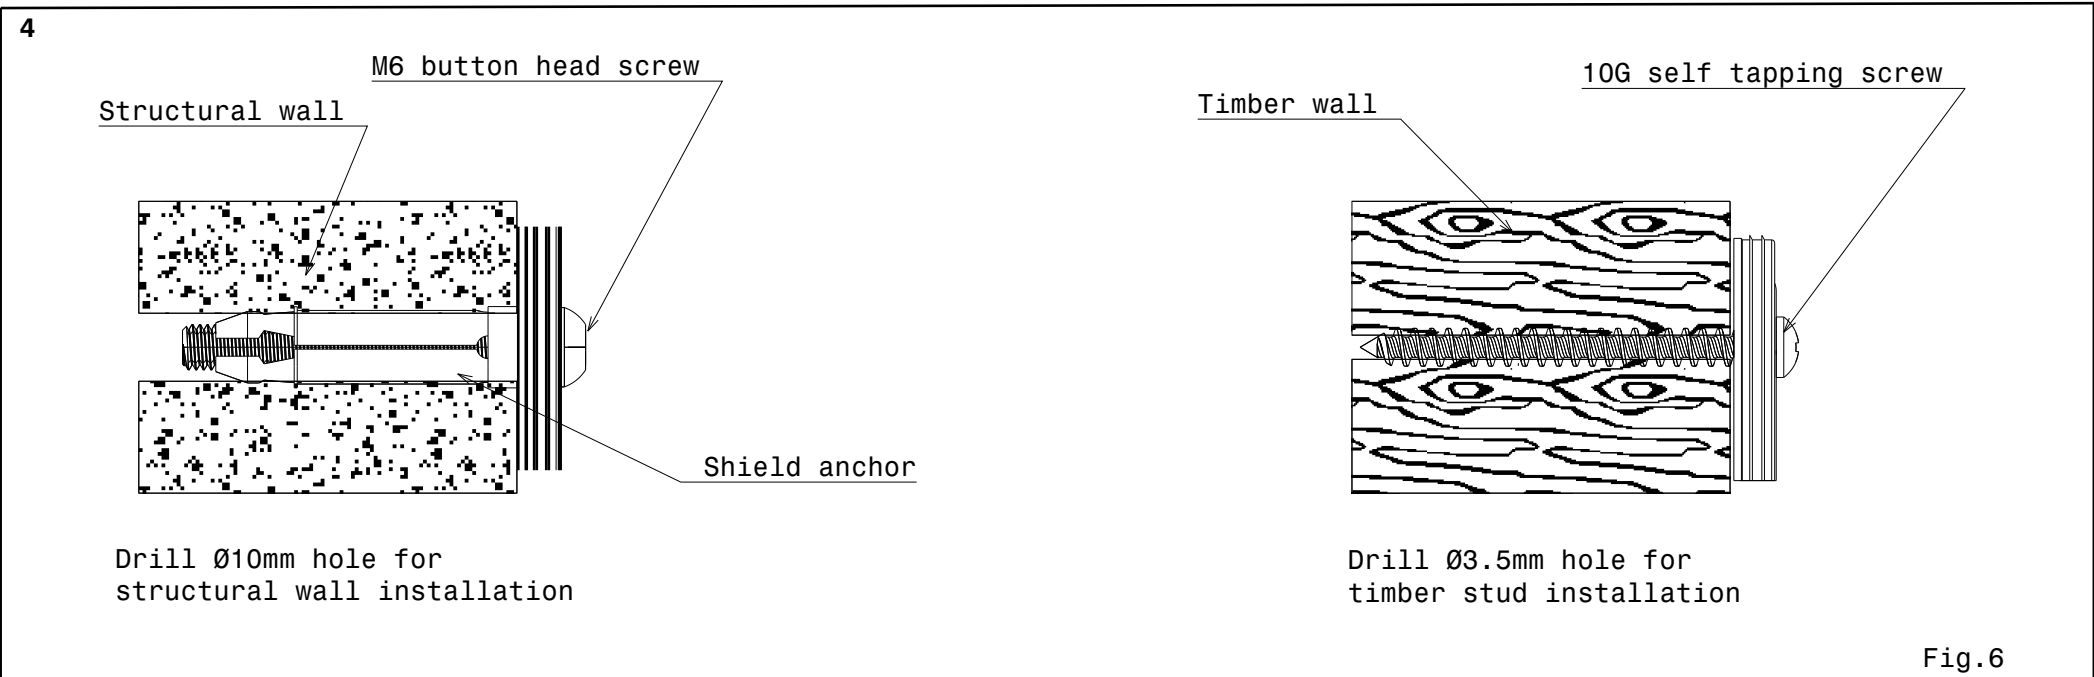

CAROMA

FOR CARE 705 SUPPORT BACKREST
INSTALLATION INSTRUCTIONS (contd...)

