

STRICTLY
TESTED



PROUDLY
AUSTRALIAN OWNED




Premium buffer toilet seat set

Seat Buffer Set
(45x18mm,
15mm dia)

CAROMA
Genuine Parts



CAROMA
Genuine Parts



Scan for
installation
instructions or
see overleaf



Product Code: 300111



9 3 1 1 4 4 0 3 9 8 9 3 2

caroma.com.au

Made in China



ENGINEERED FOR AUSTRALIAN
& NEW ZEALAND CONDITIONS



EASY TO
INSTALL



GWA
Bathrooms & Kitchens

CAROMA INDUSTRIES LIMITED

1 Melito Court, Prestons NSW 2170

ABN 35 000 189 499

Caroma Customer Care ☎ 13 14 16




enlarge

Seat Buffer Set

Installation Instructions

1. Carefully lever old lid buffers from underside of lid using a sharp tool.
2. Peel new lid buffers from adhesive backing and press into position on lid.

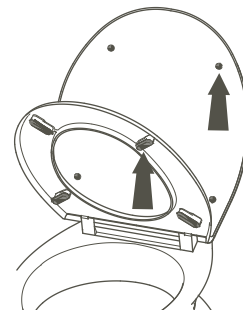

Always ensure work is carried out by a licensed plumber.
Warranty claims can only be made with proof of installation by a licensed plumber.
For complete warranty details, please visit our website:
www.caroma.com.au