

STRICTLY
TESTED



PROUDLY
AUSTRALIAN OWNED



50mm Kingco
Rubber - 10 Pack

To seal the joins in a basin/sink
waste trap

Suitable for 50mm traps

CAROMA
Genuine Parts

CAROMA
Genuine Parts



ENGINEERED FOR AUSTRALIAN
& NEW ZEALAND CONDITIONS



EASY TO
INSTALL



GWA
Bathrooms & Kitchens

CAROMA INDUSTRIES LIMITED
1 Melito Court, Prestons NSW 2170
ABN 35 000 189 499

Caroma Customer Care ☎ 13 14 16



enlarge

Scan for
installation
instructions or
see overleaf



Product Code: 405884




caroma.com.au
Made in China

50mm Kingco Rubber 10 Pack

Installation Instructions

1. Undo trap nuts and take out trap.
2. Hold trap upright to avoid spilling waste water.
3. Dispose of water.
4. Remove old seals and stretch new seals into place.
5. Reconnect trap.

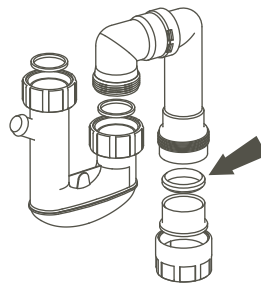

Always ensure work is carried out by a licensed plumber. Warranty claims can only be made with proof of installation by a licensed plumber. For complete warranty details, please visit our website: www.caroma.com.au