

12 months warranty



Proudly Australian
owned



Strictly tested

Caroma Genuine Parts Toilet Seat Buffer Kit - Pedigree 1

Suits Caroma Pedigree 1 Toilet Seat.

Caroma
Genuine Parts



Easy to install



Engineered for Australian
& New Zealand conditions

Caroma Customer Care 13 14 16

Follow us on   #caromagenuineparts



GWA
Bathrooms & Kitchens

CAROMA INDUSTRIES LIMITED ABN 35 000 189 499
Locked Bag 5005, Baulkham Hills, NSW 2153


Scan for
installation
instructions
or see overleaf



Made in Australia

caroma.com.au

Product Code: 412026

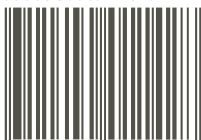


9 311440 011428

Toilet Seat Buffer Kit - Pedigree 1

Installation Instructions

1. Carefully lever old buffers from underside of seat and lid using a sharp tool.
2. Place new buffers into position and press firmly.

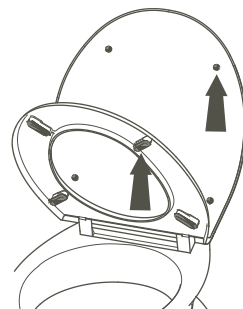

Always ensure work is carried out by a licensed plumber.
Warranty claims can only be made with proof of installation by
a licensed plumber.

405536~B

 Please dispose of thoughtfully