

STRICTLY
TESTED



PROUDLY
AUSTRALIAN OWNED



50mm Cistern/
Flush Pipe Nut Kit
Connects a flush pipe to a
connector style cistern

CAROMA
Genuine Parts

CAROMA
Genuine Parts



ENGINEERED FOR AUSTRALIAN
& NEW ZEALAND CONDITIONS



EASY TO
INSTALL



GWA
Bathrooms & Kitchens

CAROMA INDUSTRIES LIMITED
1 Melito Court, Prestons NSW 2170
ABN 35 000 189 499

Caroma Customer Care ☎ 13 14 16



enlarge

Scan for
installation
instructions or
see overleaf



Product Code: 412115




caroma.com.au
Made in China

50mm Cistern/Flush Pipe Nut Kit

Installation Instructions

1. Turn off water and flush cistern.
2. Unscrew and remove old nut.
3. Place new nut onto flush pipe.
4. Lubricate new seal with soap and water and stretch onto flush pipe.

5. Slide into position and tighten nut.
6. Turn on water.

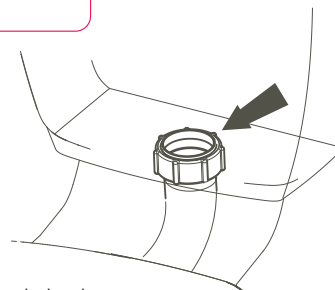

Always ensure work is carried out by a licensed plumber.
Warranty claims can only be made with proof of installation by a licensed plumber.
For complete warranty details, please visit our website:
www.caroma.com.au