




Installation Instructions

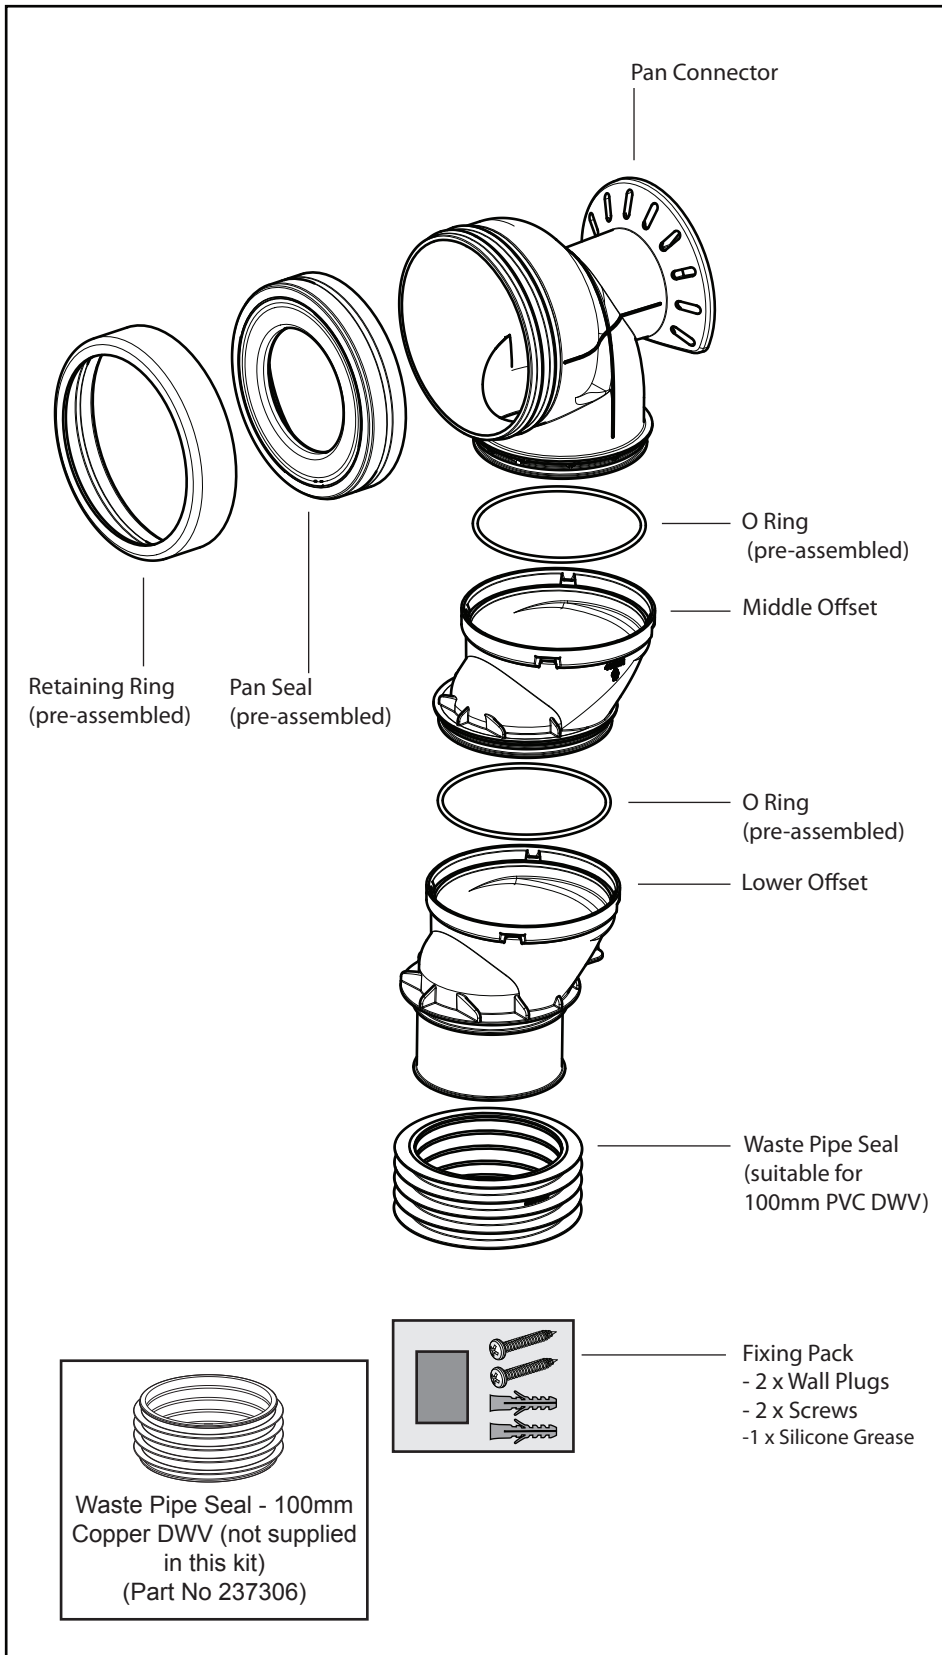


Short Uni-Orbital Connector Contents

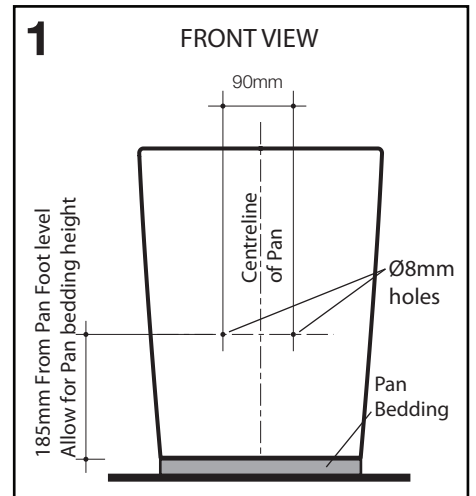

Mark centreline of Pan on wall.
Drill 2 x Ø8mm holes and insert wall plugs supplied

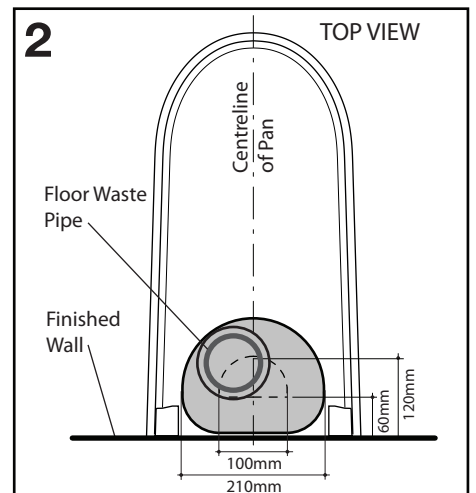


Dotted line indicates maximum offset for Waste Pipe centreline. Floor Waste Pipe can fit anywhere within shaded area.

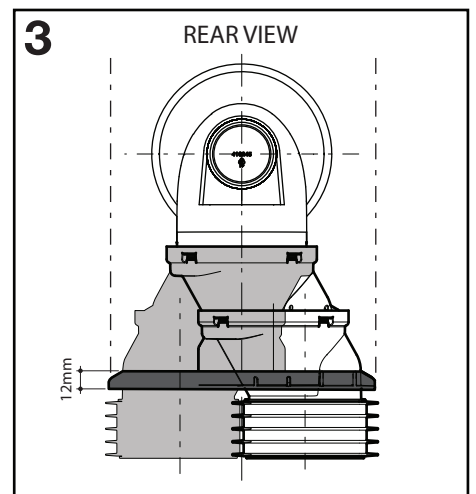


Refer to internal Pan dimensions for maximum allowable offset.


Installation Instructions

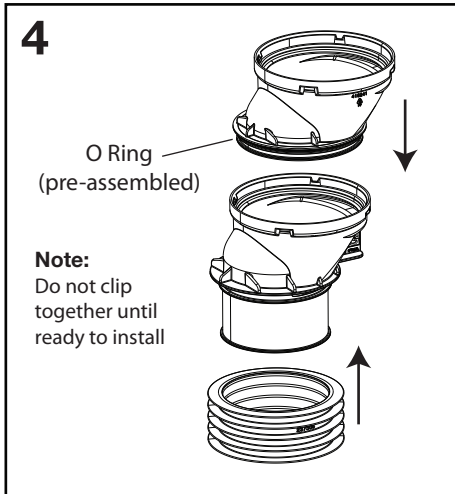


Lubricate O-Ring and clip Lower and Middle Offset together. Lubricate Waste Pipe Seal and slide onto Body Base. (Use Silicone Grease supplied)

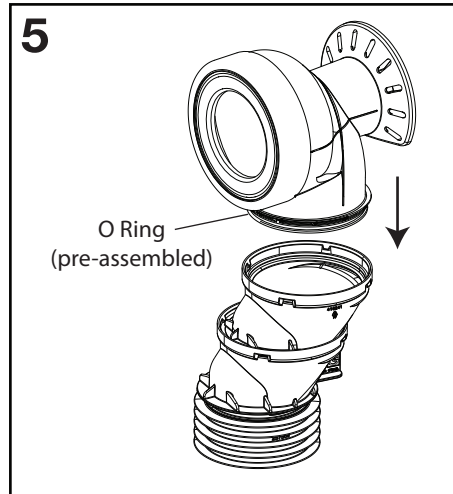


Lubricate O-Ring and clip Pan Connector and Middle offset together.

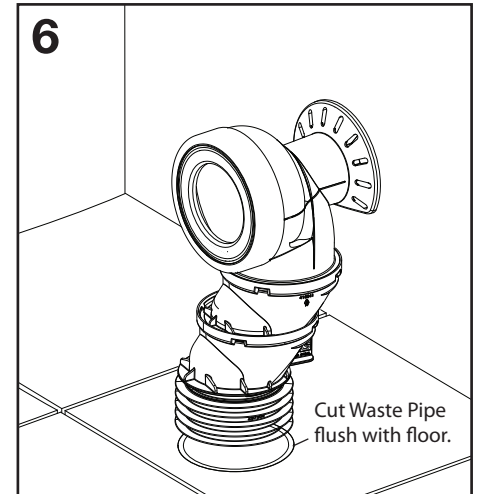


Position Uni-Orbital Connector over Floor Waste Pipe without inserting.

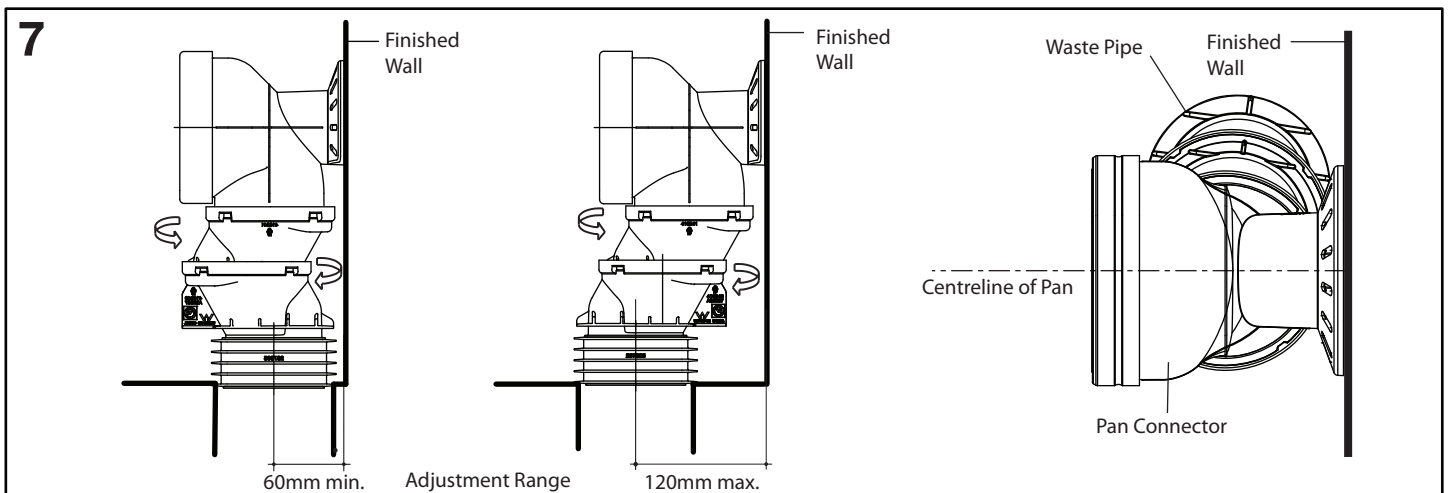

Adjust the Uni-Orbital Connector by rotating Middle and Lower Offsets so that the Pan Connector is on the centre line of the Pan and flush against the finished wall.

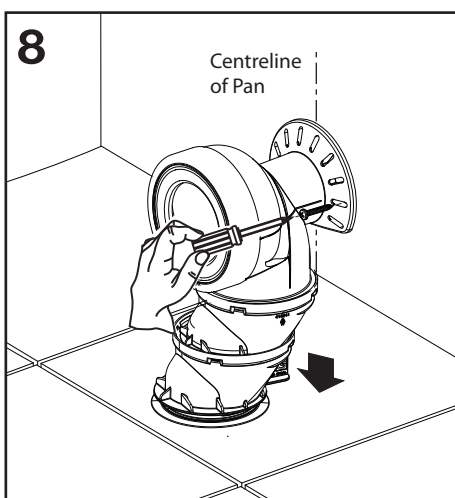

Push Uni-Orbital Connector into Floor Waste Pipe and fix to wall using 2 screws provided.

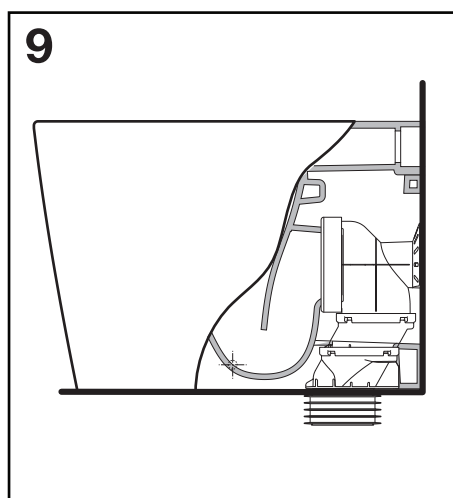

Refer to Pan instructions to complete installation.