


Step 5

- Fit handle onto cartridge spindle and secure by tightening grub screw with allen key provided.
- Ensure o-ring is fitted to the handle cap and press handle cap into grub screw hole.

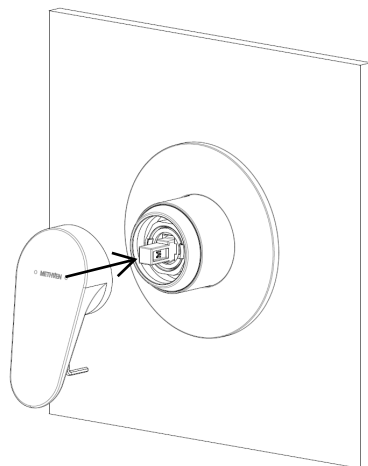


MAKU MK2 BATH/SHOWER MIXER with FASTFLOW II TRIM KIT Installation Guide

Technical Specifications:

This trim kit is designed to be paired with the Methven Universal In-Wall Body Shower Mixer with FastFlow II

Care and Cleaning:

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

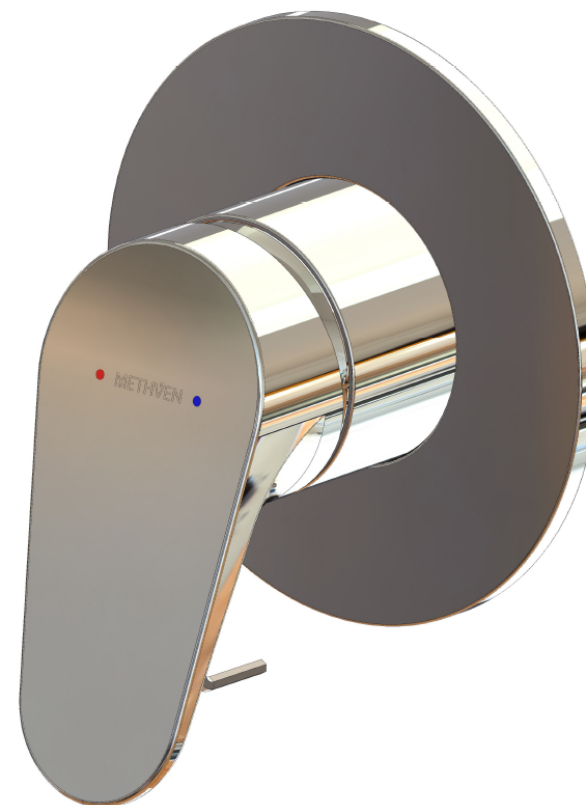

New Zealand
0800 804 222


Australia
13 14 16

UK
0800 195 1602

IMPORTANT: Please read all of the instructions before installation.

General:


- Methven recommends this product is installed by a licensed plumber in compliance with all relevant regional regulations.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall using silicone to ensure a seal is achieved.

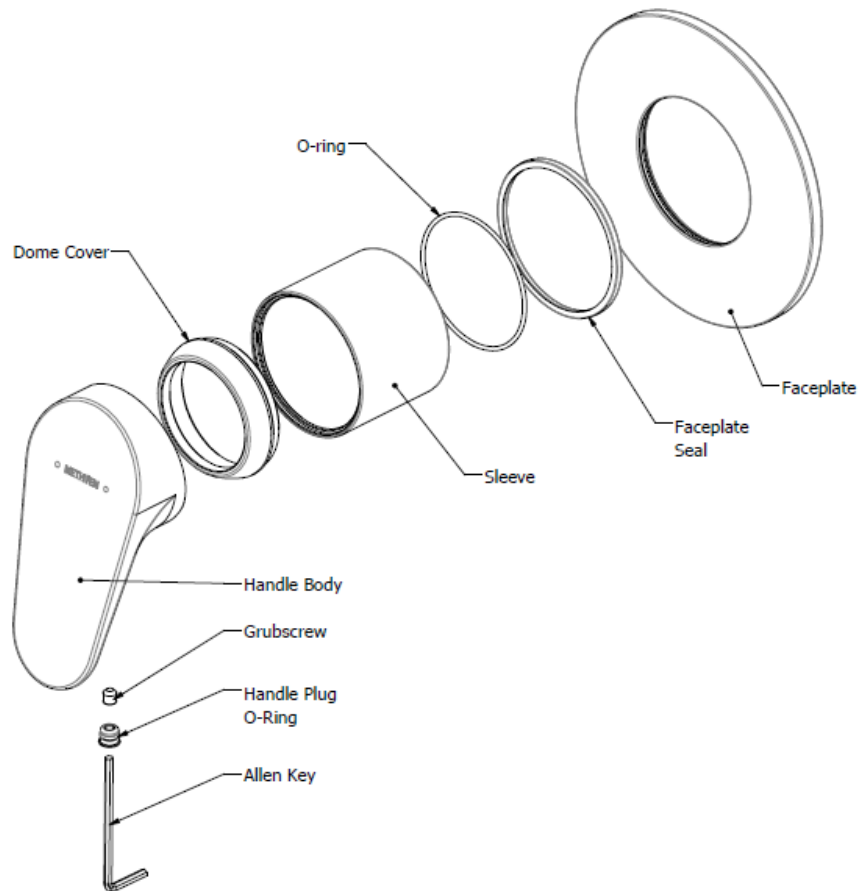

IMPORTANT: Before you begin, turn off the water supply.


Step 1

- Remove Protective cover from installed Universal In-Wall Body Shower Mixer with FastFlow II.

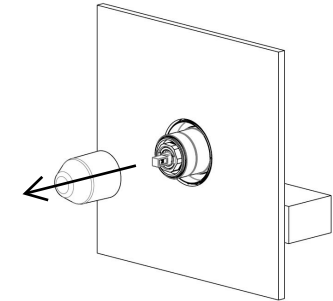


Step 2

- Fit Trim Kit O-ring provided into groove on mixer body and lubricate with water.

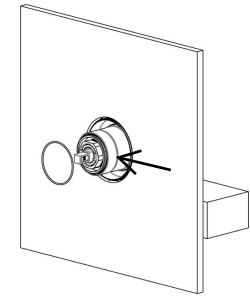

Step 3

- Fit Trim Kit Sleeve over mixer body and press home.
- Screw Trim Kit Half Dome onto brass locknut and hand tighten until it and the sleeve are secure.

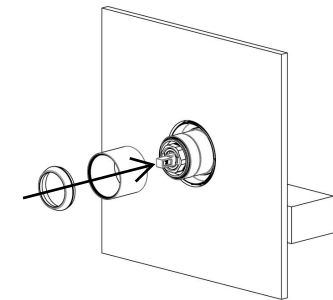

Step 4

- Apply silicon sealant to groove on rear of faceplate
- leaving a small gap in the bottom for drainage.

Push faceplate onto the sleeve and press up against finished wall surface. TIP: wet faceplate seal before fitting over the sleeve.

