

12 months warranty



Proudly Australian



owned



Strictly tested

Caroma
Genuine Parts

Pan Fixing Kit

Fixes a toilet pan to concrete or timber floors.

Caroma
Genuine Parts



Easy to install



Engineered for Australian
& New Zealand conditions

Caroma Customer Care ☎ 13 14 16

Follow us on   #caromagenuineparts



GWA
Bathrooms & Kitchens

CAROMA INDUSTRIES LIMITED ABN 35 000 189 499
Locked Bag 5005, Baulkham Hills, NSW 2153

Scan for
installation
instructions
or see overleaf



Made in Australia

caroma.com.au

Product Code: 601150W




9 311440 202987

Pan Fixing Kit

Installation Instructions


TIMBER FLOORS

1. Mark and drill 4 x 4.5mm holes.
2. Fit tapered skirts to screws.
3. Place screw in pan hole and tighten evenly -
Do Not Overtighten.
4. Press caps into position
to cover screw head.

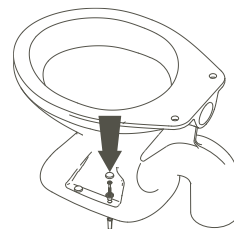

CONCRETE FLOORS

1. Mark and drill 4 x 8mm holes minimum 45mm deep.
2. Insert rawl plugs into fixing holes.
3. Fit tapered skirts to screws.
4. Place screw in pan hole and tighten evenly -
do not overtighten
5. Press caps into position to cover screw head.

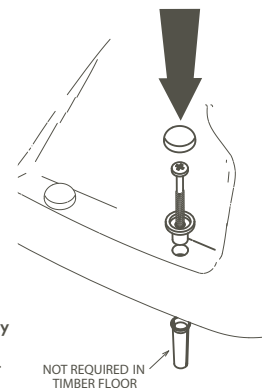

Always ensure work is carried out by a licensed plumber. Warranty claims can only be made with proof of installation by a licensed plumber. For complete warranty details, please visit our website - www.caroma.com.au

405537-B

 Please dispose of thoughtfully