Position of D.250


**Bracket** 



CAROMA

**Basin rim** 

**Semi Recessed Basin** 

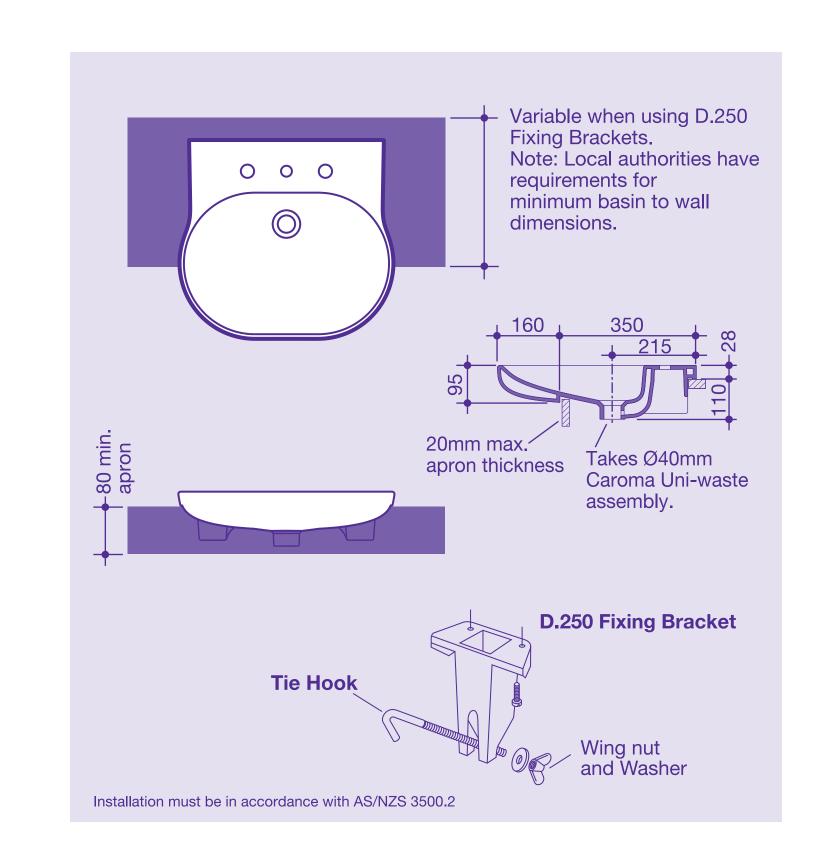

## PLUMBERS INSTALLATION INSTRUCTIONS

- 1- Fold template and place over countertop and apron.
- **2-** Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
- **3-** Cut out countertop with care.
- 4- Fit taps and waste assembly to basin.
- 5- Apply a layer of acetic cured silicone sealant around the sealing rim and apron. Important: do not use epoxy sealants.
- 6- Align and secure the brackets to the underside of countertop in the corner positions as shown.
- **7-** Attach the Tie Hooks to the holes in the basin and lower into opening. Secure from underneath.


## **IMPORTANT:**

## **EPOXY TYPE GLUES MUST NOT BE USED.**

FOR GRANITE OR MARBLE TOPS, FIX TWO 20MM THICK WOODEN BLOCKS IN THE BRACKET POSITION ON THE UNDERSIDE OF THE GRANITE/MARBLE WITH FAST SETTING

TWO PART EPOXY. WHEN FULLY SET SCREW THE BRACKETS INTO POSITION ON THE WOODEN BLOCKS. OTHER SUITABLE FASTENING SYSTEMS MAYBE USED.

PLEASE NOTE: THE TEMPLATE FOLD LINE BETWEEN THE HORIZONTAL AND VERTICAL SURFACES MUST REMAIN AS A SHARP RIGHT ANGLE. ROLLING THE TEMPLATE OVER A RADIUS MAY CAUSE THE CUT OUT TO BE TOO BIG FOR THE

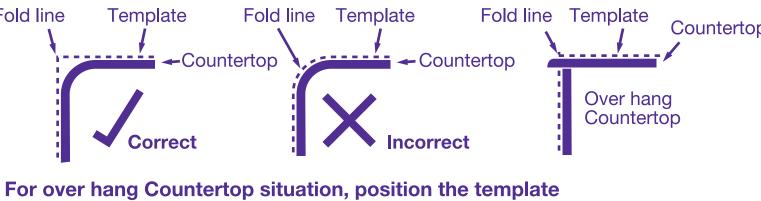

For over hang Countertop situation, position the template fold line on the countertop and apron as detailed.

**Cut-out template** 

Front

Back