


Liano II 580 Pill

Ceramic Under/Over Counter Vanity Basin

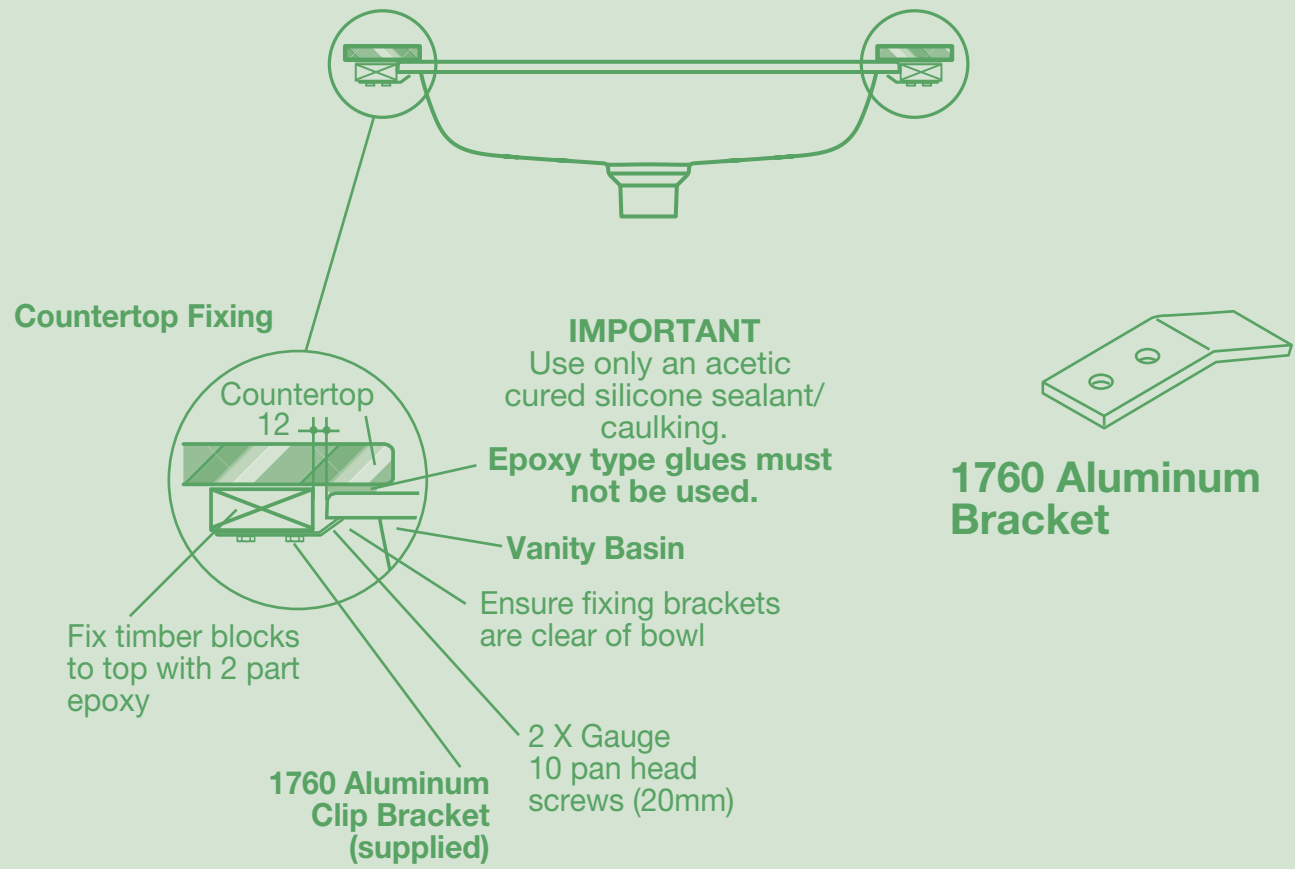

Under-Counter Installation Instructions

The basin can be installed under conventional laminated timber or marble countertop.

- 1- Position template over countertop.
- 2- Attach template cut-out guide to the countertop with adhesive tape or otherwise transfer cut-out line to the countertop.
- 3- Cut out countertop with care.
- 4- Fit waste assembly to basin.
- 5- Clean underside of the sealing rim and fitting face of basin/lavatory that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
Apply a layer of acetic cured silicone sealant/caulking around the sealing rim and fitting face of the basin.
Important: do not use epoxy sealants.
- 6- **Important: Four wooden blocks should be permanently pre-fitted to marble or conventional laminated timber tops before fixing the basin with the 1760 clips.** See fixing details opposite.
Screw fix to the underside of the countertop, using four 1760 under counter clips evenly spaced around the basin.
- 7- Connect an approved trap, eg. a polypropylene combination S & P compression joint waste trap. If necessary use a trap adaptor for 32mm waste outlets.

