



Liano II Pill 600 with tap landing

Ceramic Inset Vanity Basin

200mm 100mm 0
Scale

100mm

200mm


Ø20mm Hole

Ø20mm
Hole

Ø20mm
Hole

Ø20mm Hole

IMPORTANT
Use only acetic cured silicone sealant.
Epoxy type glues must not be used.

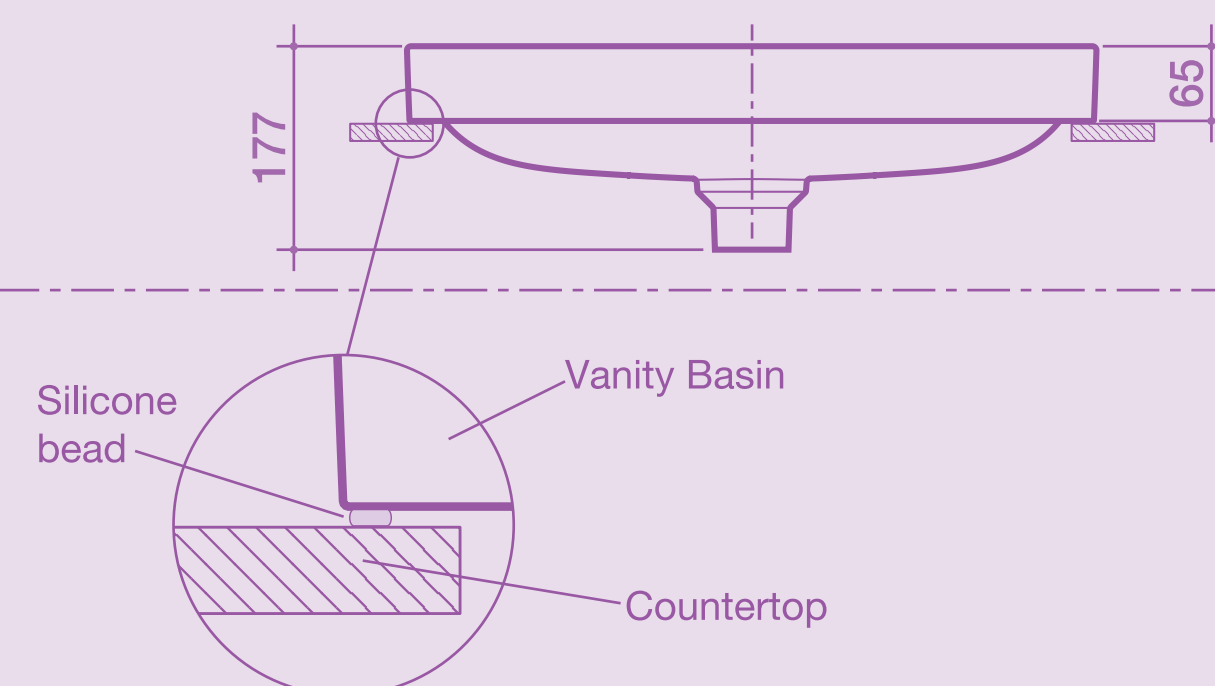

Installation must be in accordance with AS/NZS 3500.2

Installation Instructions

1. Position template over countertop.
2. Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
3. Drill Ø20mm holes and use as jigsaw starter.
4. Fit waste assembly to basin.
5. Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
6. Apply a layer of acetic cured silicone sealant around the sealing rim and fitting face of the basin.
Important: do not use epoxy sealants.
7. Bed the basin on the countertop.
8. Connect waste assembly to the trap and plumb taps.
9. Clean excess silicone sealant off around basin.

Cut-out template

Basin Sealing
Rim

T00016ACL

Date Created: 10.11.23
Issue No: 0