

SAHARA ACCESSORIES – TOILET ROLL HOLDER

INSTALLATION INSTRUCTIONS

Important Information:

- * Hollow wall anchor (1) is only suitable for use in cavity walls with a tiled surface. If installing into a plasterboard cavity wall (untiled) it is recommended that the accessory be attached in line with a stud or noggin using suitable screws. (Screws not supplied)
- * To prevent drill from wandering on tiled surfaces it is recommended that masking tape be applied before drilling.

Installation

- 1) **SOLID WALLS:** – (Brick, masonry blocks, concrete etc)
- i) Drill holes 6.00mm diameter, 40mm deep.
 - ii) Insert rounded end of wall plugs (2) into drilled holes and tap until flush with the wall surface.
 - iii) Fit screws (4) through slots in fixing plate (3) before inserting into wall plugs (2). Tighten screws (4).

TILED CAVITY WALLS: – (Plasterboard/tile, fibre cement sheet/tile)

Note: Total wall thickness must be between 8–13mm.

- i) Drill holes 8.00mm diameter.
- ii) Flatten barbs on head flange of wall anchors (1). Insert the wall anchors (1) into the drilled holes until the head flange is against the wall surface.
- iii) Fit the wall anchor M4 screws (5) with washers (6) through the slots in fixing plate (3) before screwing them into installed wall anchors. Tighten screws (5).

UNTILED CAVITY WALLS: – (Plasterboard)

- i) Determine a suitable position to attach fixing plate (3).
 - ii) If fixing to a stud or noggin fit suitable screws (not supplied) through slots in fixing plate (3) and screw directly into stud or noggin and tighten. Otherwise, use a suitable toggle bolt (not supplied).
- 2) Install toilet roll holder (7) onto fixing plate (3), making sure that fixing screw (8) is located underneath as shown. With toilet roll holder resting securely against wall surface, tighten screw (8) using allen key (9) provided.

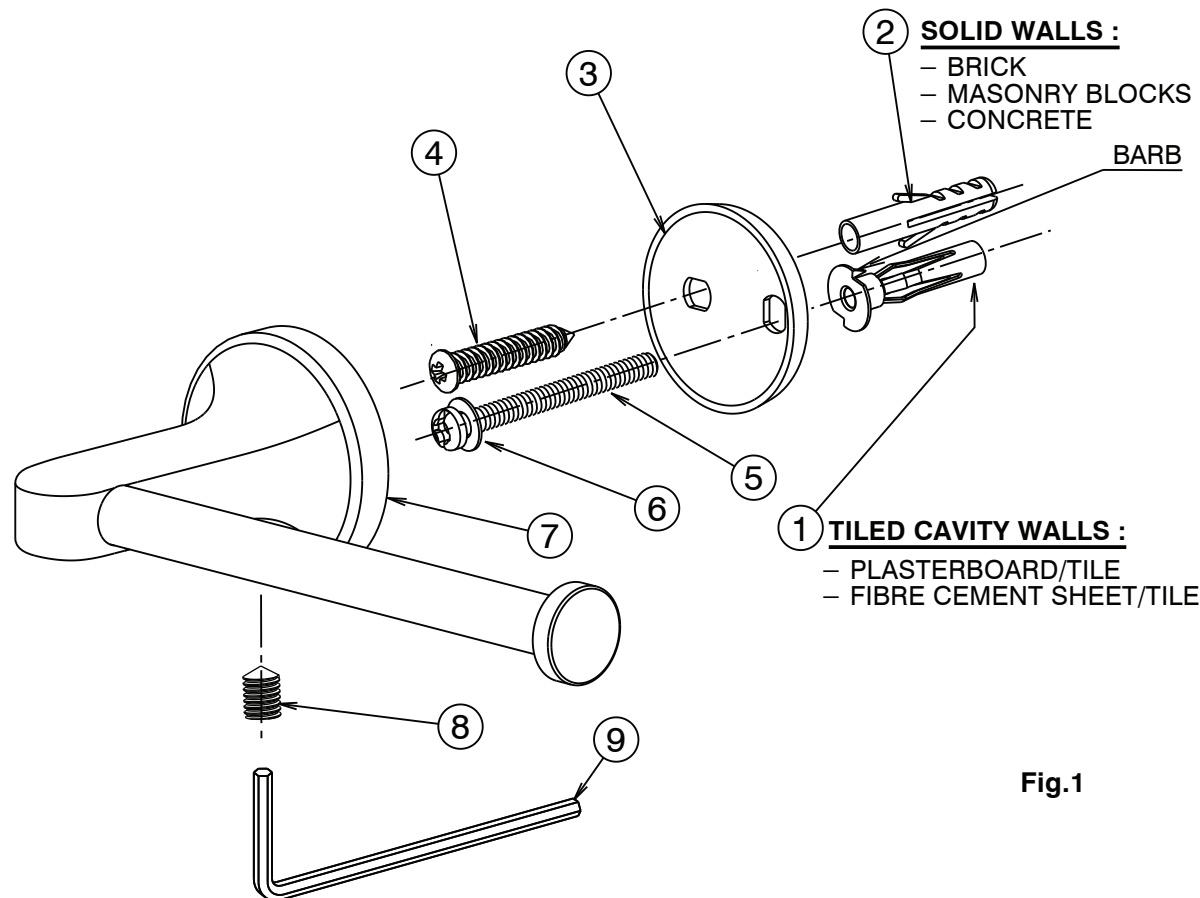


Fig.1