




CLARK

Tub/Cabinet Assembly Instructions




Suitable for item codes: A0140F, A0141, A0140F, A01401F, A0142, A0142F, A0144, A0145D, A0149, A0149D, A0149F, A0175D and A0175F


The Cabinet has been manufactured from quality materials. To ensure you receive the Cabinet in the same quality that it left our plant, it has been covered with a protective plastic material. Please remove this before assembly.

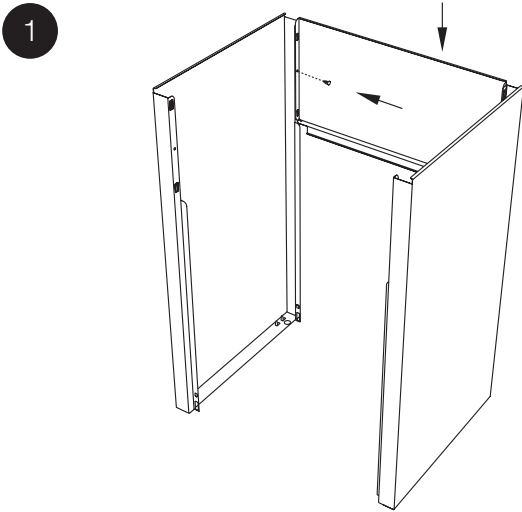


Slide one Front/Rear Head Panel (2) onto Side Panels (1) and snap Panel Fixing Clips (3) into place.

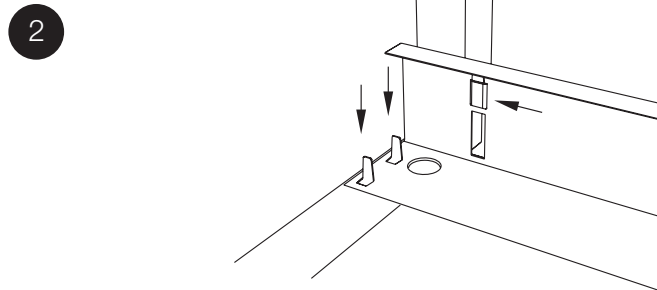


Slide both Kick Panels (4) (Front and Rear) onto the 3 tabs in the bottom corners of the side panels.

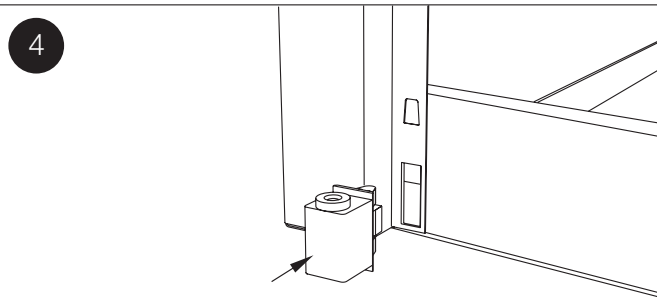


Press fit the Hinge Base (5) into the corresponding hole in the side panel on the side you would like the door to hinge.

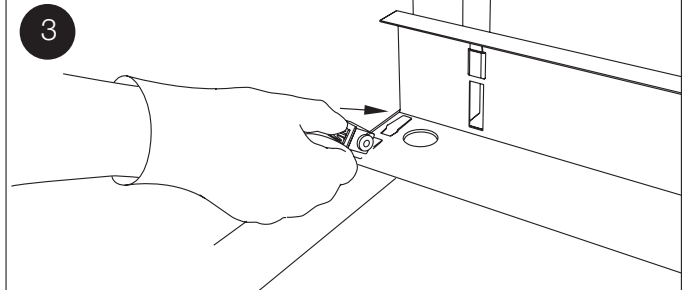


Using the Hinge Base (5) as an assembly aid flatten the 8 base tabs to lock the panels together.

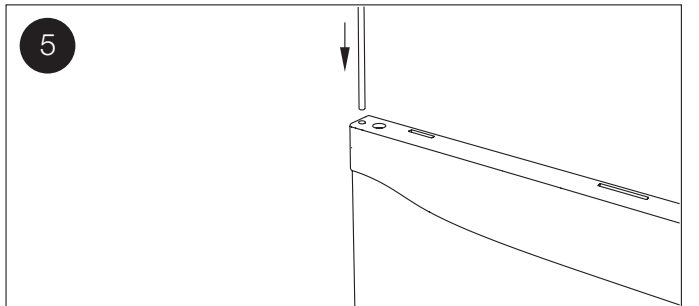

Insert the Hinge Rod (6) through the holes on the Door Assembly (7).

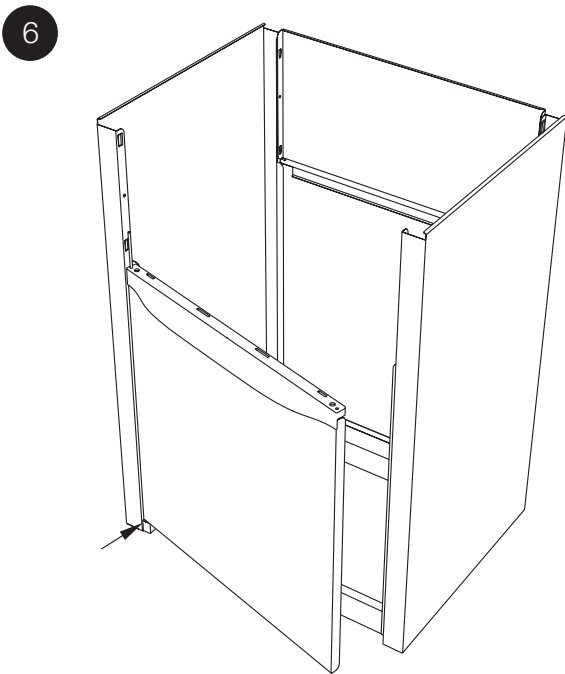


Align and insert the Door Assembly (7) with the corresponding holes in the Hinge Base (5).

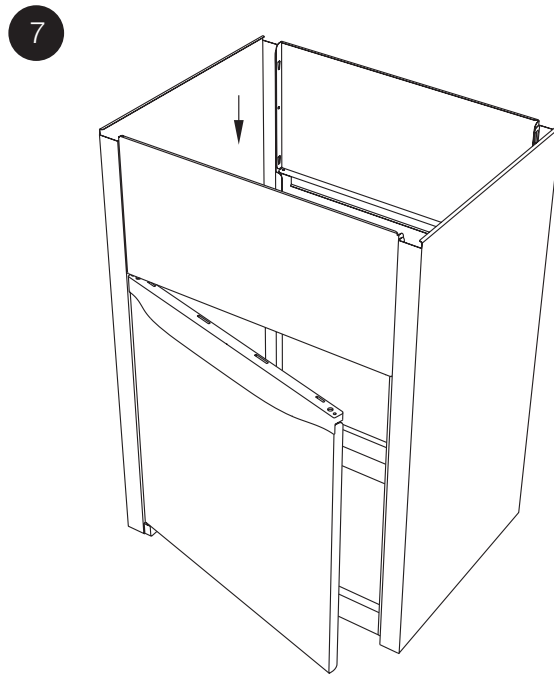


Align the second Front/Rear Head Panel (2) with the Side Panels (1) and slide over the Door Hinge Rod (6). Snap the remaining two Panel Fixing Clips (3) into position.




Install Waste and Bypass fittings supplied with Tub. Position Tub (8) on top of the Cabinet Assembly.

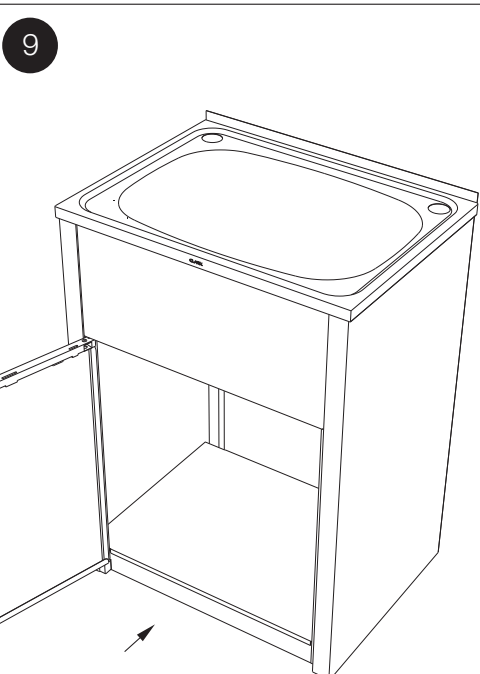

Optional: Install Floor Panel (9). The panel fits over both of the Kick Panels.

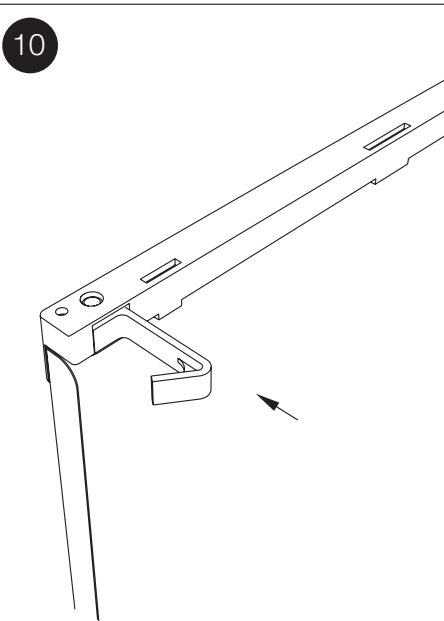

Optional: Snap fit the Detachable Child Lock (10) into the Door Handle.

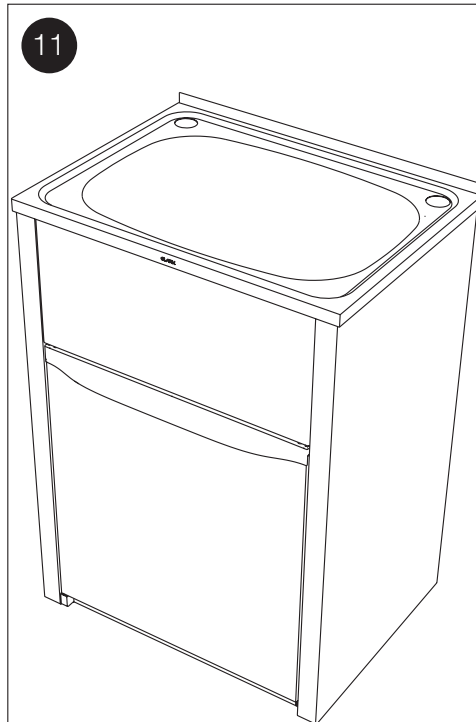

Your Tub and Cabinet assembly is now ready for installation by a licensed plumber.



GWA
Bathrooms & Kitchens

Caroma Industries Limited
ABN 35 000 189 499
1 Melito Court, Prestons NSW 2170
National Customer Call Centre
13 14 16
caroma.com.au



New Zealand
National Customer Call Centre
09 279 2700
caroma.co.nz