


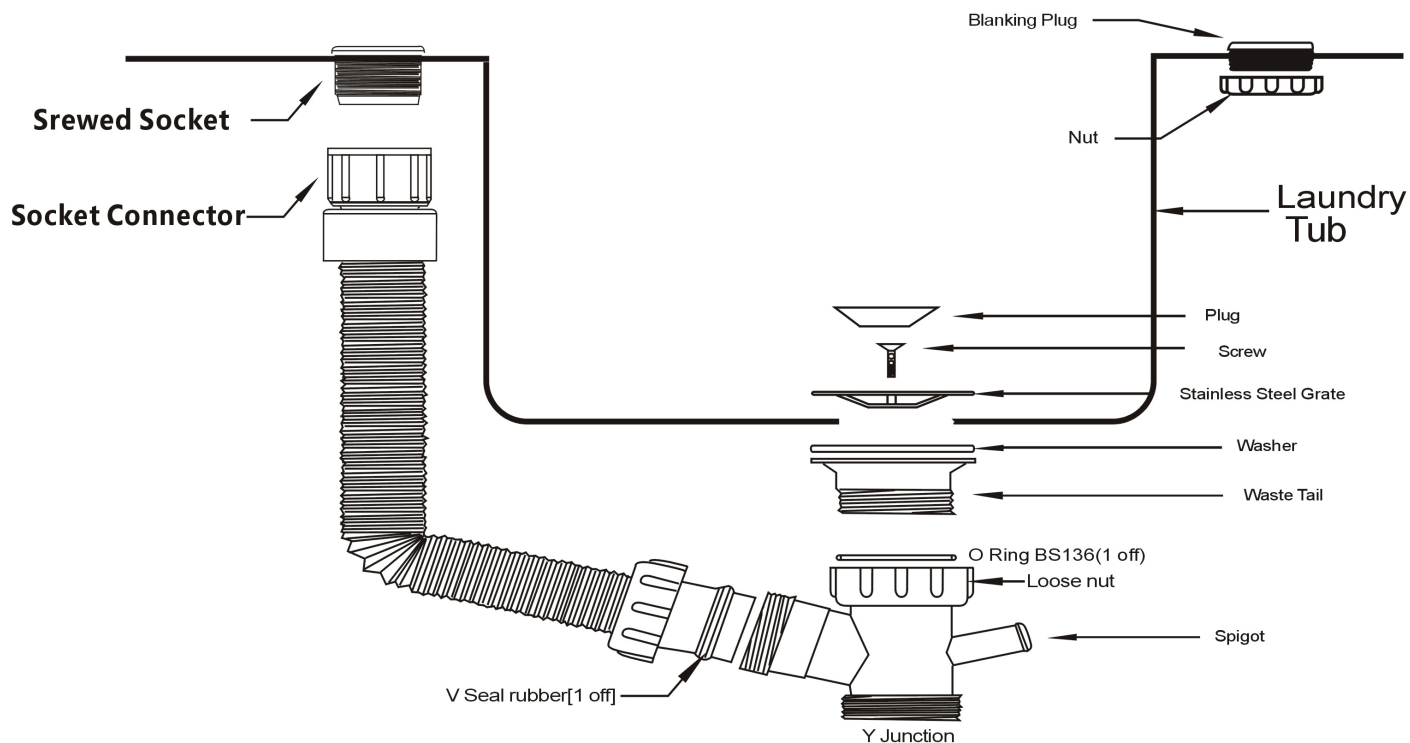

Installation of Rinse By-Pass and Blanking Plug is to be performed before inserting trough.

1: Component List

- a) 1 x Y Junction
- b) 1 x Flexible Hose with 40mm Nut & Screwed Socket Connector
- c) 1 x Screwed Socket
- d) 1 x Blanking Plug & Back Nut
- e) 1 x 40mm V Seal
- f) 1 x O Ring – BS136

Installation Instruction

- A) Determine which hole is to be used (i.e. Closest to washing machine) and insert By-Pass Screwed Socket Connector from the top. Attach the female threaded end of the flexible hose from the underside of the trough and tighten firmly by hand.
- B) Insert blanking plug into unused hole and attach nut from the underside. Tighten firmly by hand.
- C) Connect the Y Junction to the plug and waste using the 'O' Ring provided and tighten firmly by hand.
- D) Attach Flexible hose to the Y Junction using the V Seal provided and tighten 40mm nut firmly by hand. Ensure flexible hose end is fully inserted prior to tightening.

General Notes

Once assembled the Rinse By-Pass can be fully dismantled as no glues or sealants are required. Flexible Hose will contour to shape as required. Flexible hose extends to 800mm.



GWA
Bathrooms & Kitchens

Caroma Industries Limited
ABN 35 000 189 499
1 Melito Court, Prestons NSW 2170
National Customer Call Centre
13 14 16
caroma.com.au



New Zealand
National Customer Call Centre
09 279 2700
caroma.co.nz