


STEP 5

When the bath is in position and the installation is complete, apply a bead of silicone sealant around the bottom of the bath to secure it to the floor. When applying silicone around the base surrounding, leave a 20mm gap in an inconspicuous position. Refer to **Figure 6**. Bath should be secured to the wall by applying silicone sealant around the edge. Refer to **Figure 7** and **Figure 8**.

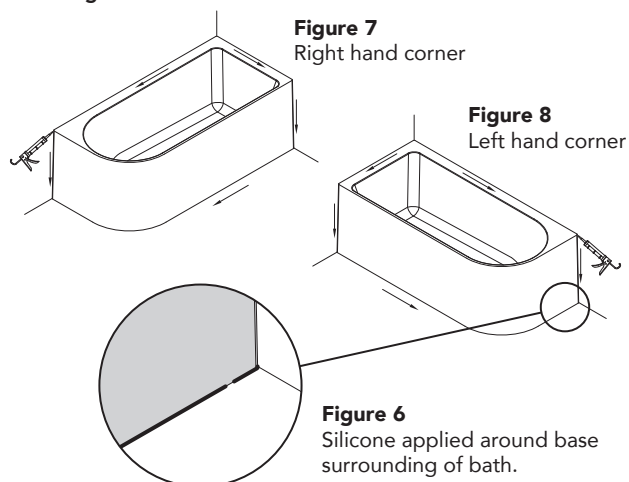

STEP 6

Rest the bath for a minimum 24 hours to allow the silicone to fully cure.

All dimensions are in millimeters and are subject to normal manufacturing variations. Therefore, Caroma reserves the right to vary specifications without notice.



In Australia
For more information call 1300 CAROMA
or go to www.caroma.com.au

* For full warranty terms and conditions,
please visit www.caroma.com.au

In New Zealand
For more information call 09 279 2700
or go to www.caroma.co.nz

* For full warranty terms and conditions,
please visit www.caroma.com.au

© Copyright 2014. Caroma Industries Limited.
ABN 35 000 189 499
All rights reserved.

Date: 01/10/2024
Revision No: 1

CAROMA

Corner Bath

Care & Installation Guide

This manual has to be left with the end user

WARNING:

Before commencing installation, please read these instructions carefully. Installation must comply with all State By-Laws and any requirements imposed by local authorities.



 **GWA** Smarter Solutions

Congratulations on the purchase of your new Caroma bath. We trust you will enjoy many years of relaxation with your beautiful new bath, turning your bathroom into a stylish retreat.

CAROMA ACRYLIC CORNER BATHS

Our products are made from sanitaryware grade acrylic. It resists chipping, will not rust and has excellent heat retention properties. Its surface finish has natural slip resistance.

CLEANING YOUR BATH

- To preserve the surface finish, after using your bath, clean with soft cloth and warm soapy water to wash away any body oils or soap residue that forms a ring tide mark.
- As a weekly cleaner we recommend warm, soapy water. Do not use powders, pastes, cream cleaners, thinners, window cleaning sprays or dry cleaning liquid, etc.
- Stubborn marks or fine scratches may be polished out with Brasso (for baths with a gloss finish surface only). **DO NOT USE** Brasso on baths with a matte finish surface.
- When coloured essentials oils are used, first test that the colour won't stain your bath. Always add oils into a bath full of water. Never pour them into an empty bath.

WARNING

BEFORE COMMENCING INSTALLATION, PLEASE READ THESE INSTRUCTIONS CAREFULLY. INSTALLATION MUST COMPLY WITH ALL STATE BY-LAWS AND ANY REQUIREMENTS IMPOSED BY THE LOCAL AUTHORITIES

WARNING

NO PUTTIES OR SILICONES CONTAINING LINSEED OIL ARE TO BE USED AS SEALANTS ON THE WASTE. WE RECOMMEND SANITARY GRADE SILICONE.

RECEIVING YOUR BATH

- Unpack and check for damage. After receiving your bath, please unpack and remove all plastic covering, checking carefully for any damage. Repack the bath if it is not being immediately installed. Caroma reserves the right to reject any claim for damage if not notified in a timely manner.
- Protect your bath. Before commencing installation, ensure the bath is completely protected, leave protection film in place until the bathroom is complete. Scratches and cracks incurred during installation are not covered by the warranty.

IMPORTANT

Water test your bath to ensure it drains correctly.

Compliance with AS3740 Waterproofing of wet areas within residential buildings applies when installing baths.

All materials to comply with appropriate Australian & NZ Standards.

STEP 1

Adjust the bath feet so they extend 3mm past the base of the bath.

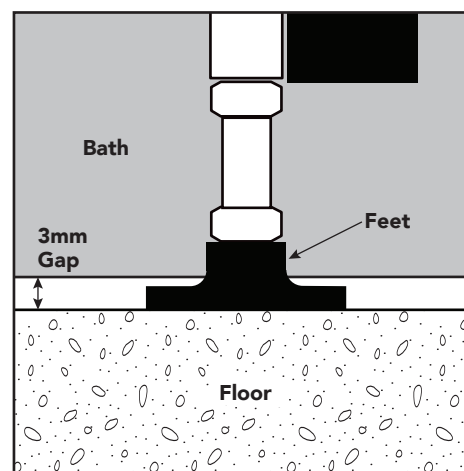


Figure 1
Feet set at 3mm

STEP 2

For Flexible Connector Installation

Carefully tilt bath on its side and use flexible connector (not supplied) to connect the waste outlet to the drain, as illustrated in Figure 2.

Be sure to protect the bath surface. Damage during installation is not covered by warranty.

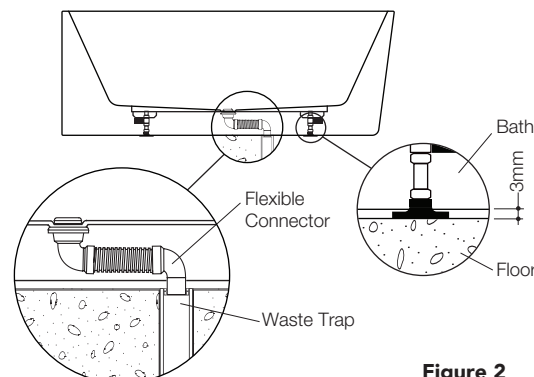


Figure 2
Flexible Connector Installation
(not supplied)

STEP 3

Simply drill and secure the foot lockers to the floor where the two back feet of the bath will be positioned on installation. Refer to Figure 4. Please consider compliance with local authority water proofing regulations when installing foot lockers.



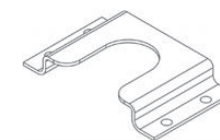


Figure 3
Foot Locker

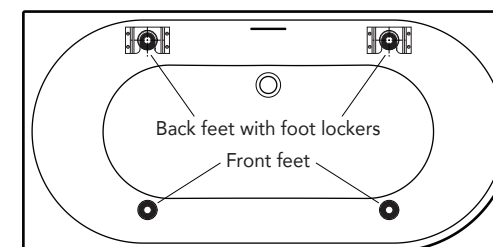

(Left hand corner) Front of bath where you normally enter from.

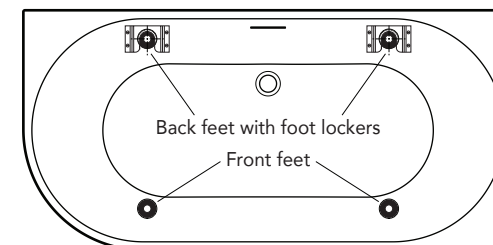

(Right hand corner) Front of bath where you normally enter from.

Figure 4
Corner bath with foot lockers

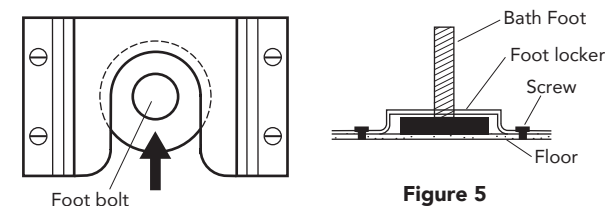


Figure 5
Foot installation to foot locker

Slide the bath into position for the back feet to glide under and into the foot lockers. Refer to Figure 5. Make sure that the flexible connector is not kinked upward upon installation, as this will result in drainage issues.

See over for Steps 5 and 6