

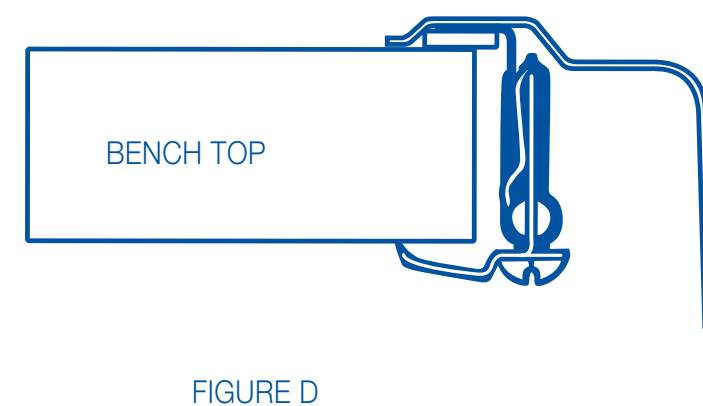
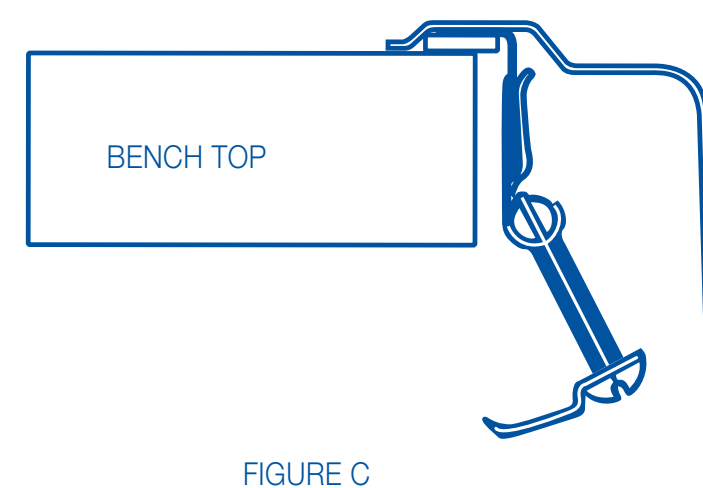


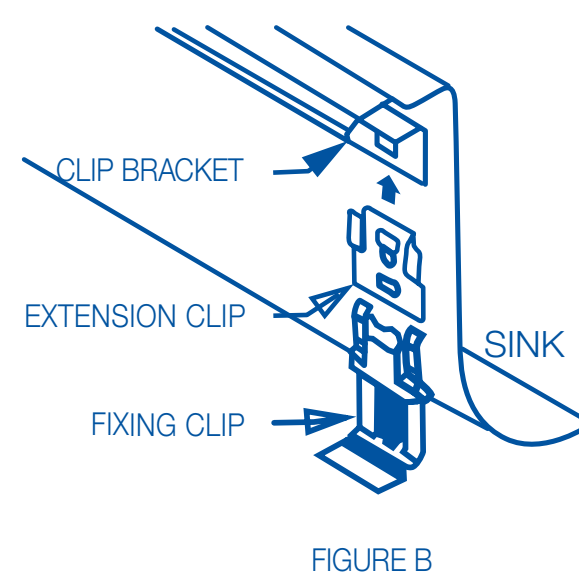

STAINLESS STEEL CLEANERS SINK

INSTRUCTIONS TO INSTALL THE BABY BATH ONLY

1. Finish cutting out this template with a knife or scissors.
2. Position the template on the bench top and draw a pencil line against the edge of the template. Then check the size against the overall cutout dimensions before cutting the bench top.
3. Following the inside edge of the pencil line carefully cut out the bath hole in the bench top. An exact cut is required to obtain the best fit.
4. For a normal thickness benchtop the enclosed fixing clips should be suitable and can be attached evenly around the retaining strip under the flange as shown in Figure A. If the benchtop thickness exceeds the range of the fixing clips, then rebate the underside of the benchtop 15mm and at an appropriate depth to accommodate the fixing clips as shown in Figure B.
5. Position the bath in the cut out hole so that it is properly aligned. Check that the bath sealing tape will seal evenly around the edge of the hole.
6. Remove the bath and install the waste assemblies and the tap (if required). It is suggested that silicone sealer be used between the waste grate and the bath hole.
7. Remove the protective backing from the sealing tape, apply a continuous bead of silicone sealer between the sealing tape and the edge of the bath and quickly place the bath in position.
8. Tighten the fixing clips evenly, using a low torque setting on any electric screw driver used. Over tightening the clip may strip the thread.
9. Plumb up the waste fittings.

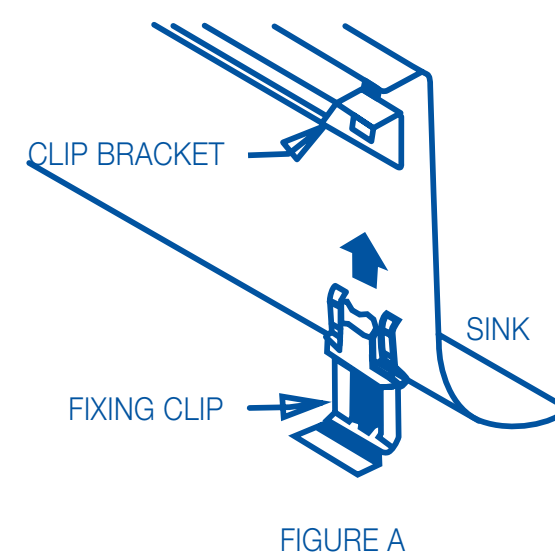

INSTRUCTIONS TO INSTALL THE CLEANERS SINK ONLY

1. Suitable wall mounting brackets Y5904 (2 required) or Y5914 (1 pair) for heavy duty installations may be purchased through your plumbing supplier.
2. Draw a level line on the wall at the desired height for the basin top. Mark width of sink on the line, in its desired position.
3. Fasten one bracket to the wall so that the top is 1mm below the horizontal line and 1mm inside the sink width mark, from one end. The bracket should be orientated so bolt holes are vertically aligned and below the basin.
4. Slide unsecured bracket into other side of the basin and then slide the basin onto the fastened bracket. Hold the sink level and mark the bolt holes.
5. Remove the basin and fasten the remaining bracket to the wall using the marked hole positions. Install waste assemblies and tap(s) (If required). It is suggested that silicone sealer be used between the waste grate and basin outlet hole.
6. Slide the basin onto the brackets so it is firmly against the wall and secure through the tiling flange.
7. Plumb up the tap and waste fittings