



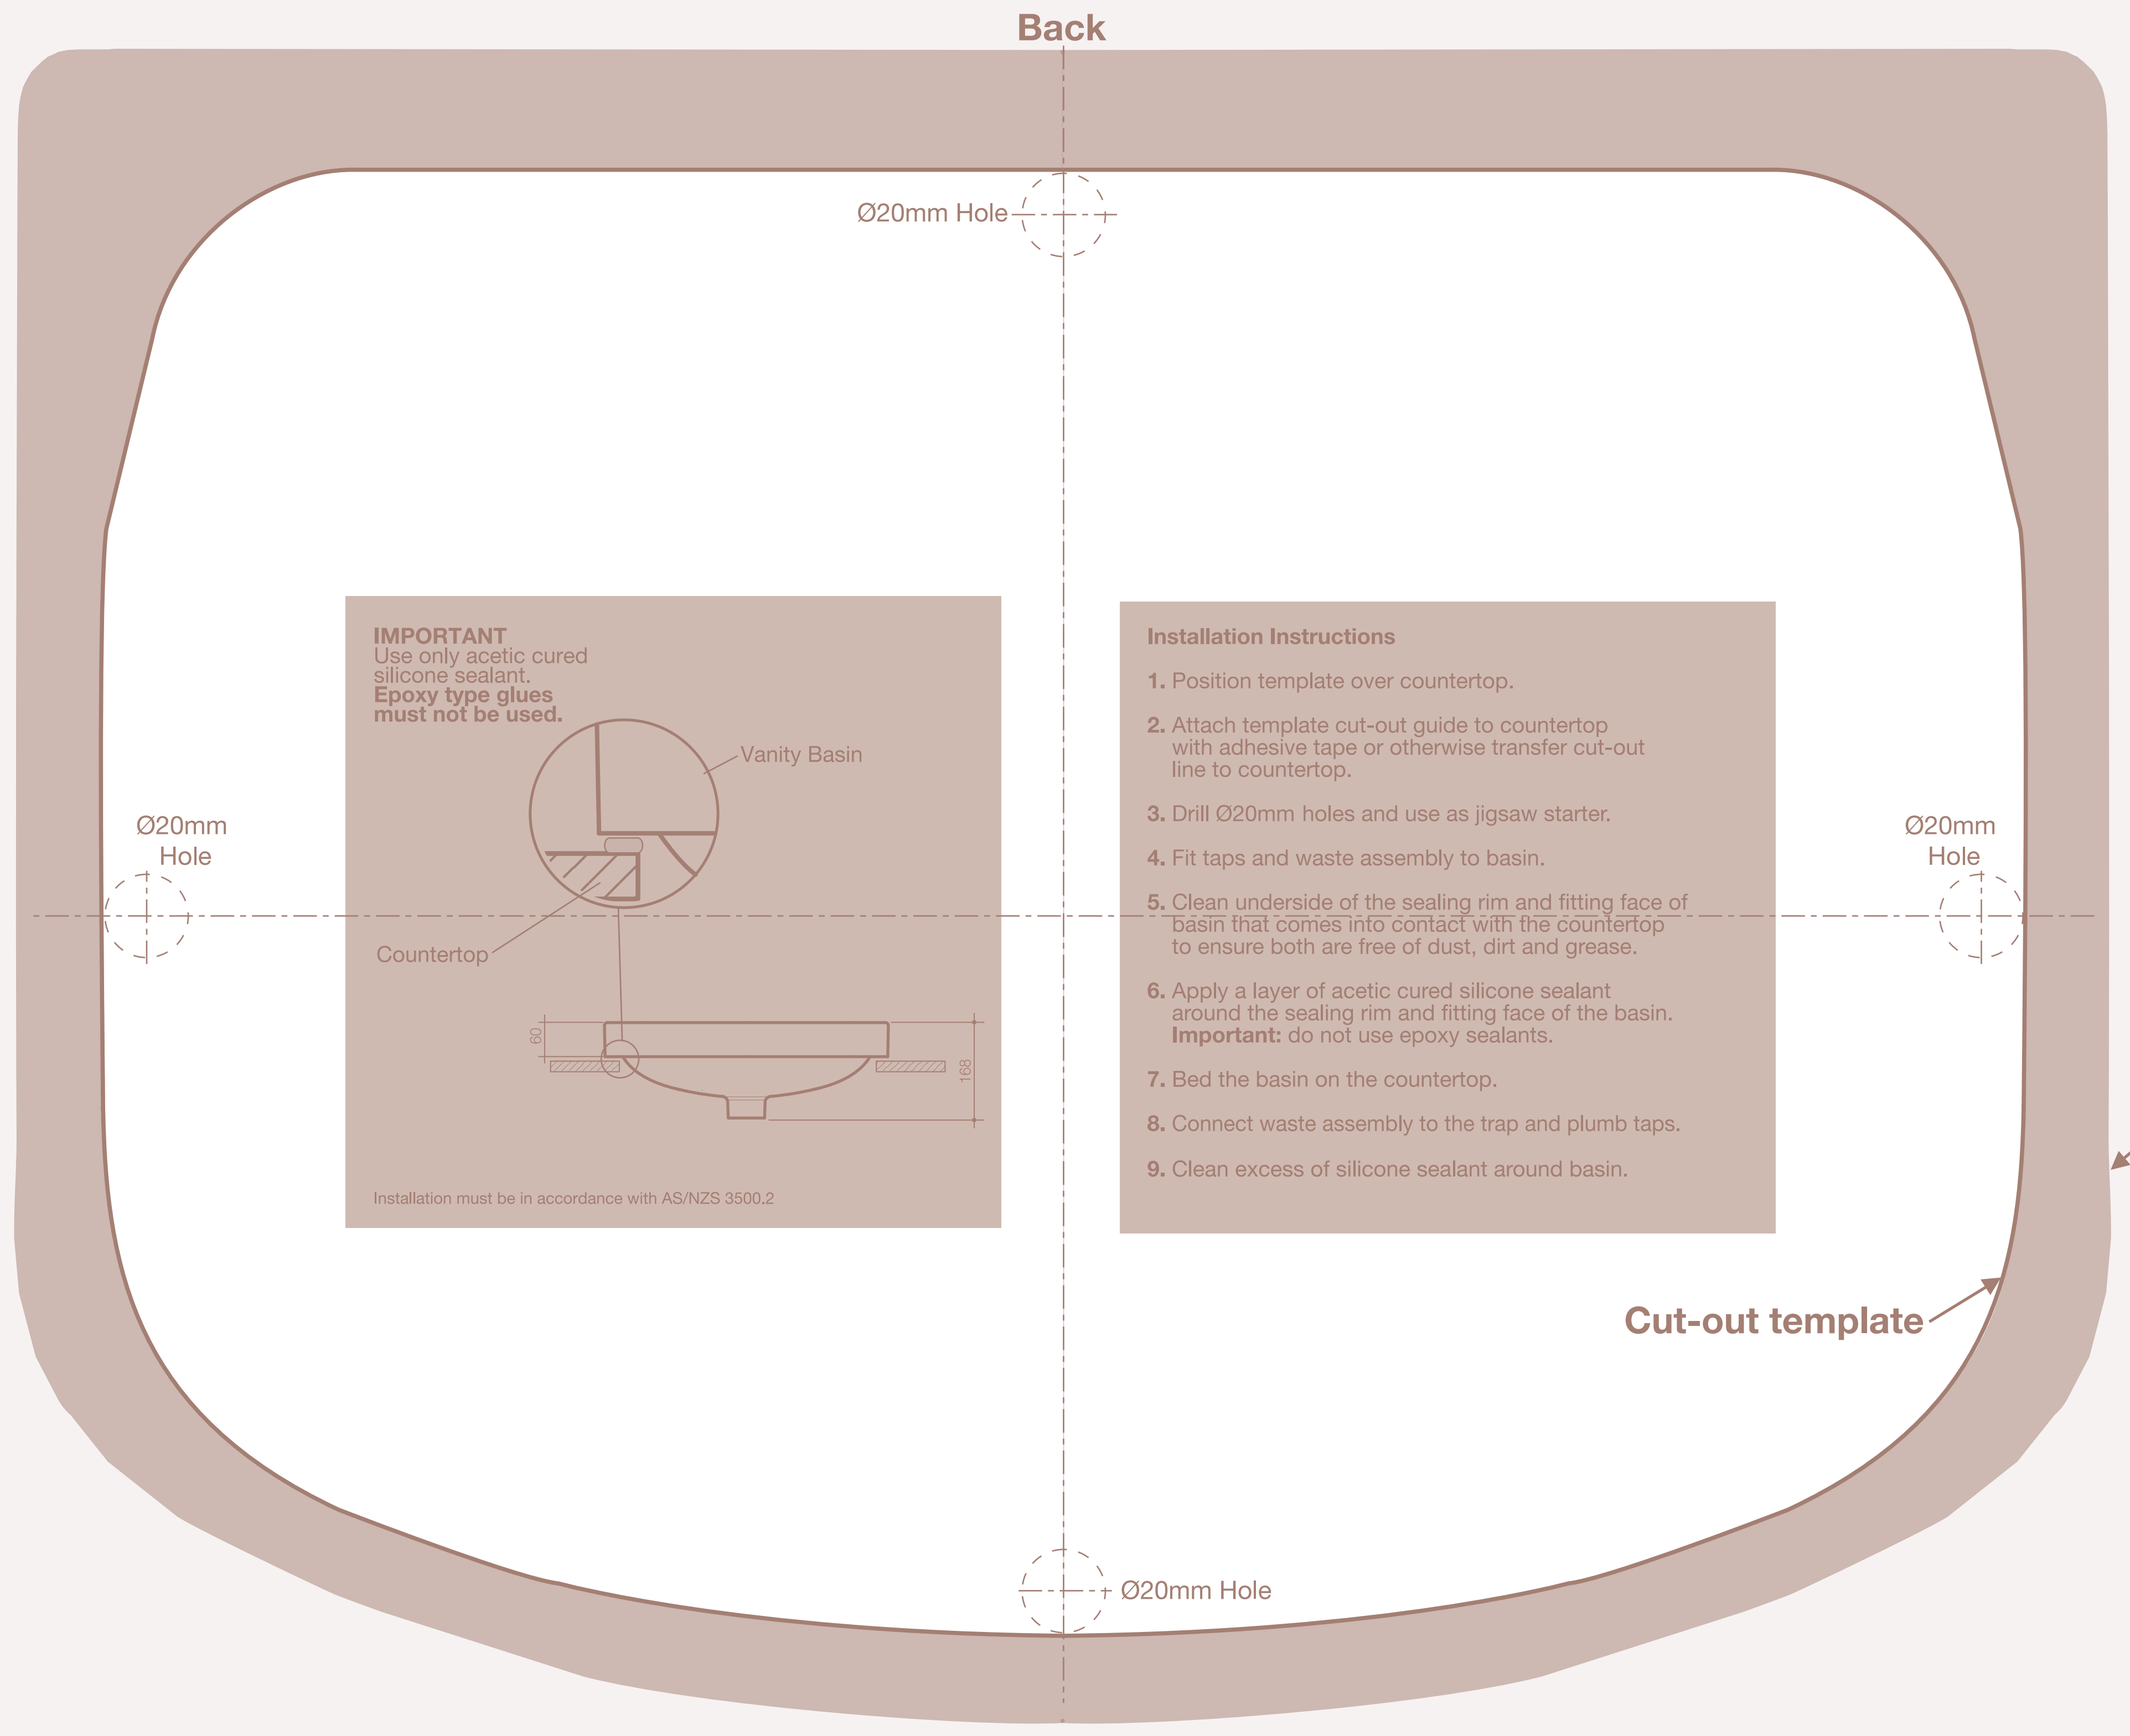

CAROMA

Forma Ceramic Inset Vanity Basin

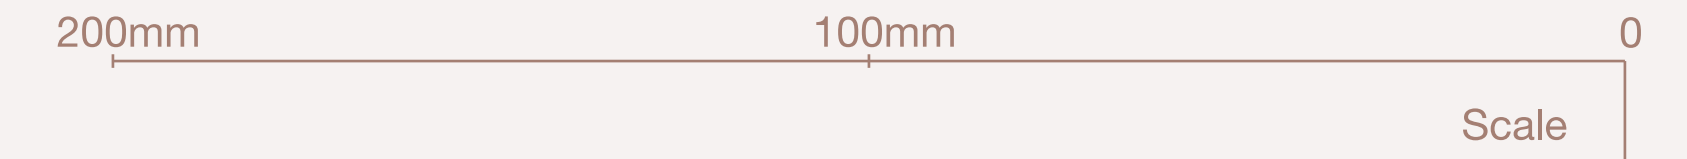

IMPORTANT
Use only acetic cured silicone sealant.
Epoxy type glues must not be used.

Installation must be in accordance with AS/NZS 3500.2

- Installation Instructions**
1. Position template over countertop.
 2. Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
 3. Drill Ø20mm holes and use as jigsaw starter.
 4. Fit taps and waste assembly to basin.
 5. Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
 6. Apply a layer of acetic cured silicone sealant around the sealing rim and fitting face of the basin.
Important: do not use epoxy sealants.
 7. Bed the basin on the countertop.
 8. Connect waste assembly to the trap and plumb taps.
 9. Clean excess of silicone sealant around basin.

Basin Sealing Rim

Cut-out template

999757CIL