




CAROMA
Forma
Ceramic
Semi-Recessed
Basin

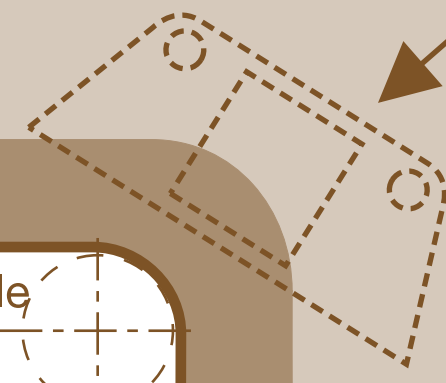


Position of D.250 Bracket

Ø20mm Hole

Countertop (horizontal surface)

Counter apron (vertical surface)

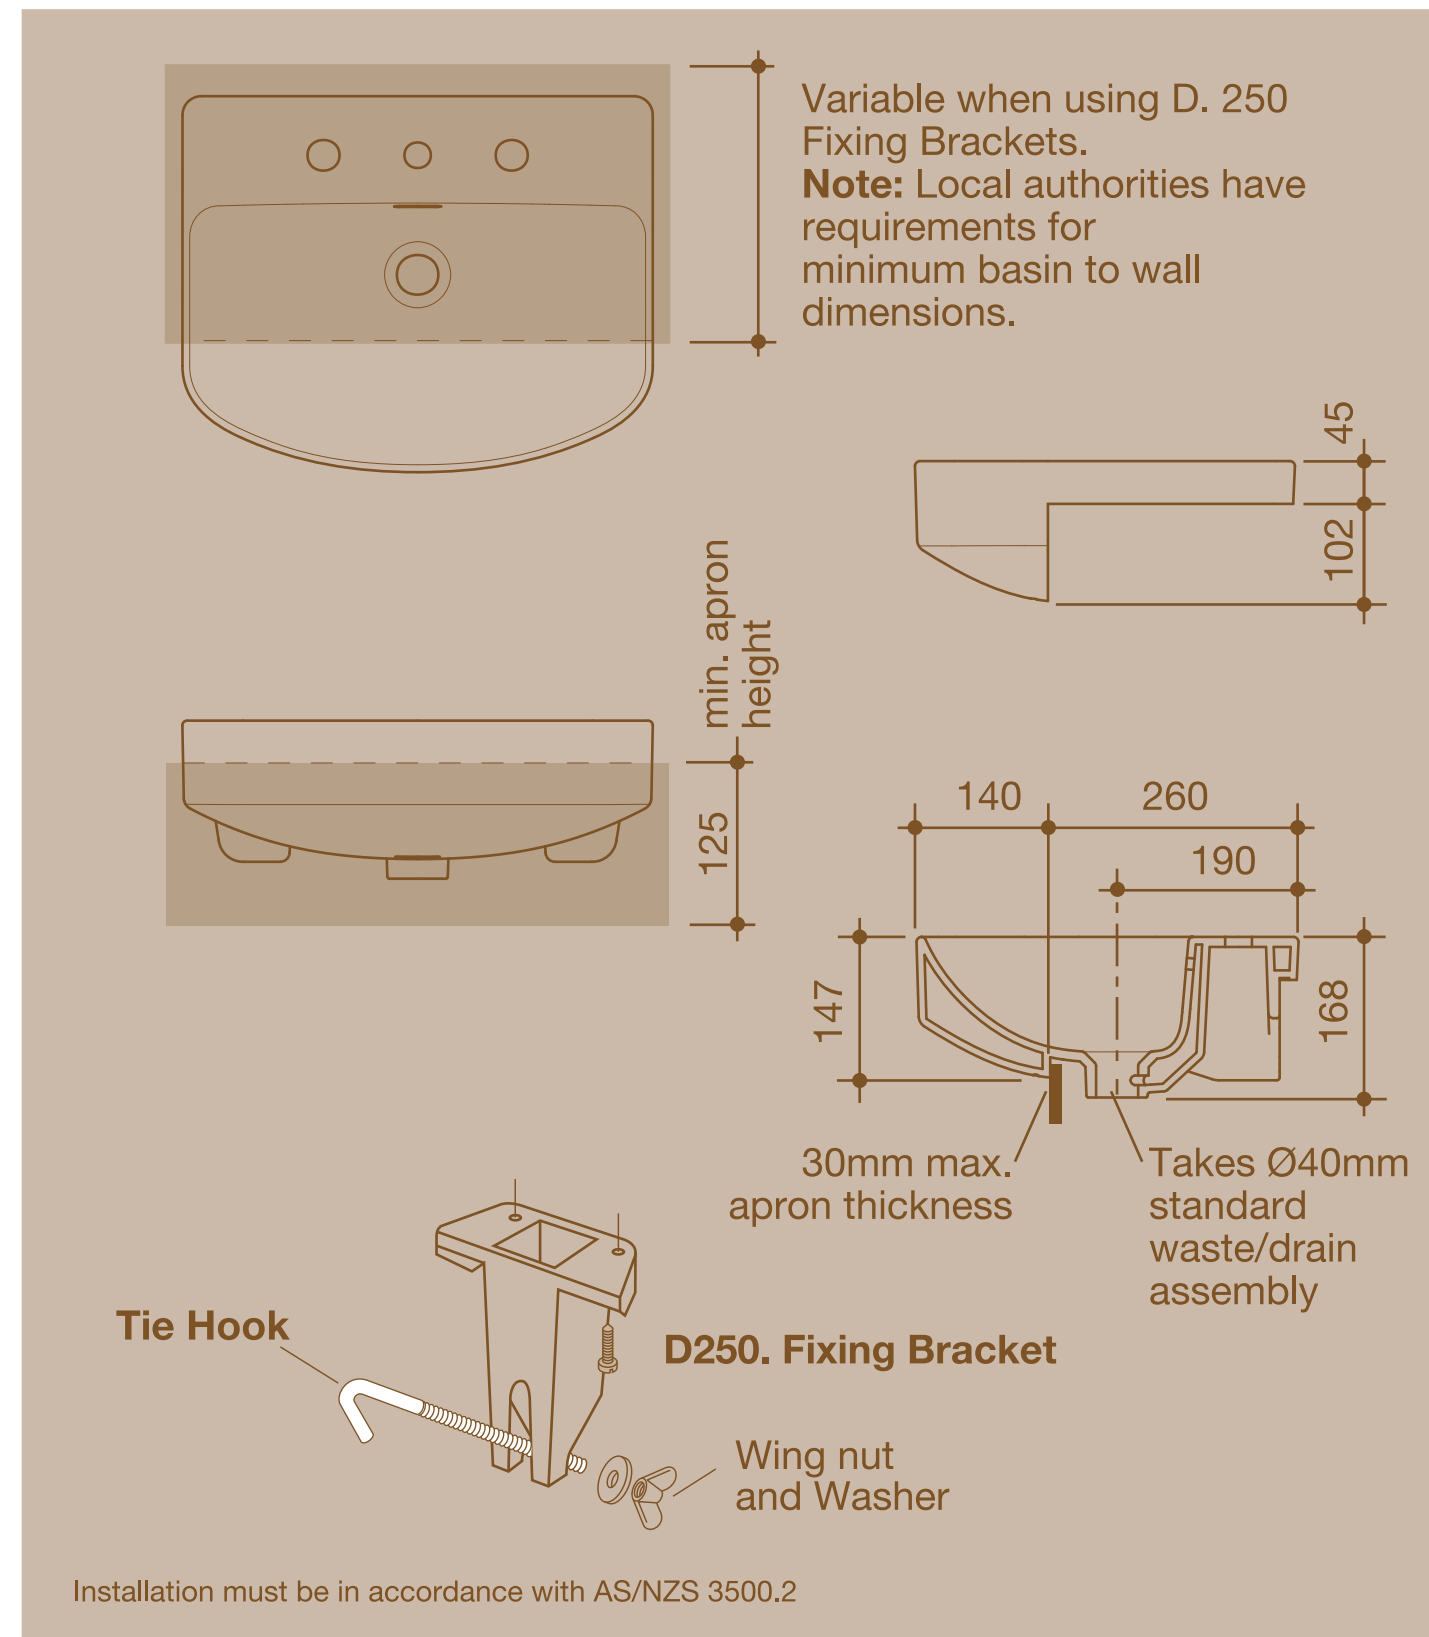

- 1 - Fold template and place over countertop and apron.
- 2 - Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
- 3 - Cut out countertop with care.
- 4 - Fit taps and waste assembly to basin.
- 5 - Apply a layer of acetic cured silicone sealant around the sealing rim and apron.
Important: do not use epoxy sealants.
- 6 - Align and secure the D250 brackets to the underside of countertop in the corner positions as shown.
- 7 - Attach the Tie Hooks to the holes in the basin and lower into opening. Secure from underneath.
- 8 - Connect waste assembly to trap and plumb taps.


IMPORTANT :
EPOXY TYPE GLUES MUST NOT BE USED.

NOTE :
FOR GRANITE OR MARBLE TOPS, FIX TWO 20MM THICK WOODEN BLOCKS IN THE BRACKET POSITION ON THE UNDERSIDE OF THE GRANITE/MARBLE WITH FAST SETTING TWO PART EPOXY. WHEN FULLY SET SCREW THE BRACKETS INTO POSITION ON THE WOODEN BLOCKS. OTHER SUITABLE FASTENING SYSTEMS MAYBE USED.

IMPORTANT-
PLEASE NOTE: THE TEMPLATE FOLD LINE BETWEEN THE HORIZONTAL AND VERTICAL SURFACES MUST REMAIN AS A SHARP RIGHT ANGLE. ROLLING THE TEMPLATE OVER A RADIUS MAY CAUSE THE CUT OUT TO BE TOO BIG FOR THE BASIN.

Basin Sealing Rim

Fold Cut-out Template

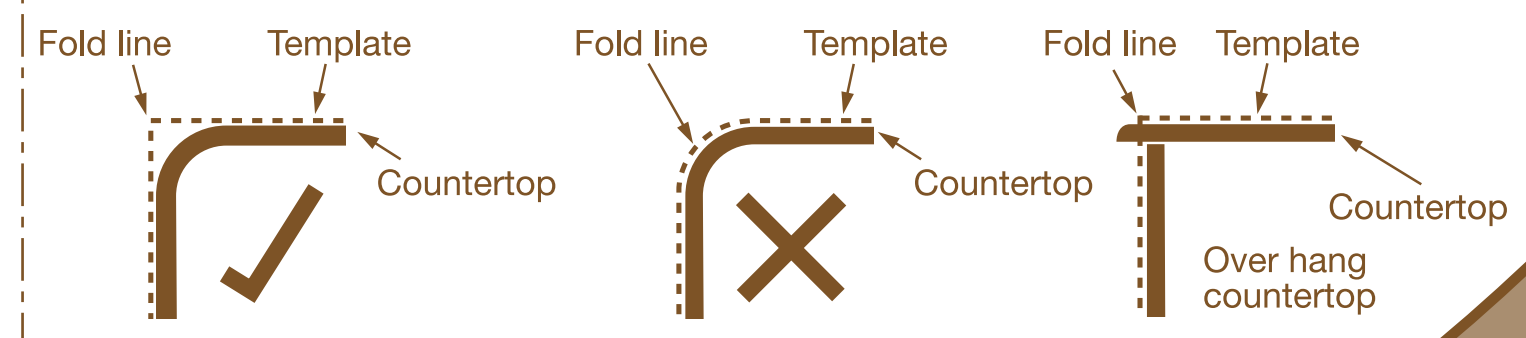

For over hang countertop situation, position the template fold line on the countertop and apron as detailed.

999758CIL

Counter apron (vertical surface)