
All Pressure Kit

Unequal Pressure and Equal Low Pressure Installation*:

Remove installed flow restricted aerator using the supplied cache key. Replace with unrestricted aerator/flow straightener.

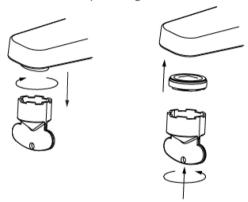

Unequal Pressure Installation*:



install the brass nipple into the cold inlet hose.