

Preparation For Bedding

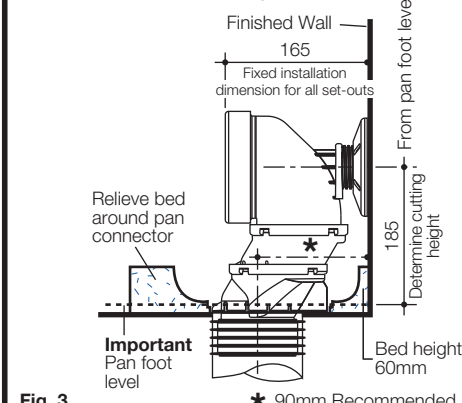


Fig. 3

Blanking Cap

Pan Foot

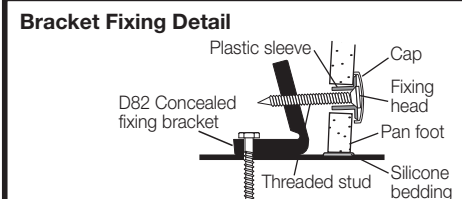


Fig. 7

Flush Pipe Detail



Fig. 9 — Fixing Bracket

- 1- Position and push pan into Uni-Orbital® connector and flushpipe using the marked centre line on the wall as a guide to ensure that all fittings locate correctly. Remove the pan.
- 2- Locate the D82 Concealed Fixing brackets (supplied) into position on centre line of pan 250mm from the finished wall and mark bracket fixing hole centres on finished floor.
- 3- Drill two holes in the marked positions on the floor. The hole diameter is dependent on the type of fixing system and floor finish.
- 4- Secure Brackets to finished floor.
- 5- Ensure that the area around the floor is clean and free from building material.

- Installation must be in accordance with AS/NZS 3500.1 and AS/NZS 3500.2