



stylus **Symphony**





**Vitreous China
Semi-Recessed Basin**

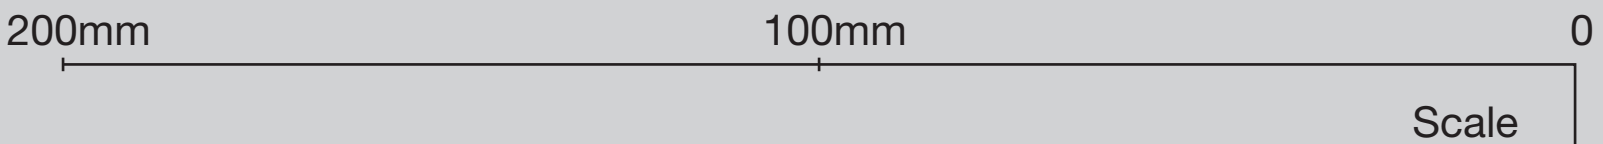

Countertop (horizontal surface)
↑
↓
Counter apron (vertical surface)

Fold

Fold

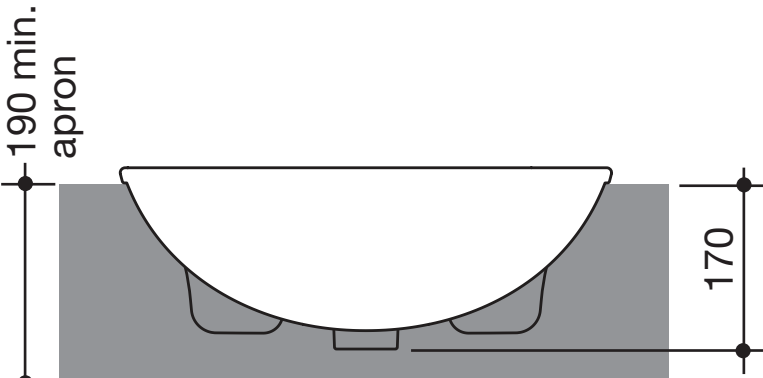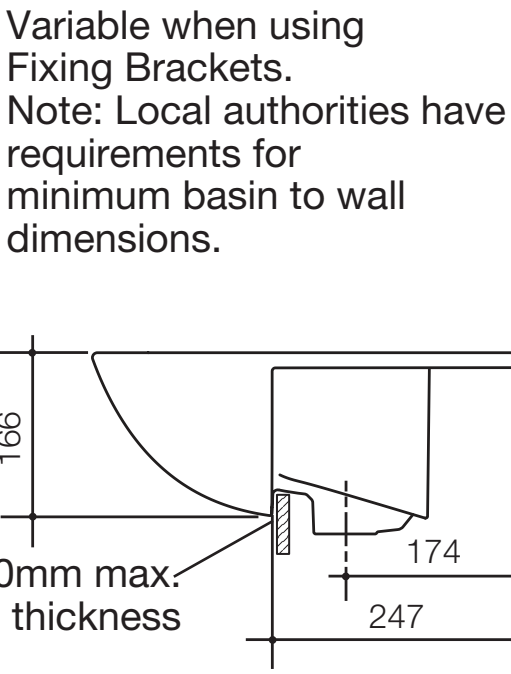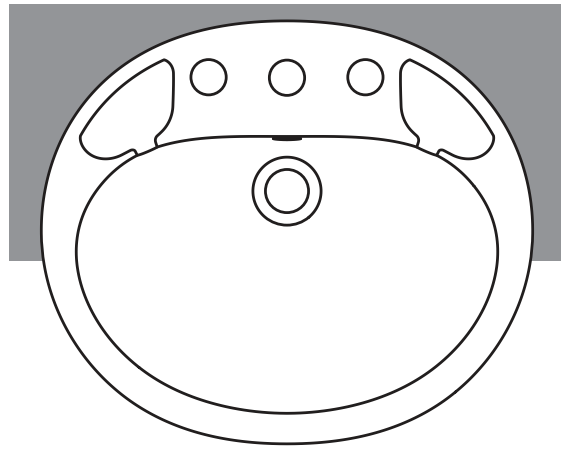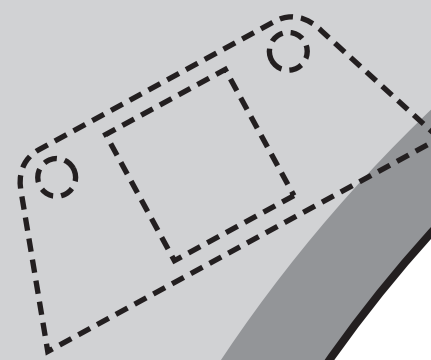

Installation must be in accordance with AS/NZS 3500.2

Tie Hook

Fixing Bracket

Wing nut and Washer


Ø20mm hole

PLUMBERS INSTALLATION INSTRUCTIONS

- 1- Fold template and place over countertop and apron.
- 2- Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
- 3- Cut out countertop with care.
- 4- Fit taps and waste assembly to basin.
- 5- Apply a layer of acetic cured silicone sealant around the sealing rim and apron.
Important: do not use epoxy sealants.
- 6- Align and secure the brackets to the underside of countertop in the corner positions as shown.
- 7- Attach the brass Tie Hooks to the holes in the basin and lower into opening. Secure from underneath.

NOTE :
FOR GRANITE OR MARBLE TOPS, FIX TWO 20MM THICK WOODEN BLOCKS IN THE BRACKET POSITION ON THE UNDERSIDE OF THE GRANITE/MARBLE WITH FAST SETTING TWO PART EPOXY.
WHEN FULLY SET SCREW THE BRACKETS INTO POSITION ON THE WOODEN BLOCKS. OTHER SUITABLE FASTENING SYSTEMS MAYBE USED.

IMPORTANT- PLEASE NOTE: THE TEMPLATE FOLD LINE BETWEEN THE HORIZONTAL AND VERTICAL SURFACES MUST REMAIN AS A SHARP RIGHT ANGLE. ROLLING THE TEMPLATE OVER A RADIUS MAY CAUSE THE CUT OUT TO BE TOO BIG FOR THE BASIN.

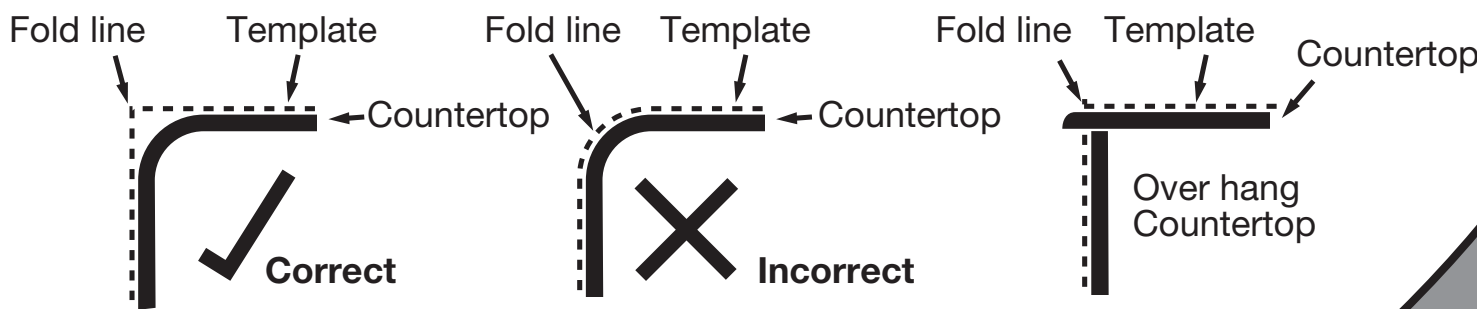

For over hang Countertop situation, position the template fold line on the countertop and apron as detailed.

Cut-out Template

Sealing Rim


Ø20mm hole

999808TMC

Issue No: 2
24.05.23

stylus **Symphony**

**Vitreous China
Semi-Recessed Basin**

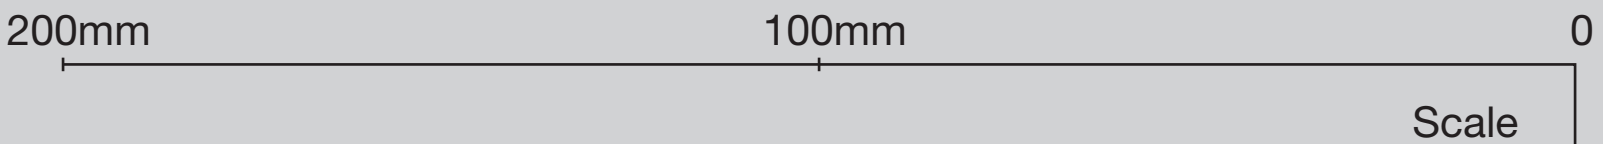


100mm
200mm

Countertop (horizontal surface)
Counter apron (vertical surface)

Fold

Fold

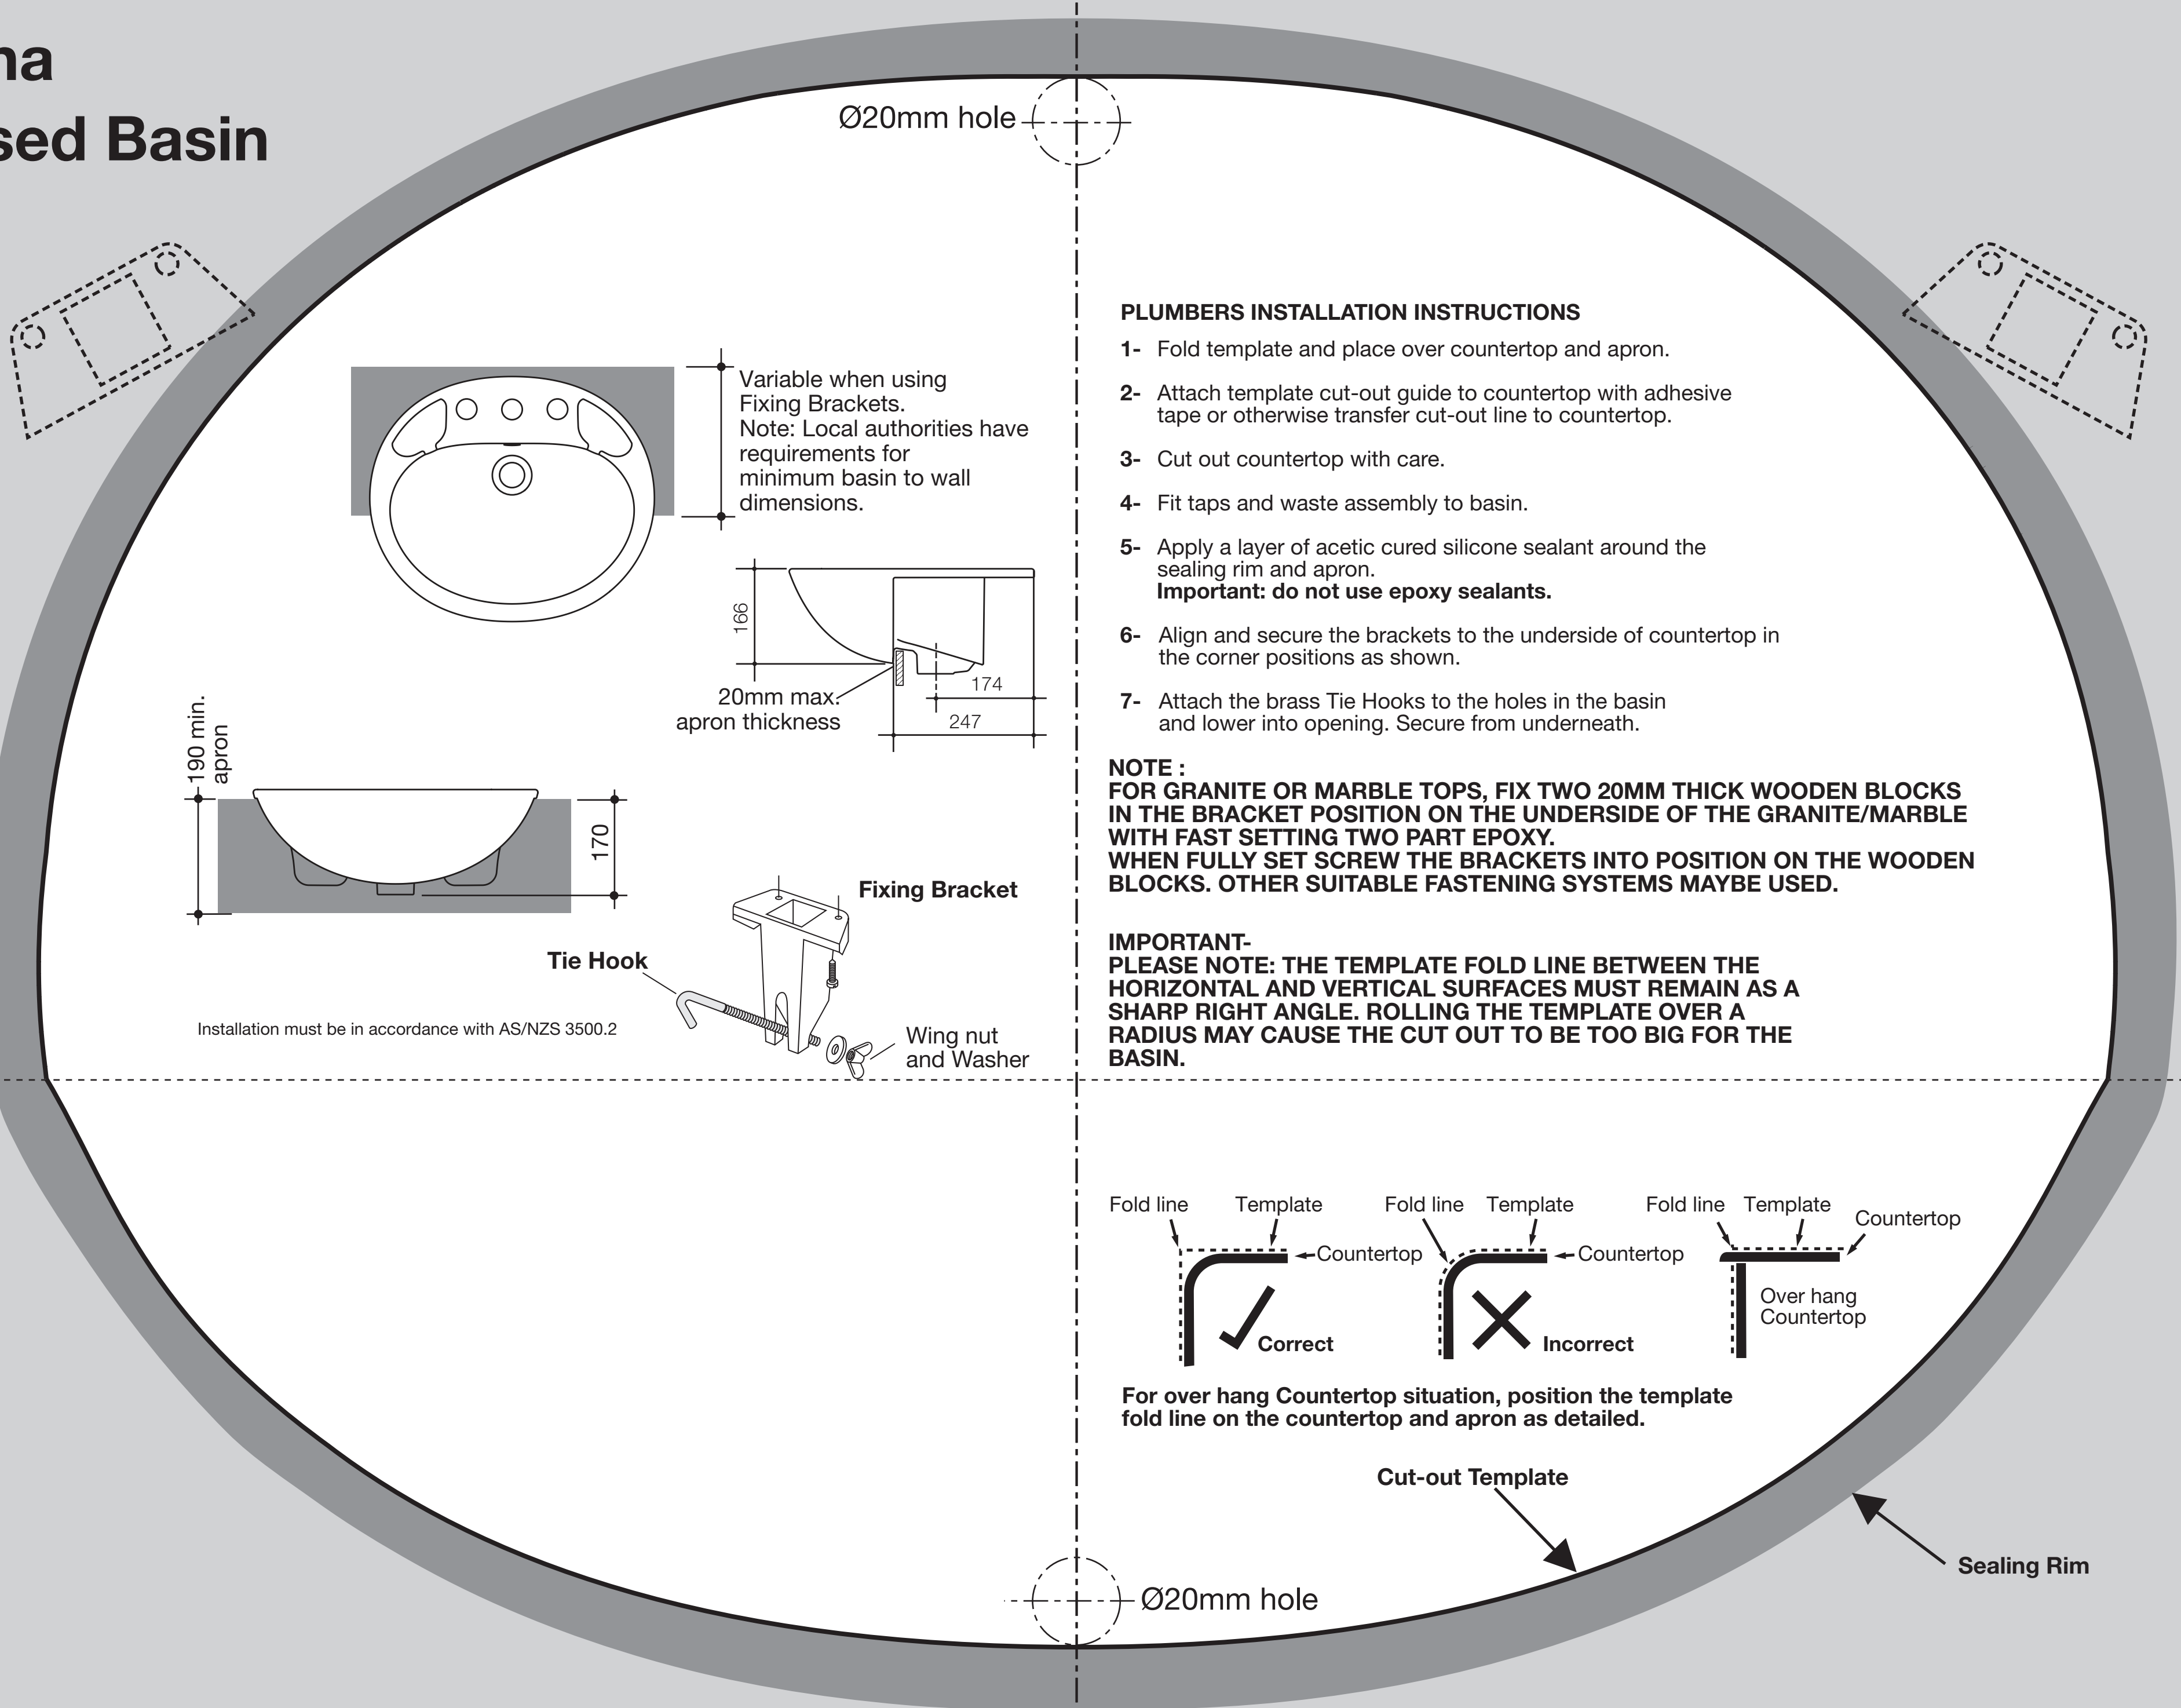


PLUMBERS INSTALLATION INSTRUCTIONS

- 1- Fold template and place over countertop and apron.
- 2- Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
- 3- Cut out countertop with care.
- 4- Fit taps and waste assembly to basin.
- 5- Apply a layer of acetic cured silicone sealant around the sealing rim and apron.
Important: do not use epoxy sealants.
- 6- Align and secure the brackets to the underside of countertop in the corner positions as shown.
- 7- Attach the brass Tie Hooks to the holes in the basin and lower into opening. Secure from underneath.

NOTE :
FOR GRANITE OR MARBLE TOPS, FIX TWO 20MM THICK WOODEN BLOCKS IN THE BRACKET POSITION ON THE UNDERSIDE OF THE GRANITE/MARBLE WITH FAST SETTING TWO PART EPOXY.
WHEN FULLY SET SCREW THE BRACKETS INTO POSITION ON THE WOODEN BLOCKS. OTHER SUITABLE FASTENING SYSTEMS MAYBE USED.

IMPORTANT- PLEASE NOTE: THE TEMPLATE FOLD LINE BETWEEN THE HORIZONTAL AND VERTICAL SURFACES MUST REMAIN AS A SHARP RIGHT ANGLE. ROLLING THE TEMPLATE OVER A RADIUS MAY CAUSE THE CUT OUT TO BE TOO BIG FOR THE BASIN.

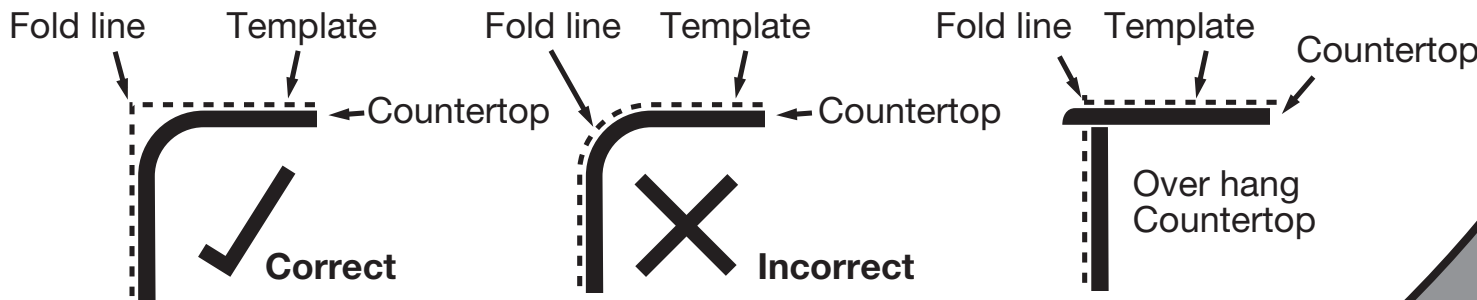

For over hang Countertop situation, position the template fold line on the countertop and apron as detailed.



Cut-out Template

Sealing Rim

999808TMC

Issue No: 2
24.05.23

Vitreous China Semi-Recessed Basin

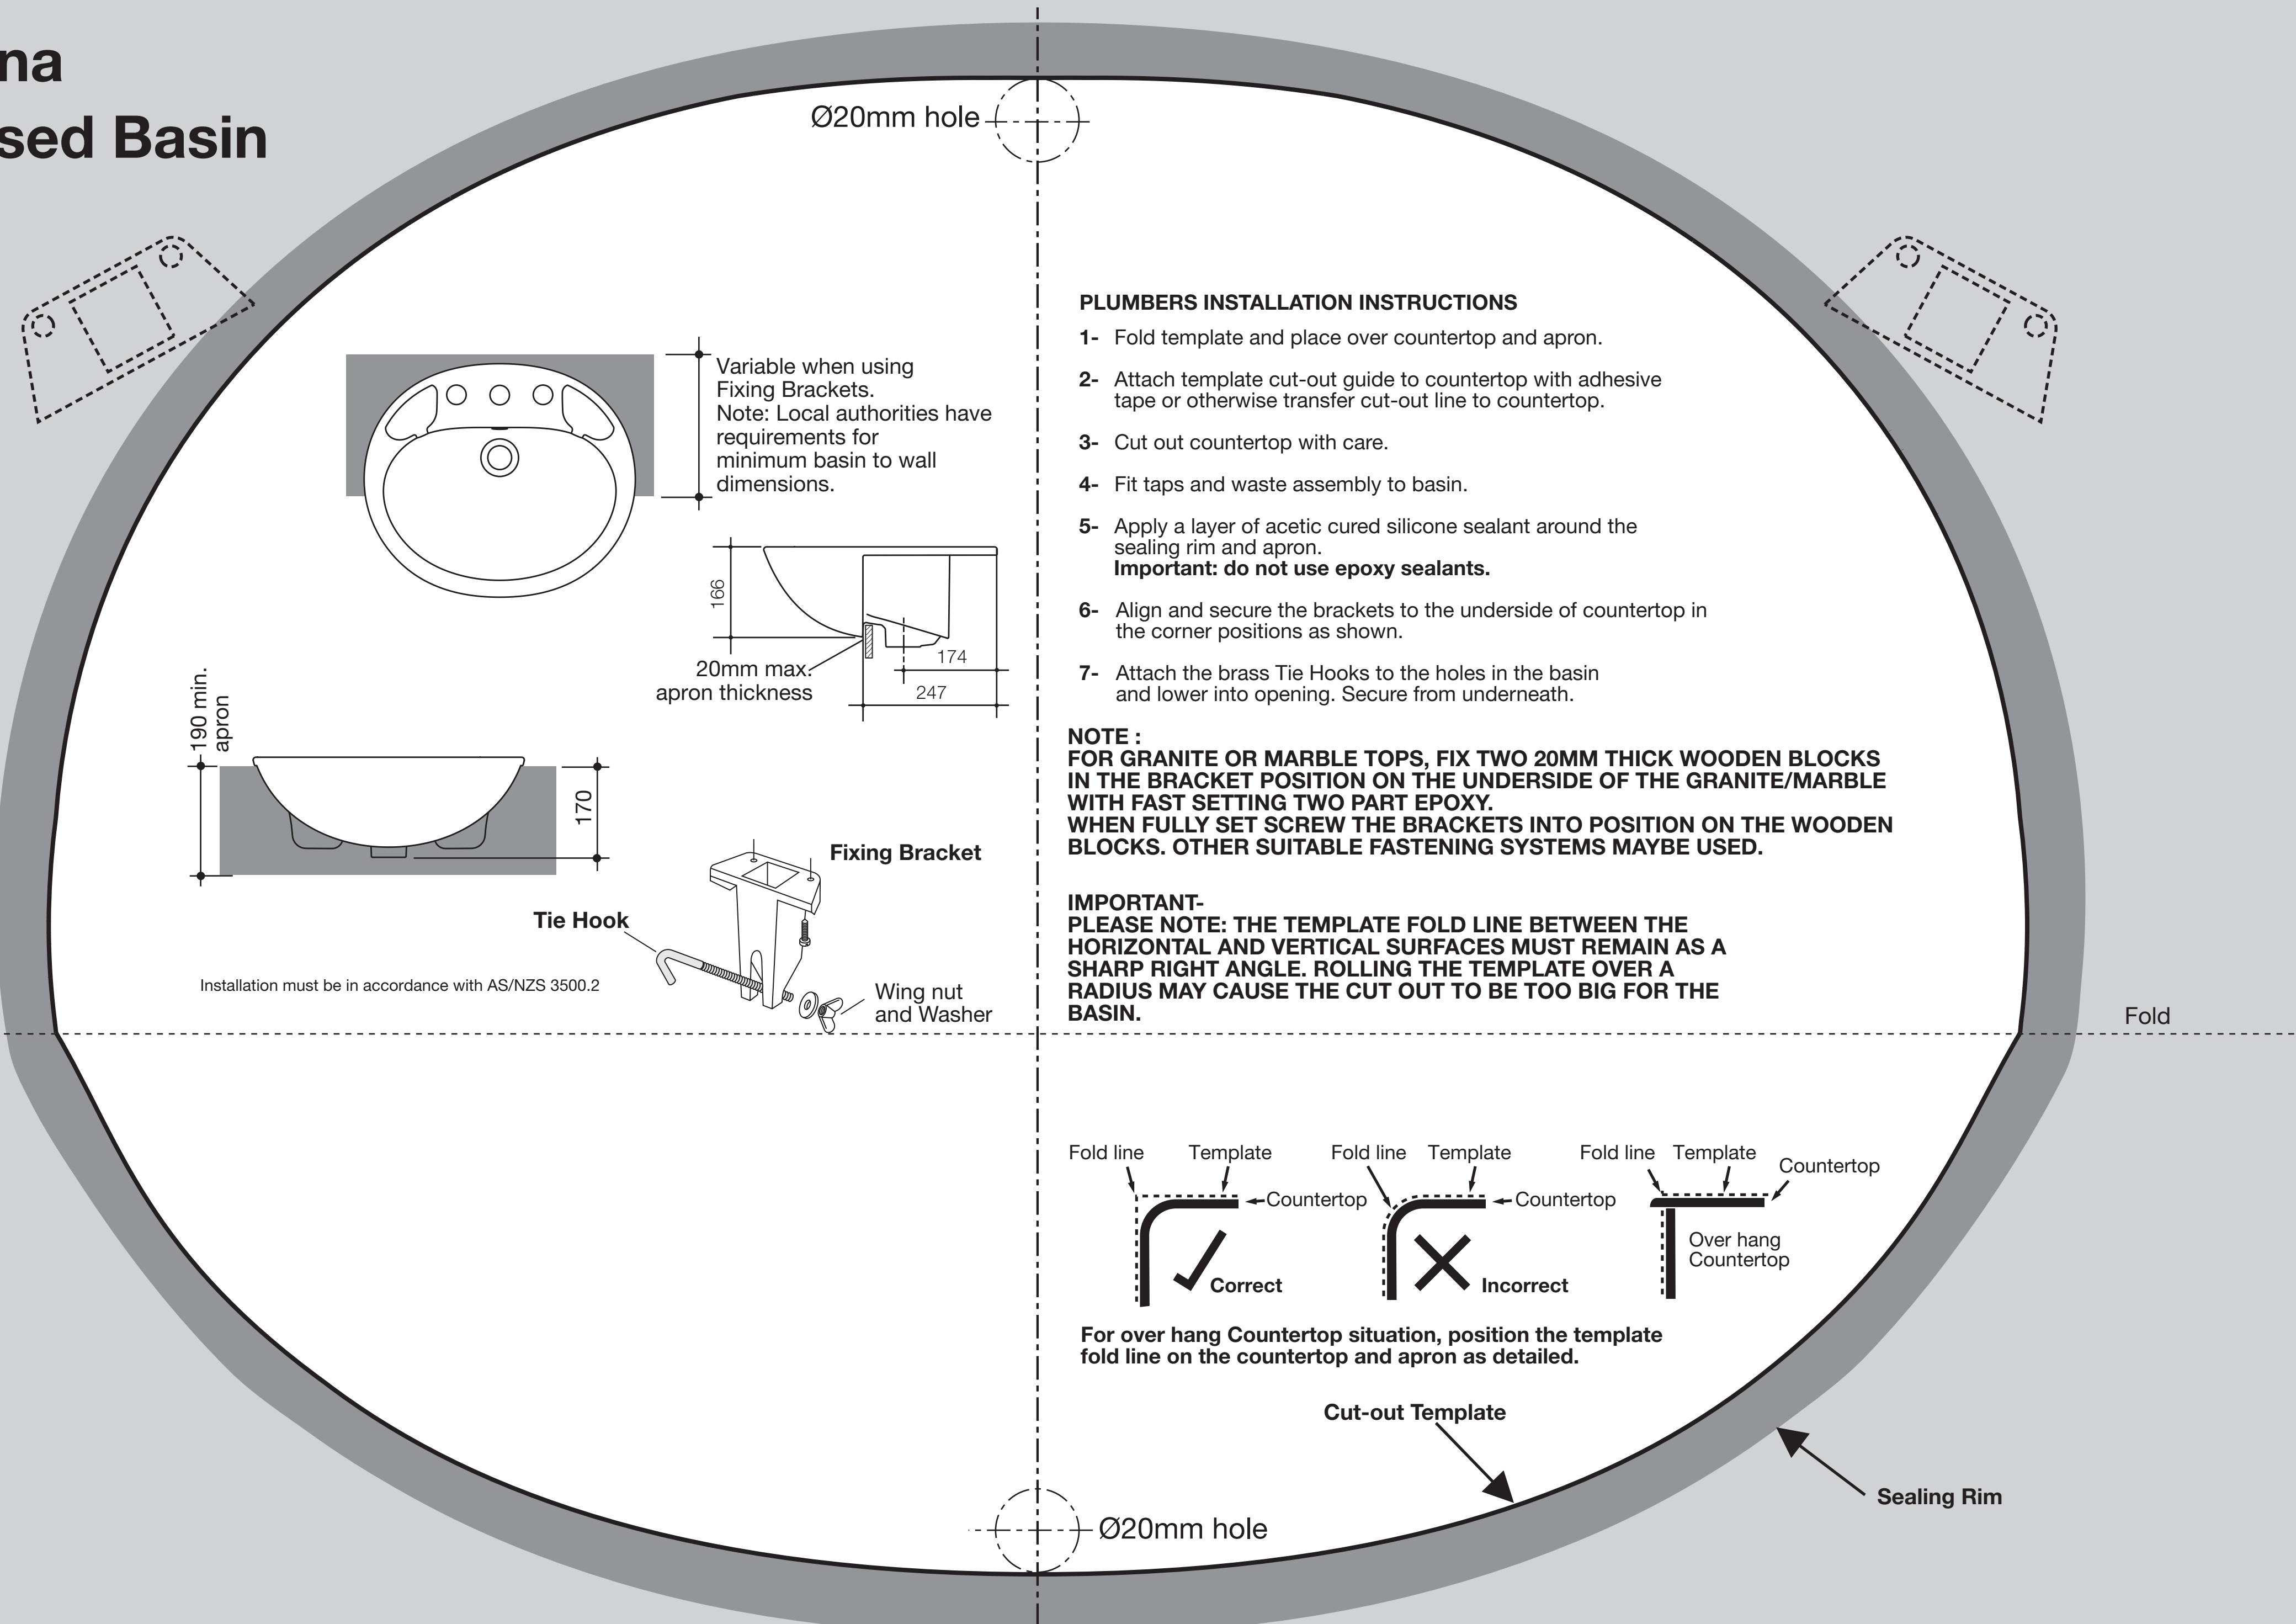

999808TMC