

CAROMA

Revision: 0
Date: 12/11/2024

Supersedes all previous issues

Urbane II

Corner Acrylic Bath

Nominal Sizes: 1500mm x 735mm x 560mm
1700mm x 790mm x 560mm



CAROMA

Urbane II

Acrylic Corner Bath

Nominal Size:

1500mm x 735mm x 560mm

1700mm x 790mm x 560mm



Pictured above: UII5LHCW Urbane II 1500 Left Hand Corner Bath

Combine the luxury of a freestanding bath with the practicalities of an island bath. This beautiful oval back to corner bath is perfect for bathrooms limited in space. A seamless design with minimalist styling, sitting flush to both corner walls is not only easy to clean but opens up the choice of tapware to wall bath mixers. Available in two sizes, there is a one or two person bath ready for a relaxing soak.

Urbane II Back to Corner Bath Left Hand Side 1500 (No Overflow) - Code No. UII5LHCW
 Urbane II Back to Corner Bath Right Hand Side 1500 (No Overflow) - Code No. UII5RHCW
 Urbane II Back to Corner Bath Left Hand Side 1500 (Overflow) - Code No. UII5LHCWOF
 Urbane II Back to Corner Bath Right Hand Side 1500 (Overflow) - Code No. UII5RHCWOF
 Urbane II Back to Corner Bath Left Hand Side 1700 (No Overflow) - Code No. UII7LHCW
 Urbane II Back to Corner Bath Right Hand Side 1700 (No Overflow) - Code No. UII7RHCW
 Urbane II Back to Corner Bath Left Hand Side 1700 (Overflow) - Code No. UII7LHCWOF
 Urbane II Back to Corner Bath Right Hand Side 1700 (Overflow) - Code No. UII7RHCWOF

Durability: Sanitaryware grade acrylic resists chipping, will not rust and has excellent heat retention properties. Its high gloss finish has natural slip resistance. Minor scratch marks can be removed with gentle metal polishes, such as Brasso.


Waste Outlet: The reinforced waste outlet is suitable for 40mm diameter standard waste assembly (not supplied).

Bath Capacity: Urbane II 1500 Corner (with no overflow) - 265 litres; Urbane II 1500 Corner (with overflow) - 220 litres; Urbane II 1700 Corner (with no overflow) - 320 litres; Urbane II 1700 Corner (with overflow) - 265 litres.


Installation: The bath is suitable for back-to-corner bath installations. Refer to installation instruction for further installation information.

Colours: White only.


Flexible Connector Installation

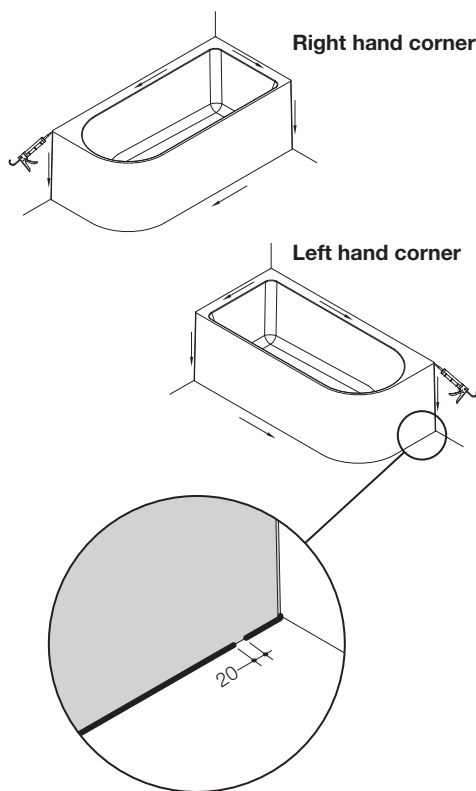

Apply silicone around the bath base surrounding, leaving a 20mm gap in an inconspicuous position

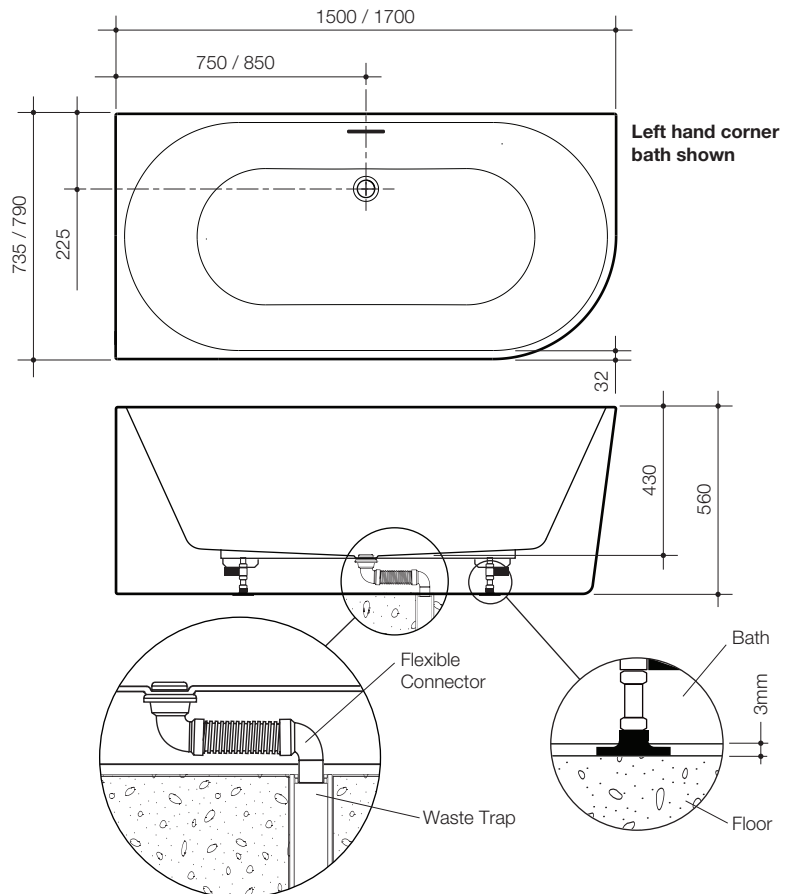

Foot Installation to Footlocker

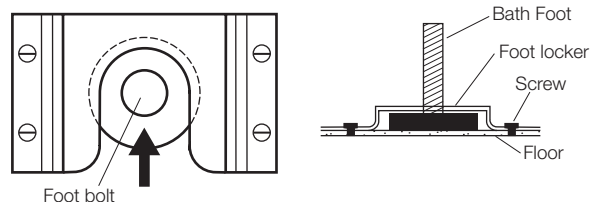

Slide the bath into position for the back feet to glide under and into the footlockers. Make sure that the flexible connector is not kinked upward upon installation, as this will result in drainage issues.

All dimensions are in millimetres and are subject to normal manufacturing variations. Caroma pursues a policy of continuing improvement in design and performance of its products. The right is therefore reserved to vary specifications without notice.