

PLUMBERS INSTALLATION INSTRUCTIONS**Important Information**

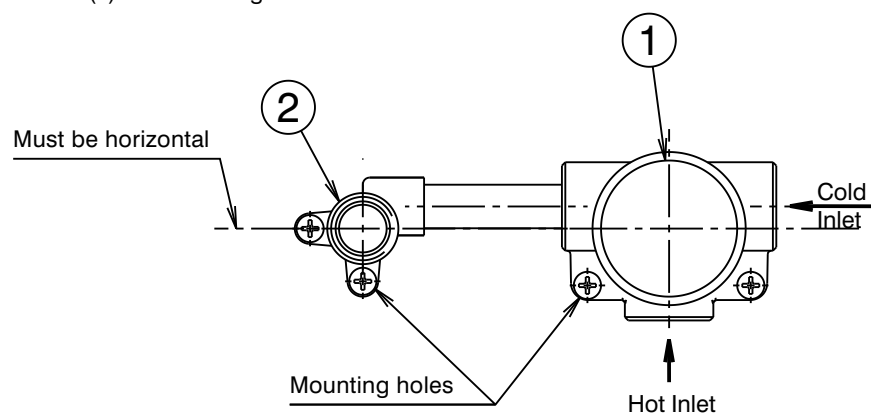
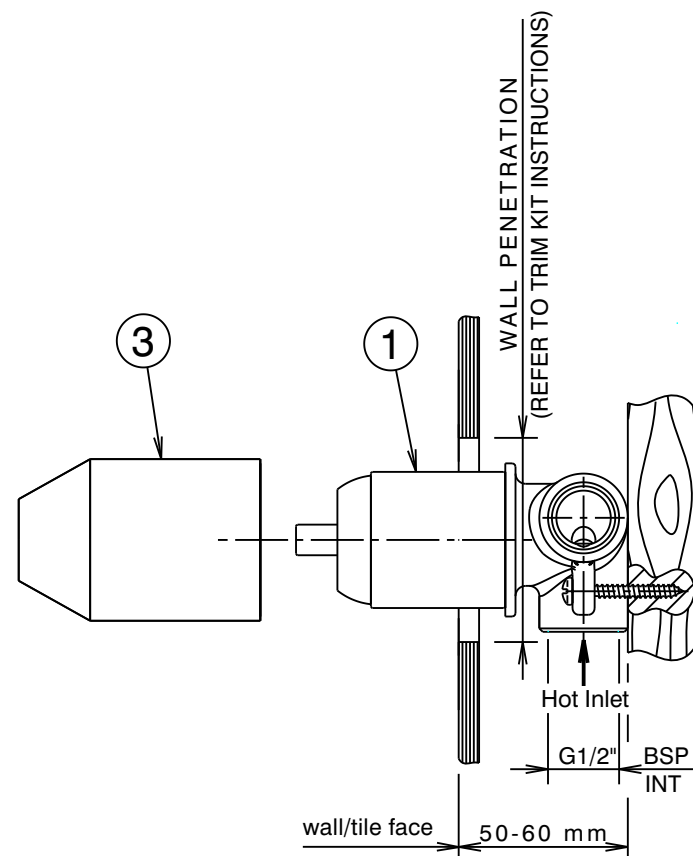
- * For warranty details refer to www.clark.com.au
- * Brazed connections should NOT be made directly onto the mixer, as excessive heat will cause permanent damage.
- * All pipework must be thoroughly flushed prior to installation.

Installation (Fig. 1&2)

- 1) Fit mixer body assembly (1+2) onto a suitable mounting plate or noggin in the wall and secure using screws through the holes in its base. When facing the mixer, the connections should be as follows (Fig.2):
Hot water inlet connection 'H' below mixer cartridge.
Cold water inlet connection 'C' to the right of mixer cartridge.
Mixed water outlet connection, to the left of mixer cartridge.
Check all connections for leaks and the tap for correct operation.

Important :

- * The front face of the mounting plate or noggin must be parallel to the finished wall/tile face.
- * The centreline through the wall mixer (1) & elbow (2) must be horizontal to ensure that the cover plate from the trim kit aligns with the finished wall tile joints.
- * To avoid damaging the decorative finish, do not remove the plastic protective sleeve (3) until installing the trim kit & outlet.

**Fig. 2****Fig. 1**