

stylus UNIVERSAL BATH/SHOWER MIXER - IN WALL BODY KIT

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * In-wall body kit & Trim kits are supplied in separate boxes.
For Trim kit installation, follow the instructions supplied with the suitable Trim kit.
- * Brazed connections should NOT be made directly onto the mixer, as excessive heat will cause permanent damage.
- * All pipework must be thoroughly flushed prior to installation.

Installation (Fig. 1)

- 1) Fit mixer body (1) onto a suitable mounting plate or noggin in the wall and secure using screws (not supplied) through the holes in the body. When facing the mixer, the connections should be as follows:
Hot water inlet connection 'H' to the left.
Cold water inlet connection 'C' to the right.
Mixed water outlet connection, vertically upwards.
Check all connections for leaks & tap for correct operation.

Important :

- * The front face of the mounting plate or noggin must be parallel to the finished wall/tile face.
- * To avoid damaging the decorative finish, do not remove the protective sleeve (2) until installation has been completed.

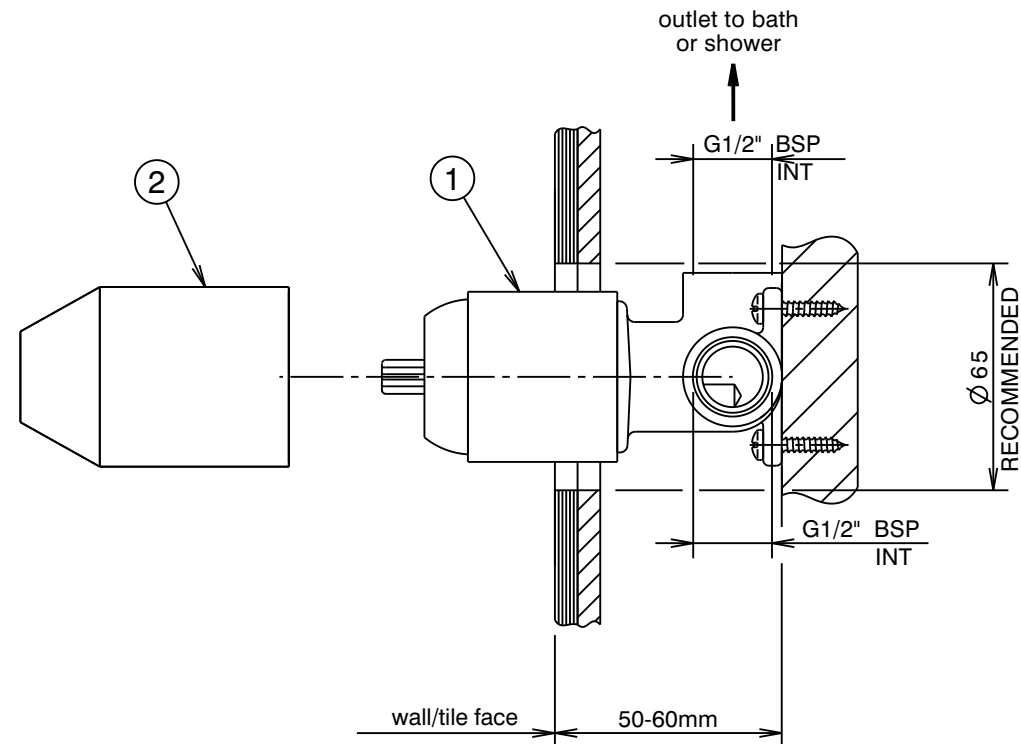


Fig. 1

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

Installation Requirements.

- The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant. (Ref AS3740)

