

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Distance between centres of mounting plate (1) (Fig.1) :
 - Towel Rail 600 (Single/Double) : 572mm±2
 - Towel Rail 900 (Single/Double) : 872mm±2
 - Hand Towel Rail : 272mm±2
 - Metal Shelf : 368mm±2
- * Centre to centre of mounting plate holes is 11mm (Fig. 1)
- * Before drilling check position of mounting plate (1) to ensure the flat surface of the fixing plates are orientated horizontally and pointing down (Fig. 1).
- * Do not use accessories for personal support.
- * Over time, the mounting screws which are used to install the product may be affected by exposure to water, which may cause the screws to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.
- * The high gloss surface finish is attractive, easy to clean and sanitary. We recommend that it be cleaned with soap and warm water only and then dried with a soft cloth. The product can be damaged by chemical or abrasive cleaners. If the product is accidentally splashed with cleaning chemicals, wipe immediately.

Installation

- 1) **Into Timber:**
When fixing directly to timber, a Ø3.5mm pilot hole should be drilled.
- 2) **Into Sheet Cladding:**
When fixing to timber framed walls which are clad only with sheet material, we recommend that at least one end of the fitting be positioned over a wall stud. Then use the screws (2) supplied to screw directly into the wall stud. If the other end does not line up with a stud, a butterfly toggle or gravity toggle (not supplied) should be used, through the sheet cladding. Your retailer can recommend a suitable type.
- 3) **Into Sheet Cladding which has been tiled:**
When fixing to timber framed walls which are clad with sheet material and then tiled, the plastic wall plugs (3) supplied can be used. We recommend that one end of the fitting be positioned over and directly screwed to a wall stud. To use the wall plug, drill a Ø8mm hole and fit.
- 4) **Into solid Walls:-(Brick, masonry blocks, concrete etc)**
When fixing to masonry walls, care should be taken to avoid drilling into mortar joints. Drill a Ø8mm hole, fit the wall plugs (3).
- 5) Drill holes to match mounting plate (1). Insert round end of wall plug (3) into drilled hole and tap until flush with surface. Fit the screws (2) through mounting plate (1) left and right holes before screwing them into the installed plastic plugs (3). Assemble accessories onto the installed mounting plate (1), then use allen key (5) to screw the M4 fixing screws (4) on the underside of the accessories until it is firmly held in position.


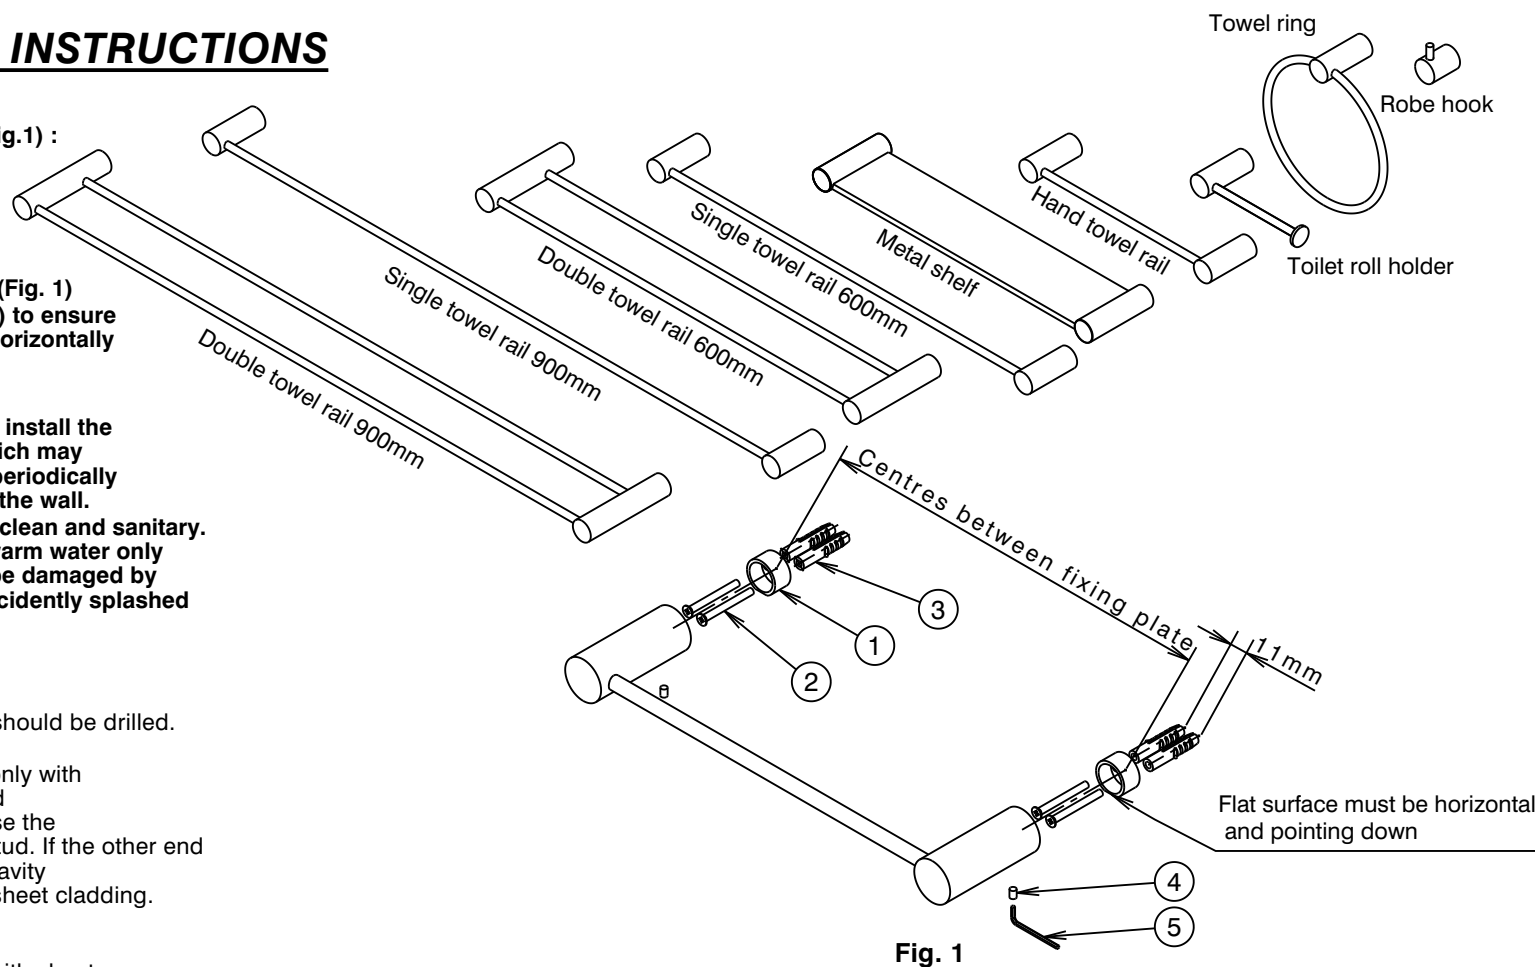


Fig. 1

Screw-on Instructions

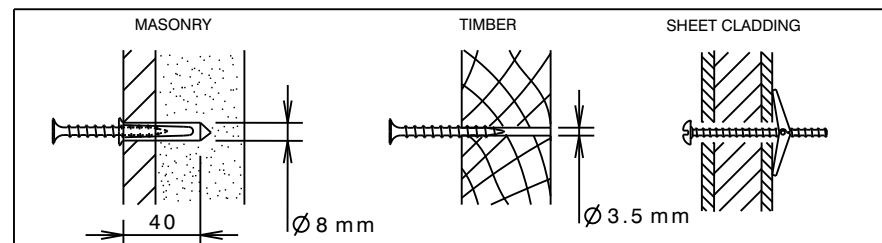

Use the screws and plugs for masonry, and screws only for timber. ButterflyToggle (not supplied) should be used for sheet cladding.