

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * To prevent drill from wandering on tiled surface it is recommended that masking tape be applied before drilling.
- * Do not use soap bottle holder for personal support.
- * Over time, the mounting screw which are to be used to install the product may be affected by exposure to water/moisture, this may cause the screw to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.

Installation

A) DETERMINE POSITION:

Position soap bottle holder (2) in desired location against wall or fixing surface. To ensure top plane of soap bottle holder is horizontal as shown in Fig. 2, then using a pencil to mark screw holes position.

B) SOAP BOTTLE HOLDER INSTALLATION:

Solid Walls: - (Brick, masonry blocks, concrete etc)

- 1) Drill two holes 6mm diameter, 40mm deep for wall plugs (1).
- 2) Insert rounded end of the wall plugs (1) into the drilled holes and tap until flush with the wall surface.
- 3) Pass the screws (4) through holes in cap nut (3) before inserting into the wall plugs (1). Ensure orientation of soap bottle holder (2) is as shown in Fig.2, tighten screws (3).
- 4) Screw caps (5) onto cap nuts (3) and handtighten.

Untiled Cavity Walls: - (Plasterboard)

- 1) Determine a suitable position to attach the soap bottle holder (2) so that it can be fixed to a stud or noggin in the wall.
- 2) Ensure correct orientation of the soap bottle holder (2) is as shown in Fig. 2. Pass suitable screws (3) through the holes in cap nuts (3) and screw directly into stud or noggin.
- 3) Screw caps (5) onto cap nuts (3) and handtighten.

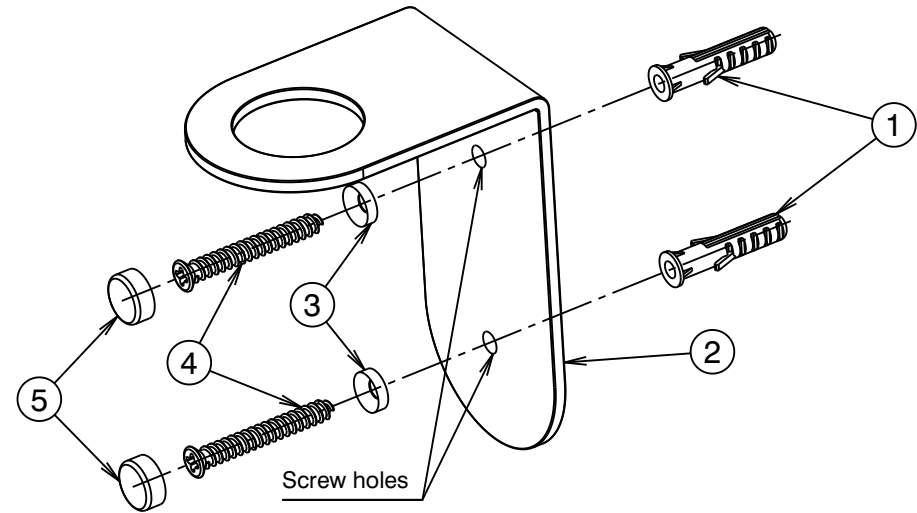


Fig. 1

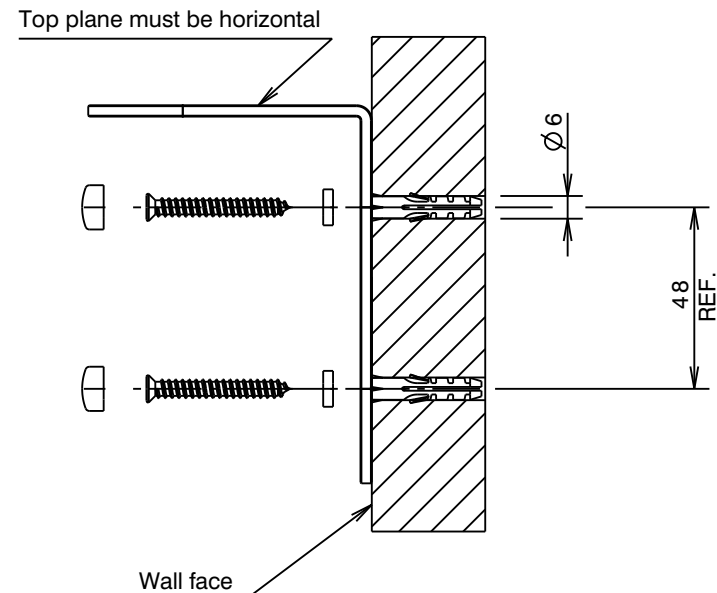


Fig. 2