

CAROMA

RIVIERE ACCESSORIES

INSTALLATION INSTRUCTIONS

Important Information:

- * Wall anchor (1) is only suitable for use in cavity walls with a tiled surface. If installing into a plasterboard cavity wall (untiled) it is recommended that the accessory be attached to the wall in line with a stud or noggin using suitable screws.
- * For cavity wall applications, the total wall thickness must be 8-18mm when using the supplied wall anchor.
- * Ensure hole centres are horizontal before drilling.
- * To prevent drill from wandering on tiled surface it is recommended that masking tape be applied before drilling.
- * Distance between centres of mounting blocks with holes:
 - For Hand Towel Rails : $250 \pm 1\text{mm}$
 - For 600mm Towel Rails : $600 \pm 1\text{mm}$
 - For 800mm Towel Rails : $800 \pm 1\text{mm}$
 - For accessory shelf : $375 \pm 1\text{mm}$
- * Over time, the mounting screws which are used to install the product may be affected by exposure to water, which may cause the screws to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.

Installation

A) DETERMINE WALL TYPE:


SOLID WALLS: -(Brick, masonry blocks, concrete etc)

- i) Drill holes 6 mm diameter, 40mm deep.
- ii) Insert rounded end of wall plugs (2) into drilled holes and push in until flush with the wall surface.
- iii) Fit screws (4) through holes in mounting blocks (3) before inserting into wall plugs (2). Ensure orientation of mounting block is as pictured (Detail A).
- iv) Tighten screws (4).
- v) For Towel Rails: Check alignment of both mounting blocks before tightening screws (4).

TILED CAVITY WALLS: -(Plasterboard/tile, fibre cement sheet/tile)

Note: Total wall thickness must be between 8-16mm when using the supplied wall anchor.

- i) Drill holes 7mm diameter.
- ii) Flatten barbs on head flange of wall anchors (1). Insert the wall anchors (1) into the drilled holes until the head flange is against the wall surface.
- iii) Fit the wall anchor M4 screws (5) through holes in mounting blocks (3) before screwing them into installed wall anchors. Ensure orientation of mounting block is as pictured (Detail A).
- iv) Tighten screws (5) - Do not overtighten.
- v) For Towel Rails: Check alignment of both mounting blocks before tightening screws (5).

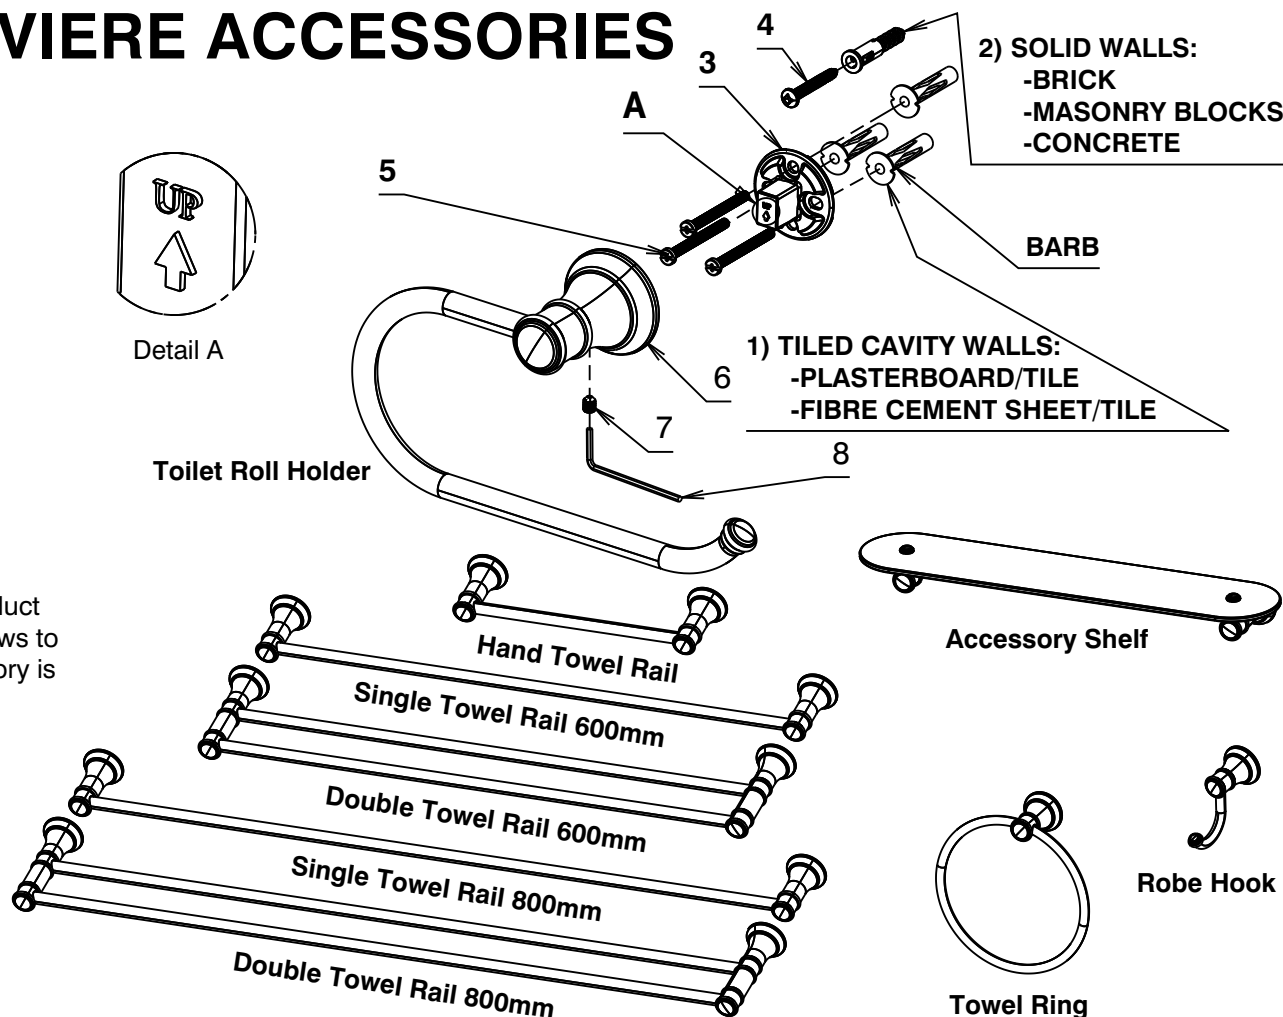

UNTILED CAVITY WALLS:-(Plasterboard)

- i) Determine a suitable position to attach mounting blocks (3) so that they can be fixed to a stud or noggin in the wall. Ensure orientation of mounting blocks is as pictured (Detail A).
- ii) Fit suitable screws (4) through holes in mounting blocks (3) and screw directly into stud or noggin. For Towel Rail: Check alignment of both mounting blocks before tightening screws.

- B) Loosen the fixing screws (7) on the accessory using the allen key (8) provided. Install accessory (6) onto mounting block (3), making sure that fixing screws (7) are located underneath as shown. With accessory resting securely against wall surface, tighten the fixing screws (7) using allen key (8) provided.