

MAKU ULTRA SHOWER MIXER INSTALLATION GUIDE

TECHNICAL SPECIFICATIONS

Operating Pressure:

Min 150kPa, Max 1000kPa.

Recommended 150-500kPa.

Recommended installation of a pressure limiting valve if supply exceeds 500kPa.

Operating Temperature: 70°C.

Cold: Min 5°C.

NB: New Zealand Building Code Clause G12 - Water Supplies specifies all outlets used primarily for personal hygiene shall deliver water at a safe temperature.

Inlet Connections:

All ½" BSP.



Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to www.methven.com or call Customer Service

New Zealand
0800 804 222

Australia
13 14 16

IMPORTANT


Please read all of the instructions before installation

Avoid restrictive piping, fittings or sharp angled bends when plumbing the mixer.

Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic headworks may occur.

All pipe-work must be thoroughly flushed prior to installation of the mixer. In-line filters must be installed on both hot and cold supplies to prevent foreign particles damaging the ceramic headworks.

NOTE: It is the responsibility of the installer to ensure a water proof seal is achieved between the faceplate and finished surface of the wall. Silicon should be used between the faceplate and the finished wall surface to ensure a seal is achieved.

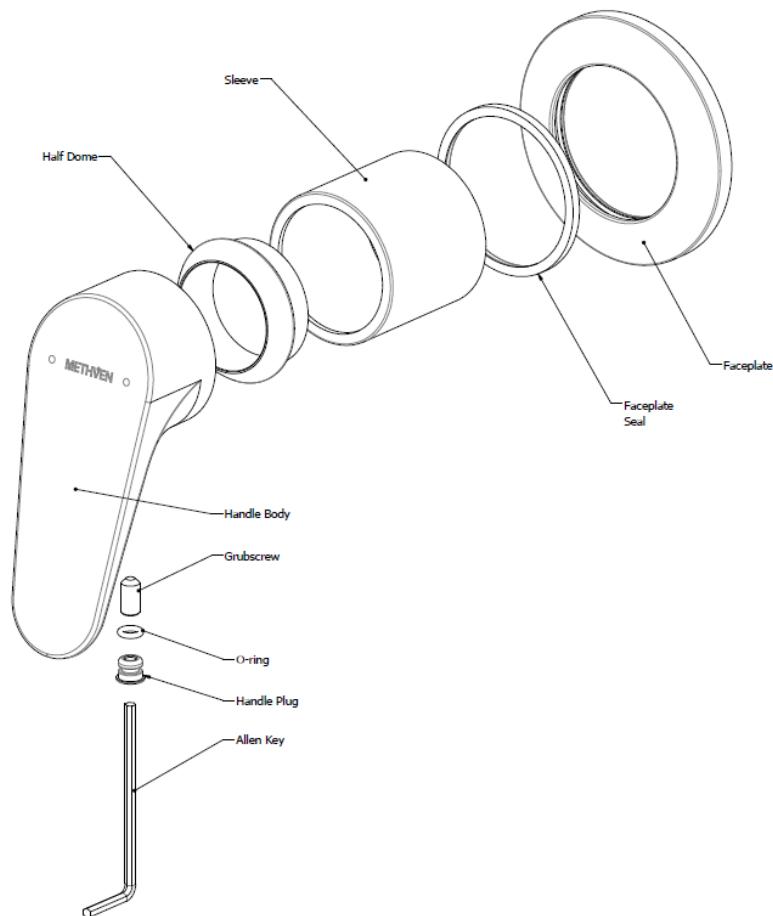

Installation

- Remove protection caps from the mixer body and make sure the external surface of the mixer body is clean.
- Apply lubricant to the o-ring on the mixer body, then slide the sleeve over the mixer body up to the shoulder.
- Screw half dome onto the sleeve and hand tighten to secure the sleeve.
- Apply a suitable clear sealant to the back of the faceplate leaving a small unsealed section at the bottom for drainage. Carefully slide the faceplate including the faceplate seal over the mixer body sleeve. TIP: wet faceplate seal before fitting over the sleeve.
- Press the faceplate firmly against the wall/tiled face, Wipe/clean any excess sealant from the trim surfaces & the wall/tile face.
- Fit Lever Handle taking care that it is pushed fully onto the cartridge stem, then tighten grub screw using the 2.5mm Allen Key. **DO NOT OVERTIGHTEN.**
- Fit plug taking care not to damage the decorative finish.
- Turn on the Hot and Cold water supply and check mixer operation.

