CAROMA

Contura II

Ceramic Under-Counter Vanity Basin

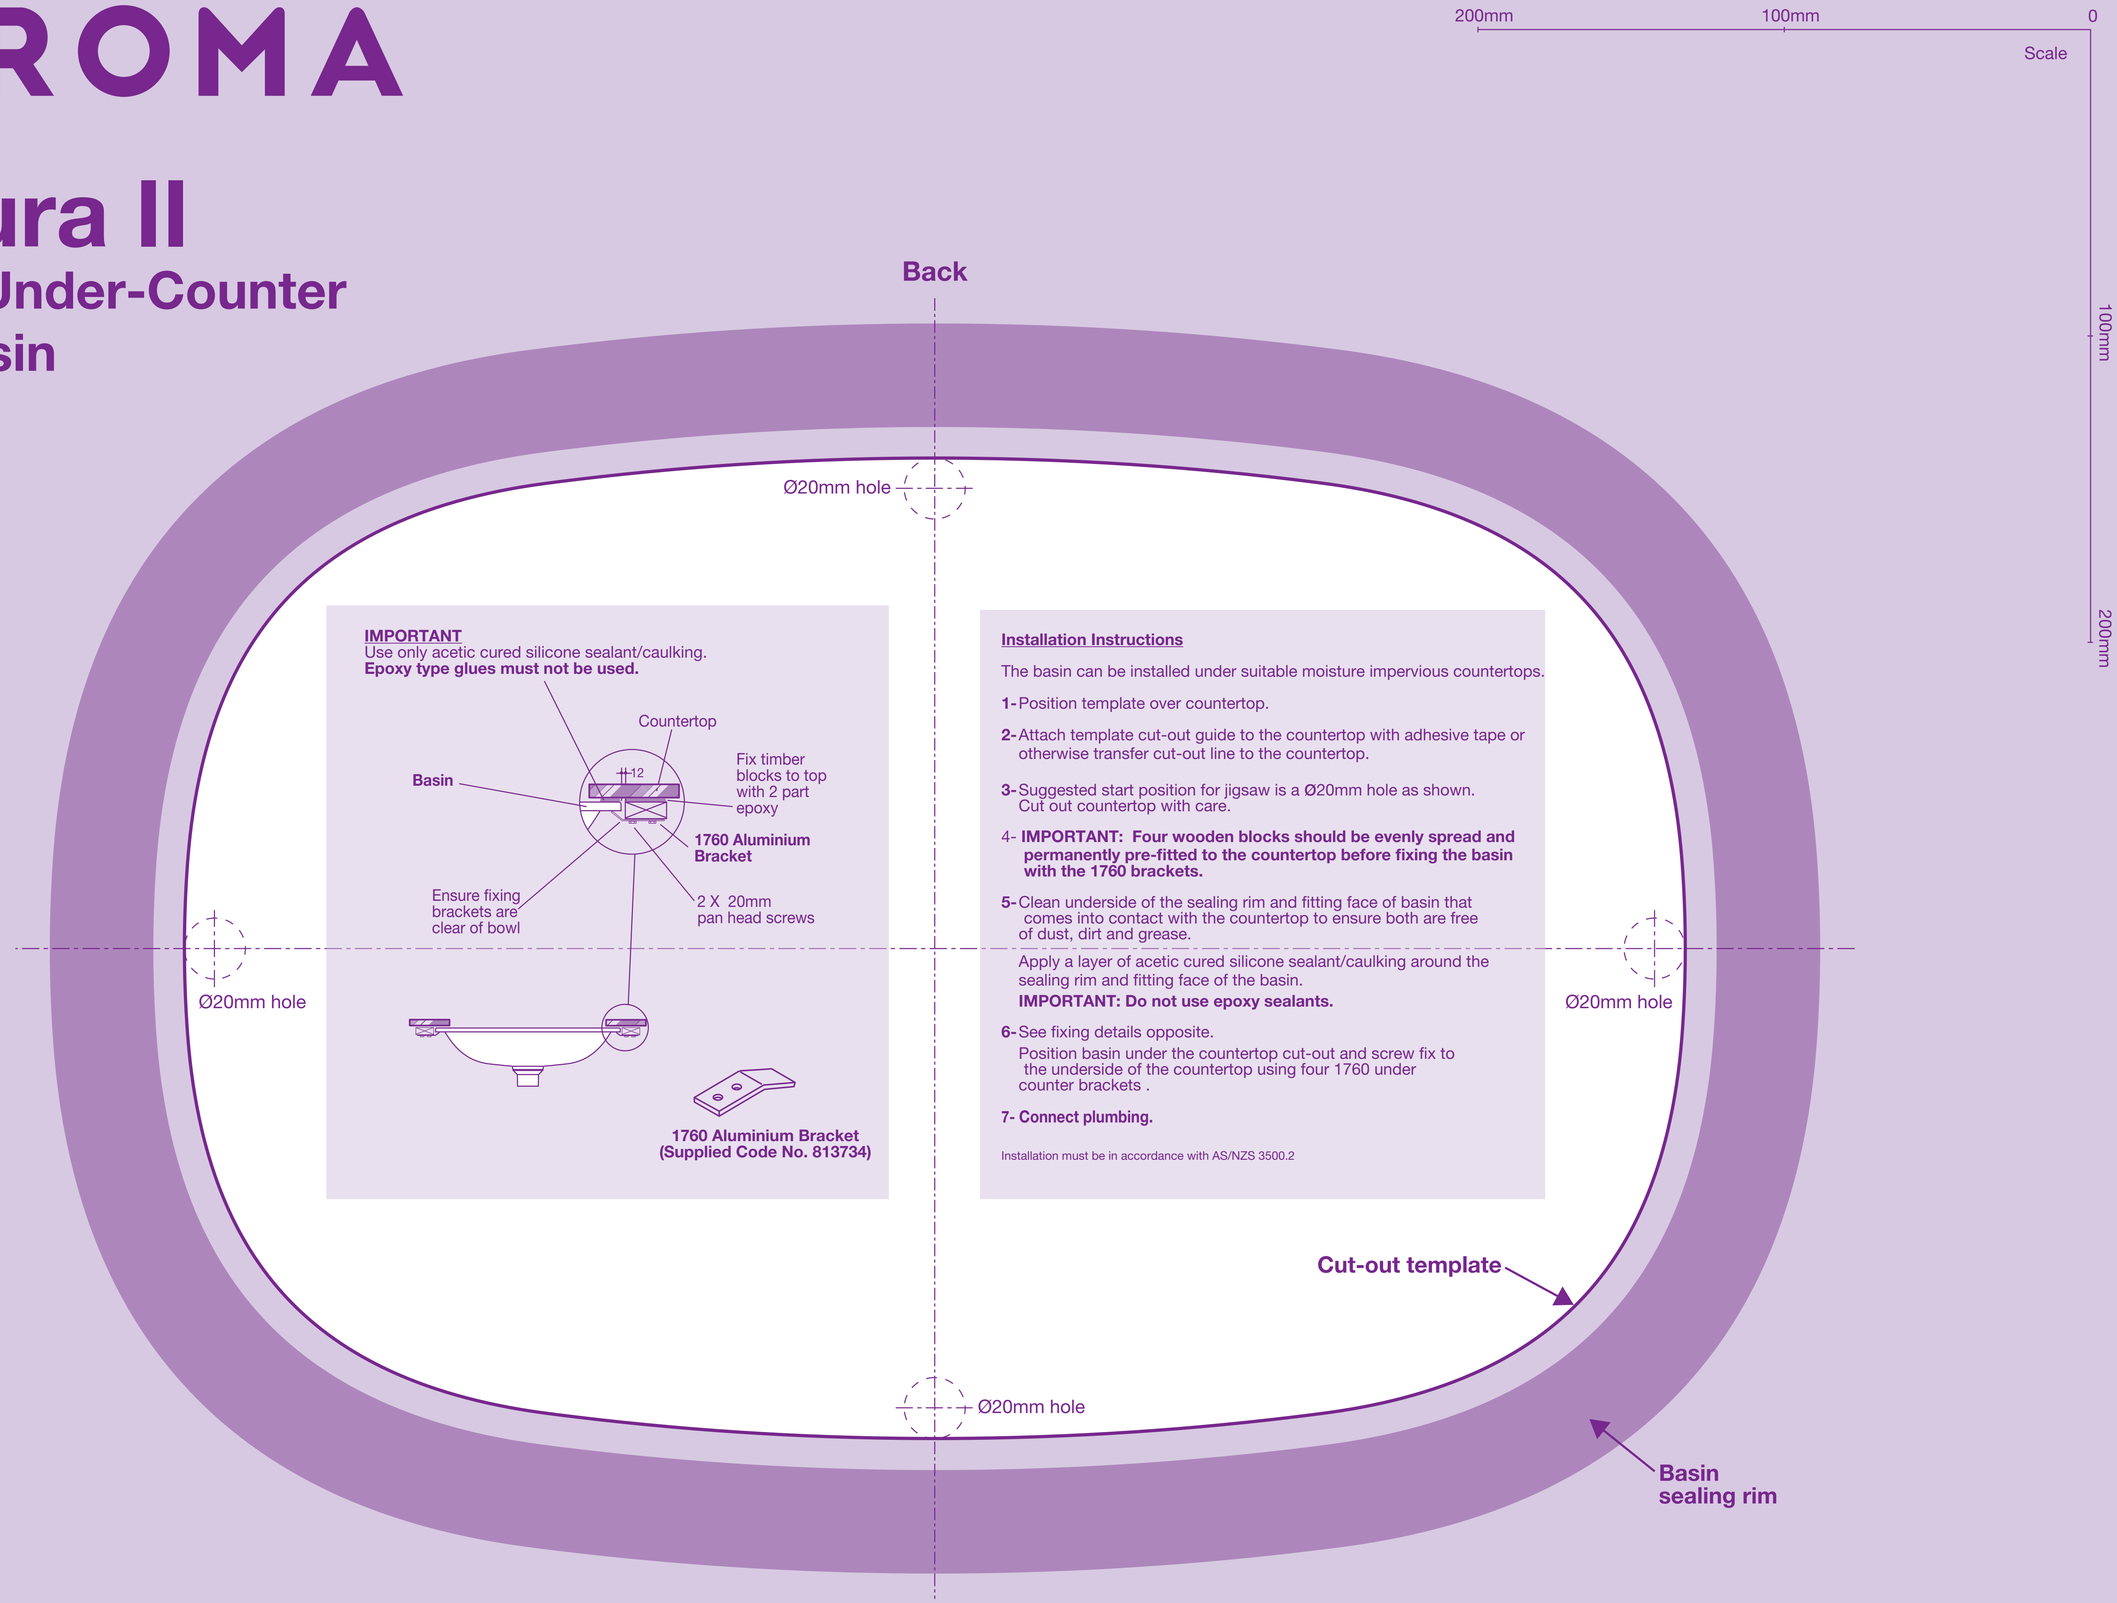

IMPORTANT
Use only acetic cured silicone sealant/caulking.
Epoxy type glues must not be used.

1760 Aluminium Bracket (Supplied Code No. 813734)

Installation Instructions

The basin can be installed under suitable moisture impervious countertops.

1- Position template over countertop.

2- Attach template cut-out guide to the countertop with adhesive tape or otherwise transfer cut-out line to the countertop.

3- Suggested start position for jigsaw is a Ø20mm hole as shown. Cut out countertop with care.

4- **IMPORTANT: Four wooden blocks should be evenly spread and permanently pre-fitted to the countertop before fixing the basin with the 1760 brackets.**

5- Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and grease.

Apply a layer of acetic cured silicone sealant/caulking around the sealing rim and fitting face of the basin.
IMPORTANT: Do not use epoxy sealants.

6- See fixing details opposite.
Position basin under the countertop cut-out and screw fix to the underside of the countertop using four 1760 under counter brackets .

7- Connect plumbing.

Installation must be in accordance with AS/NZS 3500.2

T00020TMC

Date: 06.10.23
Issue No: 0