

Care 610 Cleanflush[™]

Sanitary Facilities - Access and Mobility 4.5/3 litre Toilet Suite









The Care 610 Cleanflush™ connector suite offers an elevated pan for easy transfer on and off the seat for those with limited mobility. The added hygiene of the Cleanflush® rimless flushing system makes the range ideal for hospital, aged care and commercial applications where the absolute highest of hygiene and rapid cleaning are required. The versatility of the Care 610 pan makes it suitable for use by both ambulant persons with disabilities and wheel-chair users, including commode chairs.

Date

Further reference must be made to AS 1428.1-2009 with current amendments

to determine circulation space, grab rail and installation requirements. The dimensions in this sheet may change with amendments to the standard.

Care 610 Cleanflush™ 4.5 litre full flush washdown rimless pan with a fully glazed trap. Pan:

Traps: S or P-trap unvented only.

Inlet: 50mm back inlet 40mm key seal is available if required.

Cistern: Profile Smartflush Cistern (wall fix version) - has a free fitting lid and is suitable for domestic and light commercial applications

Important: Working pressure minimum 30kPa to maximum 1000kPa flow

pressure. Rain water tank compliant. **Buttons:**

Round Care Button - Chrome (supplied). Other button options sold separately. See

Section 4.01 for further details Inlet and

Standard Bottom Entry Cistern – available as right hand inlet which is interchangeable and incorporates Quietflow inlet valve. Internal overflow only. Important: Working pressure minimum 30kPa to maximum 1000kPa flow

pressure. Rain water tank compliant.

Caravelle Care seat supplied, available in Caroma White (W), Sorrento Blue (SB) and Anthracite Grey (AG). See Section 3 SEATS for further details. Reference to AS1428.1-Seats:

2009 must be made in regards to luminance contrast when selecting the seat colour. For wheel chair access the installed pan must be a minimum of 800 ± 10 mm from the

front of the pan to the finished wall and provide a seat height of 460 to 480mm. The

projection requirements for people with ambulant disabilities is 610 to 660mm (refer to

page 13.14)

Position of The underside of the cistern must be 600mm minimum from the finished floor. The the Cistern: push button height must be no greater than 1100mm from the finished floor.

Colours: White only.

Installation: The installation of the toilet suite shall be in accordance with the normal minimum

drainline grade requirements in AS/NZS 3500.2.

Dimensions: All dimensions are in millimetres and are subject to normal manufacturing variations. Caroma pursues a policy of continuing improvement in design and performance of its


products. The right is therefore reserved to vary specifications without notice.

Note: The projection requirements detailed on this illustration are for wheel chair access only. The projection requirements for people with ambulant disabilities is 610 to 660mm.

All height dimensions to underside of pan, make allowance for mortar bedding.

Mortar bedding: The pan should be fixed to the floor with a sand cement mixture of 3:1 to a depth of 60mm. When bedded the back of the foot of the pan should be approximately 10mm above the finished floor.

Screw fixing: The pan should be bedded with an acetic cured silicone sealant and fixed with corrosion resistant screws and pan guard washers. Use Caroma pan fixing kit. Code No.601150.

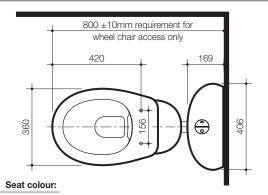

Care 610 Cleanflush **Toilet Suites:** with Caravelle Care Seat


Overflow:

Position of

the Pan:

Single Flap	S trap	982931	W, SB or AG
	P trap	982941	W, SB or AG
Single Flap, Backrest Curved Arm	S trap	982931B	W, SB or AG
Included	P trap	982941B	W, SB or AG

Code No.

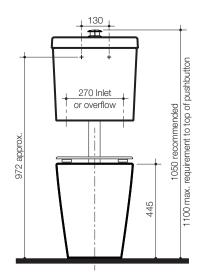

Backrest (refer	to page 13.02)		400	
	Flush pipe extension		4	
	Code No.104242			
	or Extended	7 4		
	Mid/Low flush pipe			+
	Code No.405061 ~	_ 194		+
+	L	111		
. L		}		
460 min 480 max. Caravelle Care seat	1			et
00 8	1	\	029	Bottom inlet
Ca	<u>'</u>	_\	6	호
<u> </u>		I	L .	8d
₩ Wel <u>⊒</u> i		.i.\		
8 8	[] L	ļi	185	
4 0	0	į .	_	
+			▋──┼─	+
	500	000		
	500	300	-	
		recommended		

Inlet 55

^{*} Reference must be made to the AS 1428.1-2009 Amd 1 to confirm installation requirements.