

### PLUMBERS INSTALLATION INSTRUCTIONS

#### Important Information

- \* Not suitable for gravity feed systems.
- \* HOT & COLD WATER INLET PRESSURES MUST BE EQUAL.
- \* Wall basin outlet is fitted with a flow regulated aerator insert. This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products.
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water. Note: Aerator insert must be retightened to prevent removal by hand.

#### Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.  
**Important:** Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Ensure the 'O'Ring (2) is fitted to the groove in the cover plate (3), as shown. Slide the cover plate (3), with 'O'Ring (4) in position as shown, onto the basin outlet (5). Screw the inlet of the basin outlet (5) onto the threaded nipple (1) until its base is adjacent to the wall surface and the aerator insert is pointing down as shown, taking care not to damage the decorative finish. DO NOT OVERTIGHTEN.
- 3) Slide the cover plate (3) along the basin outlet (5) until the 'O'Ring (2) has contacted the wall surface.

#### Removing Aerator Insert

- 1) Aerator insert (6) can be removed with spanner (7) provided.
- 2) Deposits of lime can be removed by washing in a vinegar solution.
- 3) When replacing aerator insert (6), be careful that thread is engaged correctly and 'O' ring is not damaged as it enters the bore. Tighten securely (to prevent removal by hand) using spanner (7).

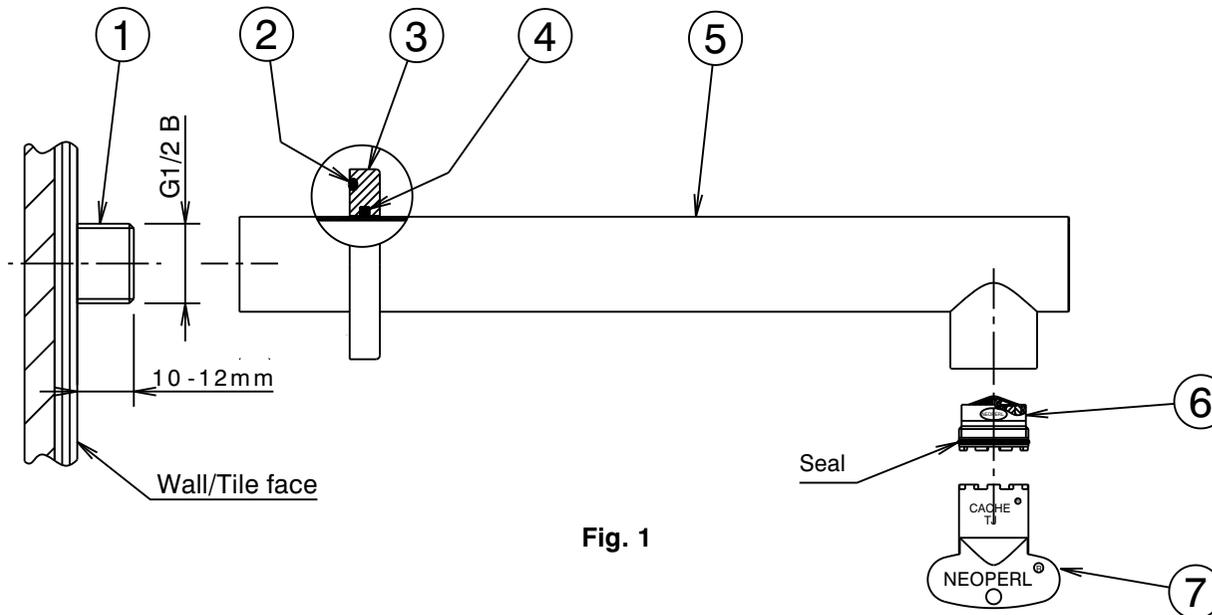


Fig. 1

#### **IMPORTANT**

##### Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa  
New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

##### Installation Requirements.

- The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant. (Ref AS3740)